

YAKCLEAN JQ-06

YAKCLEAN Electric Spin Scrubber Portable Steamer

Model: JQ-06

1. INTRODUCTION

Thank you for choosing the YAKCLEAN Electric Spin Scrubber Portable Steamer. This device combines the power of high-temperature steam with an electric scrubbing brush to provide efficient and chemical-free cleaning for various surfaces in your home and vehicle. Please read this manual thoroughly before operation to ensure safe and optimal use.



Image 1.1: The YAKCLEAN Electric Spin Scrubber Portable Steamer offers efficient and deep cleaning compared to manual methods.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances, especially those involving heat and water. Failure to follow these instructions may result in fire, electric shock, or serious injury.

- Do not direct steam at people, pets, or electrical appliances.
- Keep the appliance out of reach of children.
- Use only clean tap water in the water tank. Do not add detergents, perfumes, or other chemicals.
- Ensure the power cord and steam hose are not damaged before use.
- Always unplug the appliance before filling or emptying the water tank, or when attaching/detaching accessories.

- Allow the appliance to cool completely before storing.
- Do not immerse the main unit in water or other liquids.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Main Steam Cleaner Unit with Electric Spin Scrubber Handle
- Water Tank (1.25 Liters capacity)
- Steam Hose (6.64 feet)
- Power Cord (6.64 feet)
- Big Flat Brush
- Fiber Brush
- Sponge Brush
- Window Scraper
- Nylon Brush
- Surface Scraper
- Fabric Steam Tool
- Brass Brush
- Pressure Nozzle
- Steel Wire Brush
- Cleaning Cloths
- Protective Gloves



Image 3.1: All 16 multi-purpose accessories included with the steam cleaner.

4. PRODUCT OVERVIEW

The YAKCLEAN Electric Spin Scrubber Portable Steamer is designed for versatile cleaning. It features a compact main unit with a 1.25-liter water tank, connected to an ergonomic handheld scrubber via a 6.64-foot steam hose. The handheld unit integrates an electric spin scrubber with a 360-degree rotating brush and touch controls for steam intensity and scrubber speed. A 6.64-foot power cord provides ample reach.

Convenient and Effortless Design

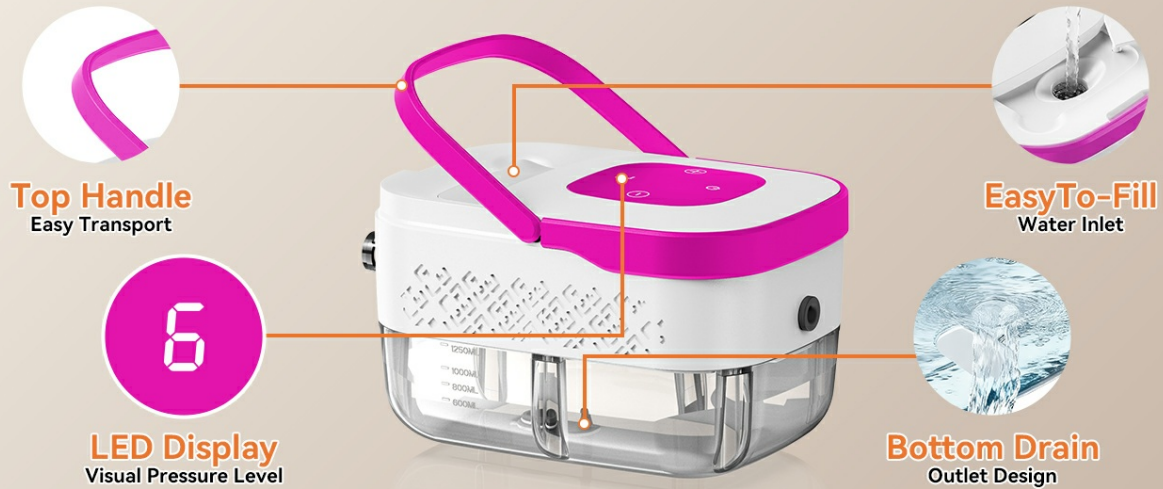


Image 4.1: The steam cleaner offers extended reach with its hose and power cord.



Image 4.2: Key features include rapid heating, a large water tank, and dual-speed scrubbing.

5. SETUP

1. **Fill Water Tank:** Ensure the device is powered off and unplugged. Open the water inlet cap on the main unit. Fill the 1.25-liter water tank with clean tap water, up to the maximum fill line. Do not overfill. Securely close the water inlet cap.
2. **Attach Accessories:** Select the appropriate cleaning brush or nozzle for your task. Align the accessory with the attachment point on the handheld unit and twist or push until it clicks securely into place.
3. **Connect Power:** Plug the power cord into a suitable electrical outlet.



Image 5.1: Step-by-step guide for setting up and using the steam cleaner.

6. OPERATING INSTRUCTIONS

6.1 Power On and Heating

1. Press the power button on the handheld unit. The device will begin heating.
2. Wait approximately 15 seconds for the steam to be ready. The indicator light will change, or the device will signal readiness.

6.2 Adjusting Steam Level

The steam cleaner features 6 adjustable steam intensity settings.

- Press the "+" button to increase the steam level.
- Press the "-" button to decrease the steam level.

6.3 Using the Electric Spin Scrubber

The electric spin scrubber has two speeds: low (300 RPM) and high (500 RPM).

- When the brush is started, the default speed is low.
- Long press the speed button for 2 seconds to switch to high speed.



Image 6.1: The 360-degree rotating brush effectively cleans various surfaces.

6.4 General Cleaning Tips

- For stubborn grime, allow the steam to penetrate the surface for a few seconds before scrubbing.
- Use the appropriate accessory for the surface being cleaned. For example, the brass brush for tough stains on durable surfaces, and the fabric steam tool for upholstery.
- Wipe away loosened dirt and moisture with a clean cloth after steaming.

Video 6.2: Demonstration of the YAKCLEAN Electric Spin Scrubber Portable Steamer in various cleaning scenarios.

Video 6.3: Overview of the YAKCLEAN Steam Cleaner and its electric spin scrubber functionality.

7. MAINTENANCE

7.1 After Each Use

1. **Power Off and Unplug:** Turn off the device and unplug it from the power outlet.
2. **Cool Down:** Allow the appliance to cool down completely.
3. **Drain Water Tank:** Once cooled, carefully drain any remaining water from the tank using the bottom drain outlet design.
4. **Clean Accessories:** Remove and clean all used accessories. Rinse them with water and allow them to air dry.

7.2 Storage

Store the steam cleaner and its accessories in a dry, cool place, away from direct sunlight and out of reach of children.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam produced	Water tank empty; Device not heated sufficiently; Power issue	Fill water tank; Wait 15 seconds for heating; Check power connection
Low steam pressure	Low water level; Steam level set too low	Refill water tank; Increase steam level using "+" button
Electric scrubber not spinning	Not powered on; Obstruction in brush; Battery low (if applicable, though this model is corded)	Ensure device is powered on; Check for and remove any obstructions; Ensure continuous power supply
Water leaking	Water tank cap not secured; Accessory not properly attached	Ensure water tank cap is tightly closed; Re-attach accessory securely

If you encounter issues not listed here, please contact customer support.

9. SPECIFICATIONS

- **Brand:** YAKCLEAN
- **Model Name:** Electric Steam Cleaner
- **Model Number:** JQ-06
- **Wattage:** 1500 watts
- **Form Factor:** Handheld
- **Heat Time:** 15 seconds

- **Maximum Temperature:** 221°F (105°C)
- **Tank Volume:** 1.25 liters
- **Steam Pressure:** 3 bar
- **Electric Scrubber Speeds:** Low (300 RPM), High (500 RPM)
- **Steam Hose Length:** 6.64 feet
- **Power Cord Length:** 6.64 feet
- **Special Features:** Motorized Brush Roll, 6-level adjustable touch control

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact YAKCLEAN customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question