

Genérico GN-406

Genérico GN-406 MP3 Player User Manual

Model: GN-406 | Brand: Genérico

INTRODUCTION

Thank you for choosing the Genérico GN-406 MP3 Player. This portable device features a 2.4-inch touch screen, Bluetooth 5.0 connectivity, and Hi-Fi audio quality. It supports various functions including music playback, FM radio, voice recording, video viewing, and photo display. This manual provides essential information for the proper setup, operation, and maintenance of your device.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB cable to the device's charging port and to a USB power adapter or a computer's USB port. The device features a 250mAh lithium-ion battery and typically charges completely in approximately 2 hours.

2. Inserting a TF (MicroSD) Card

The device supports TF cards up to 128GB (not included) for expanded storage. Locate the TF card slot on the side of the player. Gently insert the TF card into the slot until it clicks into place. Ensure the card is oriented correctly to avoid damage.

EXPANSÃO MÁXIMA DE MEMÓRIA

128G (EXCLUINDO CARTÃO TF)



Image: Illustrates the insertion of a MicroSD card into the MP3 player's dedicated slot, highlighting the memory expansion capability.

3. Powering On/Off

To power on the device, press and hold the power button located on the side until the screen illuminates. To power off, press and hold the power button again until the shutdown prompt appears, then confirm.

OPERATING INSTRUCTIONS

1. Basic Navigation (Touch Screen)

The GN-406 features a 2.4-inch capacitive touch screen (320x240 resolution) for intuitive navigation. Tap icons to select functions, swipe to scroll through lists, and use the back button (if present) or swipe gestures to return to previous screens.

QUALIDADE DE SOM HI-FI

DSP DE CHIP DE ÁUDIO APRIMORADO REDUZ A DISTORÇÃO
DECODIFICADOR DE PORTA DUPLA



Image: Displays the MP3 player's main menu interface with various function icons, including music, video, recording, FM radio, e-book reader, photo viewer, Bluetooth, settings, and file folder.

2. Music Playback

Tap the "Music" icon on the main menu. Browse your music library by artist, album, genre, or folder. The player supports MP3 and WAV audio formats. Select a track to begin playback. Use the on-screen controls for play/pause, skip, and volume adjustment. The device offers Hi-Fi sound quality with an enhanced audio DSP chip and dual DAC decoder for reduced distortion.

APLICATIVO DE MÚSICA PODEROSO

FORMATOS DE ÁUDIO SOPORTADOS: MP3, WAV



Image: Shows the MP3 player's music playback screen, featuring song information and lyrics, with a user enjoying audio through wireless earbuds.

3. Bluetooth Connection

To connect to Bluetooth headphones or speakers, tap the "Bluetooth" icon in the main menu or navigate to "Settings" and select "Bluetooth." Turn on Bluetooth, and the player will scan for available devices. Select your desired device from the list to pair. **Note:** This device's Bluetooth 5.0 is for audio output only and does not support file transfer with mobile phones or computers.

PLAYMAN FM DE LONGO PRAZO

SUPORTA RECEPÇÃO E TRANSMISSÃO COMPATÍVEIS
COM BLUETOOTH

 **250MA**
capacidade da bateria

 **5.0 BLUETOOTH**
Compatível com transmissão bidirecional

 **2 HORAS**
Carregamento completo



Image: Depicts the MP3 player's interface during music playback, highlighting battery capacity (250mAh), Bluetooth 5.0 connectivity, and a 2-hour full charging time.

4. FM Radio

Tap the "FM Radio" icon. You can perform an automatic scan for stations or manually tune to a specific frequency. Ensure headphones are connected as they often act as the antenna for FM reception.

5. Voice Recording

Select the "Recording" icon. Tap to start and stop recordings. Recordings are saved in MP3 or WAV format. You can access and play back your recordings from the device's file manager.

6. Video Playback and Photo Viewing

Tap the "Video" or "Photo" icons to access your media files. The player supports video and photo display on its 320x240 resolution screen. Ensure video files are in a compatible format for smooth playback.

7. E-book Reading

The device supports reading e-books in TXT format. Tap the "Read" icon to open your e-book library and select a file to read.

8. Parental Controls

The device includes parental control features. Navigate to "Settings" to set sleep timers and screen time

limits, which can be useful for managing usage by children.

CONTROLES PARENTAIS

SE NECESSÁRIO, DEFINA
LIMITES DE TEMPO DE
SONO E DE TELA.



05:20

música vídeo gravação

FM rádio ler foto

Bluetooth configurar pasta

MP3/WAV
formato de gravação

320X240
resolução da tela

Image: Features the MP3 player's menu, emphasizing parental control options, MP3/WAV recording format, and the 320x240 screen resolution, with a parent and child in the background.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Impact:** Protect the device from drops and impacts, which can damage internal components or the screen.

TROUBLESHOOTING

Device will not turn on:

Ensure the battery is charged. Connect the device to a power source and try again. If the issue persists, perform a hard reset by pressing and holding the power button for 10-15 seconds.

No sound during playback:

Check the volume level. Ensure headphones are properly connected or that your Bluetooth audio device is paired and connected. Test with different headphones or speakers if possible.

Bluetooth device not connecting:

Ensure Bluetooth is enabled on both the MP3 player and the audio device. Place devices close to each other. Try unpairing and re-pairing the device. Remember, the player's Bluetooth is for audio output only.

TF card not recognized:

Ensure the TF card is inserted correctly and fully. Try reinserting the card. Check if the card is damaged or formatted incorrectly. The player supports cards up to 128GB.

Screen is unresponsive:

Restart the device. If the issue continues, ensure the screen is clean and dry. Avoid using sharp objects on the touch screen.

SPECIFICATIONS

Feature	Detail
Brand	Genérico
Model Name	GN-406
Screen Size	2.4 Inches
Screen Technology	LCD, Capacitive Touch Screen
Connectivity Technology	Bluetooth 5.0, Micro SD, USB
Memory Storage Capacity	Supports up to 128 GB (TF card not included)
Compatible Devices	Wireless Headphones
Supported Media Types	FM Radio, Photo, MP3, Video, WAV, TXT (E-book)
Special Features	Bluetooth 5.0, Enhanced DSP Audio Chip, Dual DAC Decoder, Hi-Fi Sound Quality, DSD Support, Voice Recorder, Parental Controls
Item Weight	500 Grams (Note: Product description states 30g, this might be shipping weight)
Dimensions (L x W x H)	100 x 20 x 85 millimeters
Battery Life (Music Playback)	Up to 3 hours (with headphones)
Battery Life (FM Radio)	Up to 3 hours
Standby Time	20 hours

Charging Time	Approx. 2 hours via USB
---------------	-------------------------

WARRANTY AND SUPPORT

This product comes with a **30-day warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support or warranty inquiries, please contact your retailer or the manufacturer directly. Refer to the packaging or purchase documentation for specific contact information.

© 2026 Genérico. All rights reserved.