

Aoxun G30069-1313BW-AX1

Aoxun 13' x 13' Outdoor Wood Octagon Gazebo Instruction Manual

Model: G30069-1313BW-AX1

INTRODUCTION

Welcome to your new Aoxun 13' x 13' Outdoor Wood Octagon Gazebo. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and enjoyable use of your gazebo. Please read all instructions carefully before beginning assembly or use.

SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Ensure all components are securely fastened before use.
- Do not hang items exceeding 44 lbs (20 kg) on the ceiling hooks.
- Anchor the gazebo securely to the ground or deck to withstand wind and snow loads.
- Keep children and pets away from the assembly area.
- Do not use open flames or heating devices directly under the gazebo roof.
- Periodically inspect the structure for any signs of wear or damage and address them promptly.

PACKAGE CONTENTS

Your Aoxun Octagon Gazebo is shipped in multiple boxes. Please verify all parts are present against the included parts list before beginning assembly. If any parts are missing or damaged, contact customer support immediately.

SETUP AND ASSEMBLY

Assembly typically requires two people and can take several hours. Follow the pictorial instructions provided in the separate assembly guide for detailed steps.

Key Assembly Steps:

1. Unpack all components and lay them out. Sort fasteners by type for easy access.

2. Assemble the widened cedar wood frame columns (4.7"x4.7").
3. Construct the octagonal roof structure, ensuring the dual galvanized steel cover is correctly aligned for airflow and drainage.
4. Securely attach the roof to the frame.
5. Install the reinforced anchoring bases to the bottom of each column.
6. Anchor the entire structure to a stable surface (ground or deck) using expansion bolts for optimal stability against wind and snow.



Image: Fully assembled Aoxun Octagon Gazebo in a garden. This image illustrates the complete structure after successful assembly.

High-quality Cedar Wood Frame Structure

Provides stronger strength and stability for the structure



Image: High-quality cedar wood frame structure. The widened 4.7"x4.7" columns provide strength and stability.

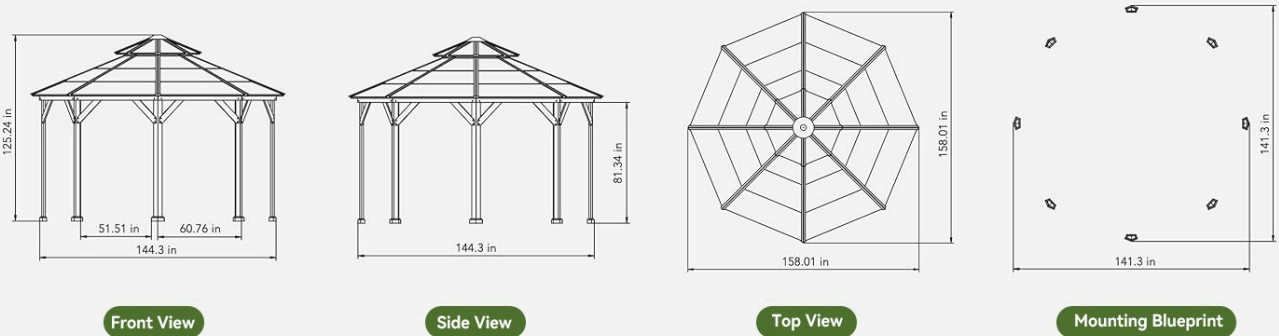


Image: Technical diagrams illustrating the front, side, and top views, along with the mounting blueprint for the gazebo.

OPERATING INSTRUCTIONS

The Aoxun Octagon Gazebo is designed for year-round outdoor use, providing shade and shelter. Its features are optimized for comfort and durability.

Key Features:

- **Dual Roof Design:** The innovative double roof promotes air circulation, keeping the area cool. Its sloped design facilitates efficient rain and snow runoff.
- **Ceiling Hooks:** Utilize the integrated ceiling hooks for hanging fans, lights, or decorative items. Ensure the total weight does not exceed 44 lbs (20 kg).
- **All-Weather Suitability:** The gazebo is designed to withstand 15 inches of snow loading depth and wind resistance up to 9 (47-54 mph) when properly anchored.



Image: Detail of the double galvanized steel cover. This design promotes airflow and protects against UV rays.

Octagonal Roof

Unique geometric aesthetic design



Image: The gazebo's performance in various weather conditions: blocking UV rays in sun, draining rain, and bearing snow loads.



Slope Drainage

Quick drainage prevents rainwater accumulation



Image: Multi-purpose hook on the gazebo ceiling, suitable for hanging fans, chandeliers, or decorations.

MAINTENANCE

- **Wood Frame:** Regularly inspect the cedar wood frame for any signs of wear, cracking, or insect damage. Clean with a mild soap and water solution. Consider re-staining or sealing the wood periodically to maintain its appearance and prolong its lifespan, especially in harsh climates.
- **Steel Roof:** Inspect the galvanized steel roof for any debris, leaves, or signs of corrosion. Clean with water and a soft brush. Avoid abrasive cleaners.
- **Fasteners:** Periodically check all bolts, screws, and anchors to ensure they remain tight and secure. Tighten as necessary.
- **Snow Removal:** While designed for snow loading, heavy accumulation should be cleared from the roof to prevent excessive stress on the structure.

TROUBLESHOOTING

- **Gazebo feels unstable:** Ensure all anchoring bases are properly installed and secured to the ground or deck. Check all frame connections for tightness.
- **Water accumulation on roof:** The sloped roof is designed for drainage. Ensure no debris is blocking the runoff paths. Verify the roof panels are correctly installed and overlapping as per assembly instructions.
- **Wood discoloration or damage:** This can be due to weather exposure. Regular maintenance, including cleaning and re-sealing, can prevent this. For significant damage, contact customer support for replacement parts.

SPECIFICATIONS

Feature	Detail
Brand	Aoxun
Model Number	G30069-1313BW-AX1
Product Dimensions (L x W x H)	150"L x 150"W x 125"H (12.5 ft L x 12.5 ft W x 10.4 ft H)
Frame Material	Cedar Wood
Roof Material	Galvanized Steel (Double Roof)
Water Resistance Level	Moisture Resistant
Assembly Required	Yes
Color	Natural (Wood)
Snow Loading Depth	15 inches
Wind Resistance	9 (47-54 mph) with expansion bolts

WARRANTY INFORMATION

For specific warranty details regarding your Aoxun Gazebo, please refer to the warranty card included with your product or contact Aoxun customer support directly. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need replacement parts, please contact Aoxun customer support.

Online Support: Visit the official Aoxun Store on Amazon:[Aoxun Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question