

[Manuals.plus](#) /

› [ELEMARA](#) /

› ELEMARA 4 Seater Wagon Stroller Instruction Manual MYL005MCN0X

ELEMARA MYL005MCN0X

ELEMARA 4 Seater Wagon Stroller Instruction Manual

Model: MYL005MCN0X

IMPORTANT SAFETY INFORMATION

Read all instructions before assembly and use of the ELEMARA 4 Seater Wagon Stroller. Failure to follow these instructions could result in serious injury or death.

- Always secure children with the five-point safety harnesses.
- Never leave children unattended in the wagon.
- Ensure the wagon is fully locked in the open position before placing children inside.
- Engage the foot brake when parking the wagon.
- Do not overload the wagon. The maximum weight recommendation is 220 pounds total, or 55 pounds per child.
- Keep hands and fingers clear of moving parts during folding and unfolding.
- Avoid placing heavy bags on the handles, as this can cause the wagon to tip.
- Regularly inspect the wagon for loose parts, damaged components, or worn fabric. Discontinue use if any damage is found.
- This wagon is designed for children. Do not use it for purposes other than transporting children or cargo within specified weight limits.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Wagon Frame (pre-assembled)
- Front Wheels (2)

- Rear Wheels (2)
- Movable Center Console with Snack Tray and 2 Cup Holders
- Large Capacity Storage Bag
- Adjustable Push Handlebar
- Removable Canopy
- Detachable Upholstered Seat Backs (4)
- Telescopic Pull Handle
- Assembly Hardware (screws, screwdriver)

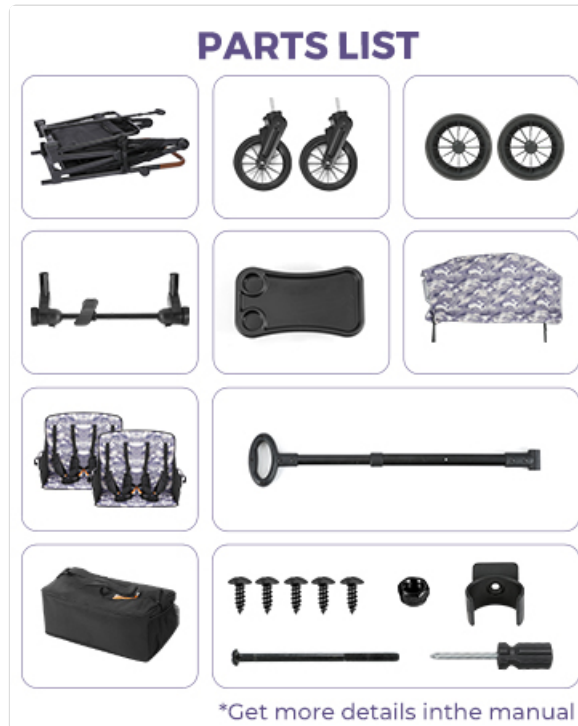


Image: All components included in the ELEMARA 4 Seater Wagon Stroller package.

SETUP AND ASSEMBLY

1. Unfolding the Wagon Frame

1. Place the folded wagon on a flat surface.
2. Release any locking mechanisms securing the frame in the folded position.
3. Gently pull the frame outwards until it fully extends and locks into place. Ensure all hinges are secure.

2. Attaching the Wheels

1. Identify the front and rear wheels. Front wheels are typically smaller and swivel.
2. Insert each wheel axle into its corresponding slot on the wagon frame until it clicks securely into place. Pull on each wheel to ensure it is firmly attached.

3. Installing the Push Handlebar

1. Locate the adjustable push handlebar.
2. Align the handlebar mounts with the designated slots on the wagon frame.
3. Push down firmly until the handlebar locks into position. Adjust the angle as desired by pressing the

release buttons on the sides.

4. Attaching the Pull Handle

1. Attach the telescopic pull handle to the front of the wagon using the provided hardware (screws and screwdriver). Ensure it is securely fastened.

5. Securing the Canopy

1. Slide the canopy poles into the designated receivers on the wagon frame.
2. Extend the canopy fabric over the poles and secure any fasteners (velcro, clips) to the wagon frame.

6. Attaching Accessories

1. Attach the large capacity storage bag to the rear or side of the wagon using its straps or clips.
2. Place the movable center console with snack tray and cup holders between the seats as desired.
3. Insert the detachable upholstered seat backs into their respective positions.

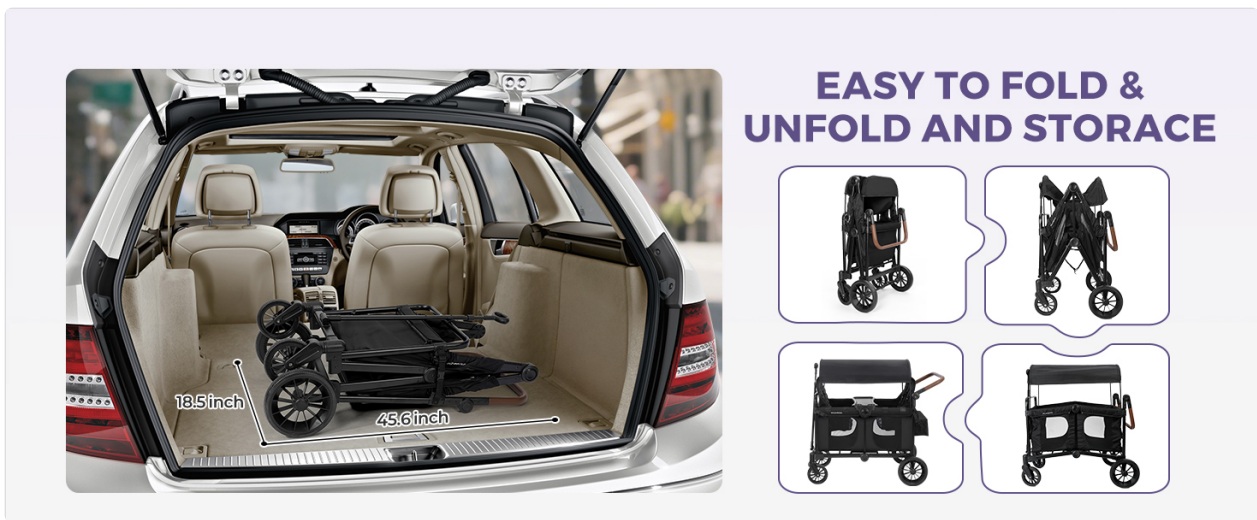


Image: Labeled components of the ELEMARA 4 Seater Wagon Stroller.

OPERATING INSTRUCTIONS

Push and Pull Handles

- **Push Handle:** The premium leather push handlebar can be adjusted to different heights and angles for comfortable pushing. Press the buttons on the sides of the handle to adjust its position.
- **Pull Handle:** The 3-section telescopic pull handle is located at the front. Extend it by pulling upwards and lock it into your desired length. This handle is ideal for pulling the wagon, especially over uneven terrain or when converting to cargo mode.

MORE COMFORTABLE AND SAFE SEATS FOR BABIES



Drop-down
footwell let little
legs stretch free



Detachable
upholstered
Seats back



Standard
3-Point Safety
Harness



Image: Adjusting the push and pull handles for optimal comfort.

Braking System

The wagon features a one-step foot brake system. To engage the brake, press down firmly on the brake pedal located near the rear wheels until it locks. To release, lift the pedal upwards. Always engage the brake when the wagon is stationary.



Image: Engaging the one-step foot brake.

Securing Children

Each seating position is equipped with a five-point adjustable safety harness. Place the child in the seat, bring the shoulder straps over their shoulders, and connect the buckle between their legs. Adjust all straps for a snug, secure fit. The seats are padded for comfort and designed with high backs for support.



Image: Children secured in the wagon with five-point harnesses and comfortable seating.

Canopy Adjustment and Removal

The removable canopy provides UV protection and can be adjusted to block sun or light rain from various angles. Simply slide the canopy forward or backward along its poles. To remove the canopy, slide it off the poles. This allows for an open-air experience or easier storage.



Image: Adjusting the removable canopy for sun protection.

Folding and Storage

The wagon features a one-click folding mechanism for quick and easy storage. Follow these steps:

1. Remove any children and loose items from the wagon.
2. Ensure the canopy is removed or folded down.
3. Locate the folding release mechanism (usually a button or lever) on the frame.
4. Activate the mechanism and push the sides of the wagon inward until it collapses into a compact form.
5. Secure any locking latches to keep the wagon folded.

SPECS AND DIMENSIONS

Folds down for easy travel and more adventures



Image: The wagon stroller folded for storage in a car trunk.

MAINTENANCE AND CARE

Cleaning

- **Fabric:** Spot clean fabric components with mild soap and cold water. Air dry thoroughly. Do not use bleach or harsh detergents.
- **Frame:** Wipe the metal frame with a damp cloth. Dry immediately to prevent rust.
- **Wheels:** Periodically clean debris from the wheels and axles to ensure smooth operation.

Storage

Store the wagon in a clean, dry place away from direct sunlight and extreme temperatures. Ensure it is completely dry before storing to prevent mold or mildew.

Inspection

Regularly check all fasteners, buckles, and straps for security and wear. Ensure wheels are properly attached and rotate freely. If any part is damaged or missing, contact customer support for replacement parts.

TROUBLESHOOTING

- **Wagon does not fold easily:** Ensure all seats are empty and the canopy is removed or folded. Check for any obstructions in the folding mechanism.
- **Wheels are stiff or squeaky:** Clean any debris from the wheel axles. A small amount of silicone-based lubricant can be applied to the axles if needed.
- **Brake not engaging:** Check for obstructions around the brake pedal and ensure the mechanism is free of debris. Verify that the brake cable (if applicable) is not loose or damaged.
- **Harness straps are difficult to adjust:** Ensure the straps are not twisted. Apply gentle pressure while adjusting.

If you encounter issues not listed here or require further assistance, please contact ELEMARA customer support.

SPECIFICATIONS

Feature	Detail
Model Number	MYL005MCN0X
Item Weight	47.6 pounds
Item Dimensions (L x W x H)	48.82" x 28.35" x 44.88"
Folded Dimensions (L x W x H)	12.2" x 18.5" x 45.6" (approximate)
Harness Type	5 Point (adjustable, padded straps)
Stroller Type	Wagon Stroller
Seating Capacity	4 Children
Maximum Weight Recommendation	220 pounds total (approx. 55 lbs per seat)
Number of Wheels	4 (all-terrain, 360° rotatable front wheels)
Frame Material	Iron
Seat Material	Breathable mesh, foam padded
Included Components	Snack tray, cup holders, storage bag, adjustable handles, removable canopy



Image: Product dimensions in unfolded and folded configurations.

WARRANTY AND SUPPORT

ELEMARA products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official ELEMARA website. For customer support, replacement parts, or any inquiries regarding your ELEMARA 4 Seater Wagon Stroller, please contact our customer service team through the contact information provided on our website or your purchase documentation.

