

Levoit LPF-R382-WEU

Levoit LPF-R382-WEU Pedestal Fan User Manual

Model: LPF-R382-WEU | Brand: Levoit

INTRODUCTION

Thank you for choosing the Levoit LPF-R382-WEU Pedestal Fan. This fan is designed to provide powerful yet quiet air circulation, enhancing comfort in your home. With its efficient DC motor, it delivers up to 1740 m³/h of airflow at 6.5 m/s, quickly refreshing any room. Enjoy its ultra-quiet operation at just 20 dB on the lowest setting, making it ideal for sleeping or working. The fan features 90° horizontal oscillation and manual vertical tilt for comprehensive air distribution. It is also energy-efficient, consuming only about 0.06 kWh over 12 hours on speed 1. This manual provides essential information for safe operation, maintenance, and troubleshooting.



The Levoit LPF-R382-WEU Pedestal Fan in white, highlighting its modern aesthetic.

SETUP AND ASSEMBLY

The Levoit LPF-R382-WEU Pedestal Fan is designed for easy, tool-free assembly. Follow these steps to set up your fan:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present: fan head, pedestal pole, and base.
2. **Attach Pedestal to Base:** Securely attach the pedestal pole to the fan base. Twist or click into place as indicated by the design.
3. **Attach Fan Head:** Mount the fan head onto the top of the pedestal pole. Ensure it is firmly seated and locked.
4. **Position the Fan:** Place the fan on a stable, flat surface. Ensure there is adequate space around the fan for optimal airflow and oscillation.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet.

Un air frais et confortable toute l'année

| Printemps et Automne

Flux d'Air Frais



| Été

Améliore l'Efficacité du Refroidissement



| Hiver

Aide à Faire Circuler l'Air Chaud



This image illustrates the simple steps for disassembling the fan for cleaning and its tool-free installation.

OPERATING INSTRUCTIONS

Your Levoit Pedestal Fan offers various settings for personalized comfort. You can control the fan using the top panel or the included remote control.

Control Panel and Remote Control:

- **Power Button:** Turns the fan on or off.
- **Speed Settings:** Choose from 5 fan speeds to adjust airflow intensity.
- **Turbo Mode:** Activates maximum airflow for rapid cooling.
- **Oscillation Button:** Activates or deactivates the 90° horizontal oscillation.
- **Timer Function:** Set the fan to operate for up to 12 hours before automatically turning off.
- **Vertical Tilt:** Manually adjust the fan head's vertical angle up to 90° to direct airflow.

Minuteur 12H pour un sommeil Paisible toute la Nuit



A detailed view of the fan's intuitive control panel and the included remote control for easy operation.

Key Features:

- **Powerful Air Circulation:** Delivers 1740 m³/h airflow at 6.5 m/s for quick room cooling.
- **Quiet Operation:** Operates at a minimum of 20 dB, ensuring a peaceful environment.
- **Wide Oscillation:** 90° horizontal oscillation and manual 90° vertical tilt distribute air evenly.
- **Energy Efficient:** Consumes approximately 0.06 kWh over 12 hours on the lowest speed.
- **12-Hour Timer:** Convenient for setting operation duration, especially for overnight use.



An image illustrating the powerful air circulation of the Levoit fan, showing air movement across a bedroom.



This image demonstrates the fan's quiet operation at 20 dB, allowing for peaceful sleep.

MAINTENANCE

Regular cleaning and maintenance will ensure your Levoit fan operates efficiently and extends its lifespan. The fan's removable parts make cleaning easy.

1. **Before Cleaning:** Always unplug the fan from the power outlet before cleaning.
2. **Disassemble for Cleaning:** The front grille and fan blades are designed for easy removal without tools. Gently twist or unclip the front grille to access the blades.
3. **Clean Fan Blades and Grille:** Wipe the fan blades and grilles with a soft, damp cloth. For stubborn dust, you can wash the blades with mild soap and water. Ensure all parts are completely dry before reassembling.
4. **Clean Exterior:** Wipe the exterior of the fan with a soft, dry cloth. Do not use abrasive cleaners or solvents.
5. **Reassembly:** Once all parts are dry, reassemble the fan by reversing the disassembly steps. Ensure the front grille is securely fastened.

Un air frais et confortable toute l'année

| Printemps et Automne

Flux d'Air Frais



| Été

Améliore l'Efficacité du Refroidissement



| Hiver

Aide à Faire Circuler l'Air Chaud



This image illustrates the simple steps for disassembling the fan for cleaning and its tool-free installation.

TROUBLESHOOTING

If you encounter any issues with your Levoit Pedestal Fan, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet not working; power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the power button on the fan or remote.
Weak airflow.	Low speed setting; fan blades are dirty; obstruction.	Increase the fan speed. Clean the fan blades and grilles. Ensure there are no obstructions blocking the airflow.
Fan is noisy.	Fan blades are dirty; loose parts; fan not on a stable surface.	Clean the fan blades. Check for any loose parts and tighten them. Place the fan on a stable, flat surface.
Remote control not working.	Batteries are dead or incorrectly inserted; remote out of range.	Replace the batteries with new ones, ensuring correct polarity. Point the remote directly at the fan and ensure it's within range.

SPECIFICATIONS

Here are the technical specifications for the Levoit LPF-R382-WEU Pedestal Fan:

Feature	Specification
Brand	Levoit
Model Number	LPF-R382-WEU
Color	Classic White
Fan Design	Pedestal Fan
Power Source	Corded Electric
Dimensions (D x W x H)	30P x 97l x 30H cm (approx. 11.8 x 38.2 x 11.8 inches)

Feature	Specification
Room Type	Bedroom, Living Room
Special Feature	Remote Control
Controller Type	Remote Control
Number of Speeds	5 (with Turbo Mode)
Noise Level	20 Decibels (minimum)
Power	18.5 Watts
Airflow	1740 m³/h
Air Speed	6.5 meters per second
Voltage	220 Volts
Usage	Indoor
Material	Plastic
Item Weight	2.6 Kilograms
Included Components	Remote Control

Oscillation Grand Angle à 90° Rafraîchit Facilement Chaque Recoin



The fan positioned in a living room, showcasing its compact dimensions (26cm wide, 97cm high) and how it blends into the environment.

WARRANTY INFORMATION

Levoit products are manufactured to the highest quality standards. For specific warranty details regarding your LPF-R382-WEU Pedestal Fan, please refer to the warranty card included in your product packaging or visit the official Levoit website. Keep your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions or concerns about your Levoit LPF-R382-WEU Pedestal Fan, please contact Levoit Customer Support. Our team is dedicated to providing satisfactory after-sales service.

- **Online Support:** Visit the official Levoit website for FAQs, support articles, and contact forms.
- **Email Support:** Refer to your product packaging or the Levoit website for the appropriate customer service email address.

- **Phone Support:** Check the Levoit website for regional customer service phone numbers.

For more information about Levoit products, you can visit the [Levoit Brand Store on Amazon](#).

© 2026 Levoit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question