

Yirinatek WOLF

Yirinatek Electronic Dart Board WOLF

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Yirinatek Electronic Dart Board WOLF. This manual provides essential information for the safe and efficient operation of your new dartboard. Please read it thoroughly before installation and use, and keep it for future reference.

This electronic dartboard features a dual integrated LED scoreboard with an 8-color lighting system for up to 8 players, a wide variety of games, and a durable design for an engaging dart experience.

2. SAFETY INFORMATION

- **Adult Supervision:** Children should only use this product under direct adult supervision.
- **Dart Safety:** Darts have pointed tips. Always aim darts at the dartboard. Do not throw darts at people or animals.
- **Power Supply:** Use only the provided power adapter. Ensure the power outlet matches the adapter's voltage requirements.
- **Placement:** Install the dartboard in a clear area, away from windows, fragile objects, and high-traffic zones. Ensure sufficient space for throwing.
- **Moisture:** Keep the dartboard away from water or excessive moisture to prevent electrical hazards.
- **Maintenance:** Do not attempt to open or repair the dartboard yourself. Refer all servicing to qualified personnel.


3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Electronic Dartboard with Cabinet
- 12 Soft Tip Darts (2 types of barrels, 2 flight designs)
- 50 Plastic Dart Tips (Spare)
- Instruction Manual
- Positioning Sticker
- Throw Line
- Power Adapter

- Power Cable
- Mounting Screws and Wall Anchors
- Measuring Tape

ACCESSORIES INCLUDED

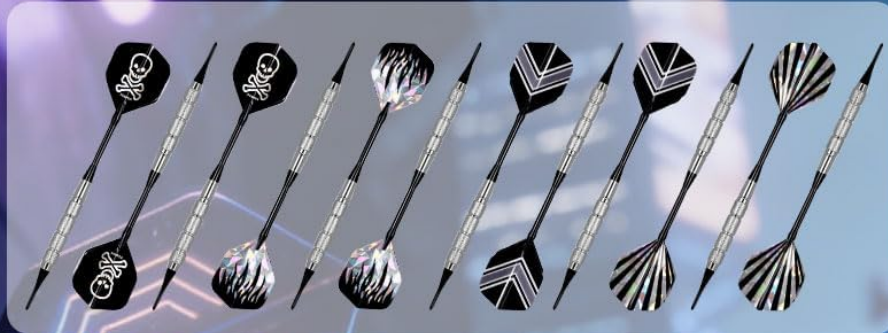

12 SOFT TIP DARTS



USER MANUAL



SCREWS

MEASURING TAPE



THROW LINE



POSITIONING STICKER



POWER ADAPTER

POWER CABLE

50 SPARE TIPS

Figure 3.1: All accessories included in the package.

4. SETUP

4.1 Mounting the Dartboard

1. Choose a suitable wall location with ample space for throwing and movement. Ensure the wall can support the weight of the dartboard.
2. Using the included measuring tape, mark the desired height for the center of the dartboard. The standard height for the bullseye is 5 feet 8 inches (1.73 meters) from the floor.
3. Use the provided screws and wall anchors to securely mount the dartboard cabinet to the wall. Ensure it is level and stable.

4.2 Applying Decorative Stickers

Your dartboard comes with decorative stickers to customize the door panels. Follow these steps for application:

1. **Peel:** Clean the door surface thoroughly. Determine the placement position and carefully peel off the backing paper from the sticker.
2. **Apply:** Align the blank gap in the center of the sticker with the door gap before applying. Stick one side first, then smoothly press it down to avoid air bubbles. (Two-person installation is recommended for best results).
3. **Press:** Use the included scraper or a similar flat tool to firmly press the pattern onto the door surface, ensuring full adhesion.
4. **Remove:** Carefully peel off the transparent transfer film.

HOW TO APPLY THE STICKER

01



Clean the Door Surface, Determine the Placement Position, and Peel off the Backing Paper.

02



Align the Blank Gap in the Center of the Sticker with the Door Gap Before Applying. Stick One Side First, then Smooth it Down to Avoid Air Bubbles (2-Person Installation Recommended).

03



Use the Included Scraper to Firmly Press the Pattern onto the Door Surface.

04



Peel off the Transparent Transfer Film. Done.

Figure 4.1: Steps for applying the decorative sticker.

Your browser does not support the video tag.

Video 4.1: Demonstration of applying the dartboard stickers. This video shows the process of peeling the sticker, aligning it with the door gap, smoothing it down to prevent air bubbles, pressing it firmly, and finally removing the transparent transfer film.

4.3 Connecting Power

Connect the power cable to the dartboard and then plug the adapter into a standard electrical outlet.

4.4 Throw Line Placement

Use the included throw line sticker to mark the official throwing distance on the floor. The standard throwing distance is 7 feet 9.25 inches (2.37 meters) from the face of the dartboard.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **POWER** button to turn the dartboard on or off.

5.2 Game Selection

Use the **GAME** button to cycle through the available game modes. Refer to the included game instructions for detailed rules of each game.

5.3 Player Tracking and Scoring

The dartboard features dual integrated LED scoreboards with an innovative 8-color lighting system. Each of the 8 potential players is assigned a unique color, making it easy to identify scores at a glance. Professional real-time statistics, including PPD (Points Per Dart) and MPR (Marks Per Round), are displayed to help players track their performance.

MULTICOLOR LED FOR 8 PLAYERS

8 LED COLORS FOR 8 PLAYERS

DUAL LED SCOREBOARDS



Figure 5.1: Multicolor LED for 8 players and dual scoreboards in action.

5.4 Voice Broadcast Modes

The dartboard offers 4 optional voice broadcast modes with concise prompts, cheers, and playful taunts to enhance the game experience. Adjust the volume using the **VOLUME** buttons.

ADVANCED ALL-IN-ONE SCOREBOARD



Figure 5.2: Advanced all-in-one scoreboard with vivid voice score broadcast.

6. GAME MODES

The Electronic Dartboard Cabinet comes preloaded with a massive game library, offering diverse gameplay options:

- **50 Unique Game Modes:** Includes classic dart games such as 301 and Cricket.
- **491 Rule Variations:** Provides extensive customization for each game.

- **Party Mini-Games:** Various entertaining games suitable for social gatherings.
- **Solo Practice Mode:** Play against an AI opponent with five adjustable difficulty levels (Beginner to Professional) to refine your dart skills.

ULTIMATE SMART DARTBOARD SYSTEM



5 CHALLENGING LEVELS OF COMPUTER PLAYER

Perfect for solo practice or professional training



50 Built-in Games
491 Rule Variations






Figure 6.1: Overview of game variety and AI difficulty levels.

7. MAINTENANCE

7.1 Cleaning

- Wipe the dartboard and cabinet surfaces with a soft, dry cloth.
- For stubborn marks, use a slightly damp cloth with mild soap, then wipe dry immediately.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and electronic components.

7.2 Dart Care

- Regularly check the soft tips of your darts for wear or damage. Replace worn tips with the provided spare plastic tips to ensure optimal performance and prevent damage to the dartboard segments.
- Store darts in a safe place when not in use to prevent damage to the tips and flights.

7.3 Storage

When not in use, close the dartboard cabinet doors to protect the dartboard surface from dust and potential damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dartboard does not power on.	No power, loose connection, faulty adapter.	Check power outlet. Ensure adapter is securely plugged into dartboard and outlet. Try a different outlet.
Darts are not registering scores.	Worn dart tips, dart not fully entering segment, sensor issue.	Replace dart tips. Ensure darts are thrown with enough force to fully enter the segment. If problem persists, contact support.
Scoreboard display is erratic.	Power fluctuation, internal electronic issue.	Turn off and unplug the dartboard for 30 seconds, then plug back in and restart.
Voice prompts are too loud/quiet.	Volume setting.	Adjust volume using the VOLUME buttons.

9. SPECIFICATIONS

- **Brand:** Yirinatek
- **Model:** WOLF
- **Material:** Wood (cabinet), Plastic (dartboard target area)
- **Color:** Black
- **Product Dimensions (Closed):** Approximately 18" W x 23" H (45cm W x 58cm H)
- **Number of Players:** Up to 8
- **Game Modes:** 50 unique games, 491 rule variations
- **Power Source:** AC Adapter (included)

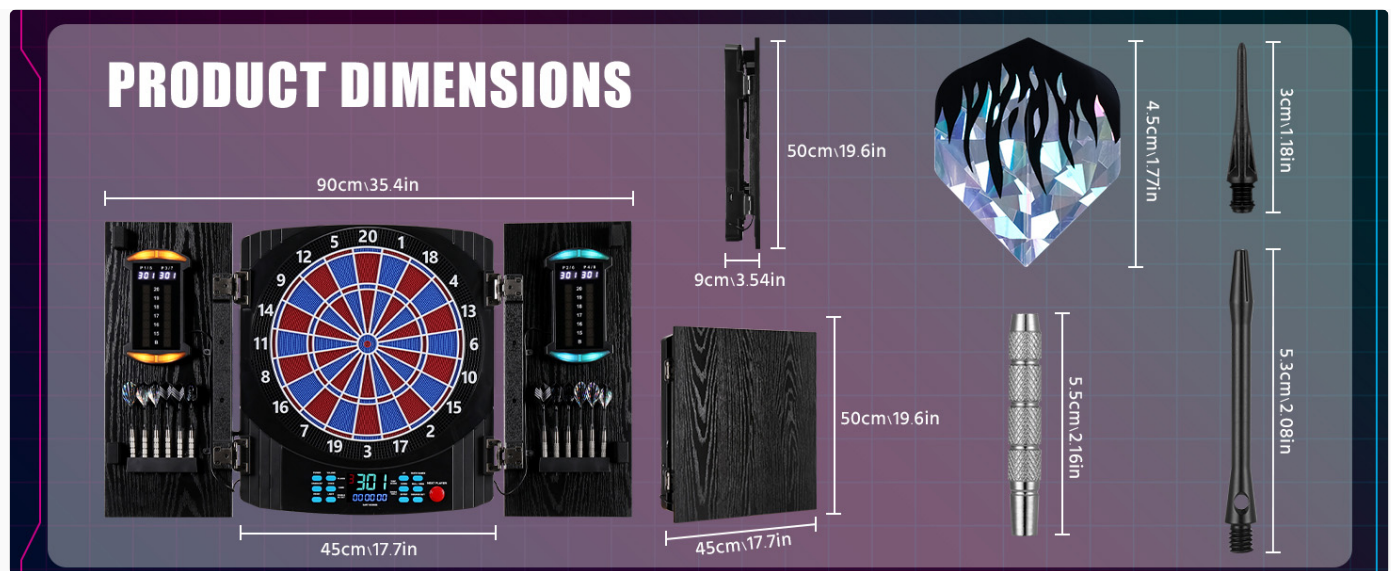


Figure 9.1: Product dimensions.

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This Yirinatek Electronic Dart Board WOLF comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by misuse, abuse, accident, or neglect.
- Normal wear and tear, including dart tips and flights.
- Unauthorized repairs or modifications.
- Damage from improper installation or power supply.

10.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your Yirinatek Electronic Dart Board, please contact our customer support team. Please have your product model and purchase date available when contacting support.

Contact Information:

- **Email:** support@yirinatek.com
- **Website:** [Yirinatek Official Store](#)

© 2026 Yirinatek. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question