



[Manuals.plus](#) /

> [MAXSHOT](#) /

> MAXSHOT Electric Scooter V10 User Manual

MAXSHOT V10

MAXSHOT Electric Scooter V10 User Manual

Model: V10

INTRODUCTION

This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your MAXSHOT V10 Electric Scooter. Please read this manual thoroughly before first use to ensure proper function and safety.



Image: The MAXSHOT V10 Electric Scooter, showcasing its design and features.

SAFETY GUIDELINES

Always prioritize safety when operating the electric scooter. Failure to follow safety instructions can result in serious injury or damage to the scooter.

- Wear a helmet and appropriate safety gear (knee pads, elbow pads) at all times.

- Do not ride in wet conditions, heavy rain, or through puddles.
- Ensure all bolts and quick releases are securely fastened before each ride.
- Adhere to local traffic laws and regulations.
- Avoid riding on uneven surfaces, steep inclines, or in areas with heavy pedestrian traffic.
- Do not perform stunts or sudden maneuvers.
- Maintain a safe distance from other vehicles and pedestrians.
- The scooter is designed for adult use.

PACKAGE CONTENTS

Verify that all items are present in the package:

- MAXSHOT V10 Electric Scooter
- User Manual (this document)
- Charger
- Detachable Seat
- Assembly Tools (may include hex wrench)

SETUP AND ASSEMBLY

The MAXSHOT V10 Electric Scooter comes mostly pre-assembled. Follow these steps to complete the setup:

1. **Unpacking:** Carefully remove the scooter and all components from the packaging. Inspect for any damage during transit.
2. **Handlebar Installation:**
Attach the handlebar to the main stem. Ensure it is aligned correctly and secure it using the provided screws and tools. Tighten all bolts firmly.

Premium Battery Long-Lasting Performance



48V/10.4 & 22.5AH

Lithium Battery



5 H

Fast Charging



27&40Miles

Max Range



Image: Close-up of the handlebar area, showing the stem and controls.

3. Seat Attachment:

If not already attached, install the detachable seat onto the designated post. Adjust the seat height for comfortable riding posture. Ensure the seat is securely locked in place.



Image: Rear view of the scooter showing the detachable seat and storage bag.

4. Initial Charge:

Before first use, fully charge the scooter's battery. Connect the charger to the charging port and then to a power outlet. The indicator light on the charger will change when charging is complete (typically from red to green).

5. Tire Pressure Check:

Verify that the tires are inflated to the recommended pressure. Proper tire pressure ensures optimal performance and safety.

OPERATING INSTRUCTIONS

Powering On/Off

- To power on, press and hold the power button on the display for a few seconds.
- To power off, press and hold the power button again until the display turns off.

Riding Modes

The MAXSHOT V10 offers three riding modes to suit different preferences and conditions:

- **ECO Mode (E):** Approximately 8 mph (13 km/h) - For extended range and beginner riders.
- **Drive Mode (D):** Approximately 13 mph (21 km/h) - Balanced speed and range for daily commuting.
- **Sport Mode (S):** Approximately 22 mph (35 km/h) - Maximum speed for experienced riders.

Switch between modes using the designated button on the handlebar display.

Choose Your Speed Modes



Image: A rider demonstrating the scooter with an overlay showing the three speed modes (E, D, S) and their respective speeds.

Smart LCD Display

The integrated LCD display provides real-time information:

- Current Speed
- Battery Level
- Riding Mode (E, D, S)

- Headlight Indicator
- Display lock/unlock function



Image: A close-up of the scooter's handlebars and the smart LCD display, showing speed and battery information.

Braking System

The scooter is equipped with a dual braking system for reliable stopping power:

- **Front Braking:** Lever-activated brake on the handlebar.
- **Rear Disc Brake:** Provides strong and responsive stopping.

Always apply brakes smoothly and gradually to avoid skidding. Practice braking in a safe, open area before riding in traffic.

Rear Disc Brake

Safe rides start with responsive disc brake. Reliable stopping, smooth performance always.



Image: A rider on the scooter, highlighting the rear disc brake system.

Folding Mechanism

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your MAXSHOT V10 Electric Scooter.

- **Cleaning:** Wipe the scooter with a damp cloth. Do not use high-pressure water or immerse any part of the scooter in water.
- **Battery Care:**
 - Charge the battery fully after each use.
 - If storing for an extended period, charge the battery to 50-70% every 30-60 days.
 - Avoid completely draining the battery.
- **Tire Maintenance:** Regularly check tire pressure and inflate to the recommended PSI. Inspect tires for wear and tear.
- **Brake Check:** Periodically inspect brake levers, cables, and disc brakes for proper function and wear. Adjust or replace components as needed.
- **Fastener Inspection:** Check all screws, bolts, and connections regularly to ensure they are tight and secure.
- **Storage:** Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

This section addresses common issues you might encounter with your MAXSHOT V10 Electric Scooter.

Problem	Possible Cause	Solution
Scooter does not power on	Low or depleted battery; loose battery connection.	Charge the battery fully. Check battery connections.
No acceleration or movement (E7 error)	Motor or throttle cable issue; internal electrical fault.	Check throttle cable connections. If the E7 error persists, contact customer support. Do not attempt to disassemble internal components if unfamiliar with electrical systems.
Reduced range or speed	Under-inflated tires; heavy load; riding uphill frequently; cold weather; battery degradation.	Ensure tires are properly inflated. Reduce load. Ride in appropriate mode. Battery performance can decrease over time.
Brakes feel weak	Worn brake pads; loose brake cable; air in hydraulic system (if applicable).	Inspect brake pads and replace if worn. Adjust brake cable tension. If issues persist, seek professional service.

For issues not listed here or if troubleshooting steps do not resolve the problem, please contact MAXSHOT customer support.

SPECIFICATIONS

Feature	Detail
Brand	MAXSHOT
Model Number	V10
Motor Power	500W Brushless

Feature	Detail
Max Speed	22 MPH (35 km/h)
Battery	48V 10.4Ah Lithium Battery
Max Range	Up to 21-25 Miles (34-40 km)
Tire Size	14 Inches
Tire Type	Solid Rubber
Braking System	Dual Disc Brakes (Front & Rear)
Suspension	Dual Suspension
Frame Material	Aluminum
Max Load Capacity	265 Pounds (120 kg)
Folded Dimensions	Approx. 47 x 23 inches (119 x 58 cm)
Special Features	Cruise Control, Foldable Design, Detachable Seat, Front Bag, APP Control
Recommended Age	Adult

Note: Specifications are subject to change without notice. Performance may vary based on rider weight, terrain, and environmental conditions.

WARRANTY INFORMATION

The MAXSHOT V10 Electric Scooter comes with a **12-month limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by improper assembly, maintenance, or storage.
- Damage resulting from accidents, misuse, abuse, or negligence.
- Normal wear and tear of components such as tires, brake pads, and grips.
- Unauthorized modifications or repairs.

Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, operation, or encounter issues not covered in this manual, please contact MAXSHOT customer support.

For the most up-to-date contact information, please refer to the MAXSHOT official website or your purchase documentation.



