

Armocity WFDB-W

Armocity Folding Desk with Outlets (Model WFDB-W) User Manual

Model: WFDB-W

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Wall Anchoring:** This desk **MUST** be securely anchored to a wall to prevent tipping, especially in homes with children or pets. Use the provided anti-tipping device.
- **Assembly:** Ensure all parts are present and undamaged before beginning assembly. Do not use power tools for assembly unless specifically instructed, as this may damage the product.
- **Weight Capacity:** Do not exceed the recommended weight capacity for the desktop and shelves. Refer to the Specifications section for details.
- **Electrical Safety:** The built-in outlets and USB ports are designed for standard use. Do not overload the outlets. Ensure hands are dry when plugging or unplugging devices.
- **Placement:** Place the desk on a flat, stable surface. Avoid placing it near heat sources or in direct sunlight for prolonged periods.



Detail of the anti-tipping device, fixed buckle, hinge guard, adjustable shelves, and built-in outlets. The anti-tipping device is shown at the top left, emphasizing the need to anchor the desk to the wall for safety.

PRODUCT OVERVIEW

The Armocity Folding Desk is a versatile and space-saving solution designed for various uses, including home office, craft, or study. It features a collapsible design, integrated power outlets, adjustable storage, and a functional blackboard surface.



The Armocity Folding Desk shown in an open configuration within a home office environment, surrounded by bookshelves. The desk is extended, providing a workspace.

SETUP AND ASSEMBLY

Assembly typically takes approximately 1 to 2 hours. It is recommended to have two people for certain steps. Tools for basic assembly are usually included. Follow the detailed instructions provided in the separate assembly guide for your specific model.

Key Assembly Steps:

1. **Unpack and Verify:** Carefully unpack all components and compare them against the parts list in your assembly guide. Contact customer support immediately if any parts are missing or damaged.
2. **Assemble Main Frame:** Follow the step-by-step diagrams to construct the main cabinet structure.
3. **Install Folding Mechanism:** Attach the desk tabletop and its support leg using the provided hinges and hardware. Ensure hinges operate smoothly.

4. **Integrate Power Unit:** Install the power strip with outlets and USB ports into its designated slot. Ensure the power cord is routed safely.
5. **Install Shelves:** Place the adjustable shelves at your desired heights.
6. **Secure to Wall:** This is a critical safety step. Using the provided anti-tipping hardware, securely fasten the desk cabinet to a sturdy wall stud. **DO NOT SKIP THIS STEP.**



Product dimensions diagram, highlighting the overall size of the desk in both folded and unfolded states. A prominent note indicates the necessity to fasten the unit to a wall for stability.

OPERATING INSTRUCTIONS

Folding and Unfolding the Desk:

1. **To Unfold:** Gently pull the desk tabletop downwards from its secured position. The support leg will extend automatically. Ensure the leg is fully extended and stable before placing items on the desk.
2. **To Fold:** Clear all items from the desk surface. Lift the support leg slightly to disengage any locking mechanism,

then carefully push the tabletop upwards until it clicks into its secured, vertical position against the cabinet. Use the fixed buckle to secure it.

Using the Built-in Outlets and USB Ports:

- Plug the desk's main power cord into a standard wall outlet.
- The integrated AC outlets provide power for electronic devices.
- The USB ports are suitable for charging smartphones, tablets, and other USB-powered devices. Note that USB charging speeds may vary.
- Avoid spilling liquids near the power unit.

Adjusting Storage Shelves:

- The shelving board under the desktop is height-adjustable.
- To adjust, remove all items from the shelf. Carefully lift the shelf and reposition the support pins to the desired height. Ensure the shelf is level and securely seated on all four pins before placing items back.

Using the Blackboard:

- The integrated blackboard panel can be used with standard chalk.
- It serves as a surface for notes, reminders, or creative expression.



The Armocity Folding Desk configured in a child's room, illustrating its use as a writing and drawing surface when open, and its compact, closed form for space-saving.

MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Blackboard Care:** Use standard chalk and a soft cloth or blackboard eraser for cleaning. For deeper cleaning, a slightly damp cloth can be used, ensuring the surface is dried thoroughly afterward.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Electrical Components:** Keep the power outlets and USB ports free from dust and debris. Do not attempt to repair or modify the electrical components yourself.

TROUBLESHOOTING

- **Desk is unstable:**
 - Ensure the desk is placed on a level surface.
 - Verify that all assembly screws are tightened.
 - Confirm the desk is securely anchored to the wall using the anti-tipping device. This is crucial for stability.
- **Power outlets/USB ports not working:**
 - Check if the main power cord is securely plugged into a functional wall outlet.
 - Test the wall outlet with another device to ensure it has power.
 - Ensure devices are properly plugged into the desk's outlets/ports.
 - Avoid overloading the power strip.
- **Difficulty folding/unfolding:**
 - Ensure no objects are obstructing the folding mechanism.
 - Check that the support leg is properly aligned.
 - Verify that the fixed buckle is disengaged before unfolding and engaged after folding.
- **Missing or damaged parts during assembly:**
 - Refer to the contact information in the Warranty & Support section to request replacement parts.

SPECIFICATIONS

Brand	Armocity
Model Number	WFDB-W
Model Name	Fold-out Cabinet Table, White
Dimensions (Cabinet, Folded)	7.9"D x 20"W x 61"H
Dimensions (Desk Tabletop, Unfolded)	32"D x 20"W (Desktop height: 29.72"H)
Item Weight	40 pounds
Material Type	Engineered Wood
Color	White
Special Feature	Folding, Built-in Outlets, Adjustable Shelves, Blackboard
Included Components	Built-in Outlet, Anti-tipping device

WARRANTY AND SUPPORT

Armocity is committed to providing quality products. For warranty information, replacement parts, or technical assistance, please contact Armocity customer support through the retailer where the product was purchased or visit the official Armocity website.

Please have your model number (WFDB-W) and purchase date available when contacting support.

Online Support: [Visit the Armocity Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question