

KIMEX 150-9001

KIMEX Gaming Desk 150-9001 User Manual

Model: 150-9001

INTRODUCTION

Thank you for choosing the KIMEX Gaming Desk 150-9001. This desk is designed to provide a functional and immersive environment for your gaming sessions. It features a spacious 120x60 cm tabletop, robust steel and aluminum construction, and integrated customizable RGB lighting. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use of your new gaming desk.

Please read this manual carefully before assembly and use, and retain it for future reference.

SETUP INSTRUCTIONS

1. Unpacking and Component Check

- Carefully open the packaging and remove all components.
- Place all parts on a soft, clean surface to prevent scratches.
- Verify that all parts listed in the assembly diagram (not provided in this manual, refer to included packaging) are present and undamaged.

2. Assembly

Assembly typically requires two people. Ensure all screws are tightened securely but do not overtighten.

1. Attach the desk legs to the tabletop using the provided hardware. Ensure the legs are oriented correctly for stability.
2. Secure any crossbars or support beams between the legs as indicated in your assembly diagram.
3. Install the adjustable feet at the bottom of the desk legs. These can be adjusted to level the desk on uneven surfaces.
4. Attach the headphone hook and cup holder to the designated slots on the tabletop.
5. Connect the RGB lighting power cable to a suitable USB power source (e.g., computer USB port, USB wall adapter).
6. Optionally, apply the decorative sticker to the desk legs as desired.

Dimensions (mm)

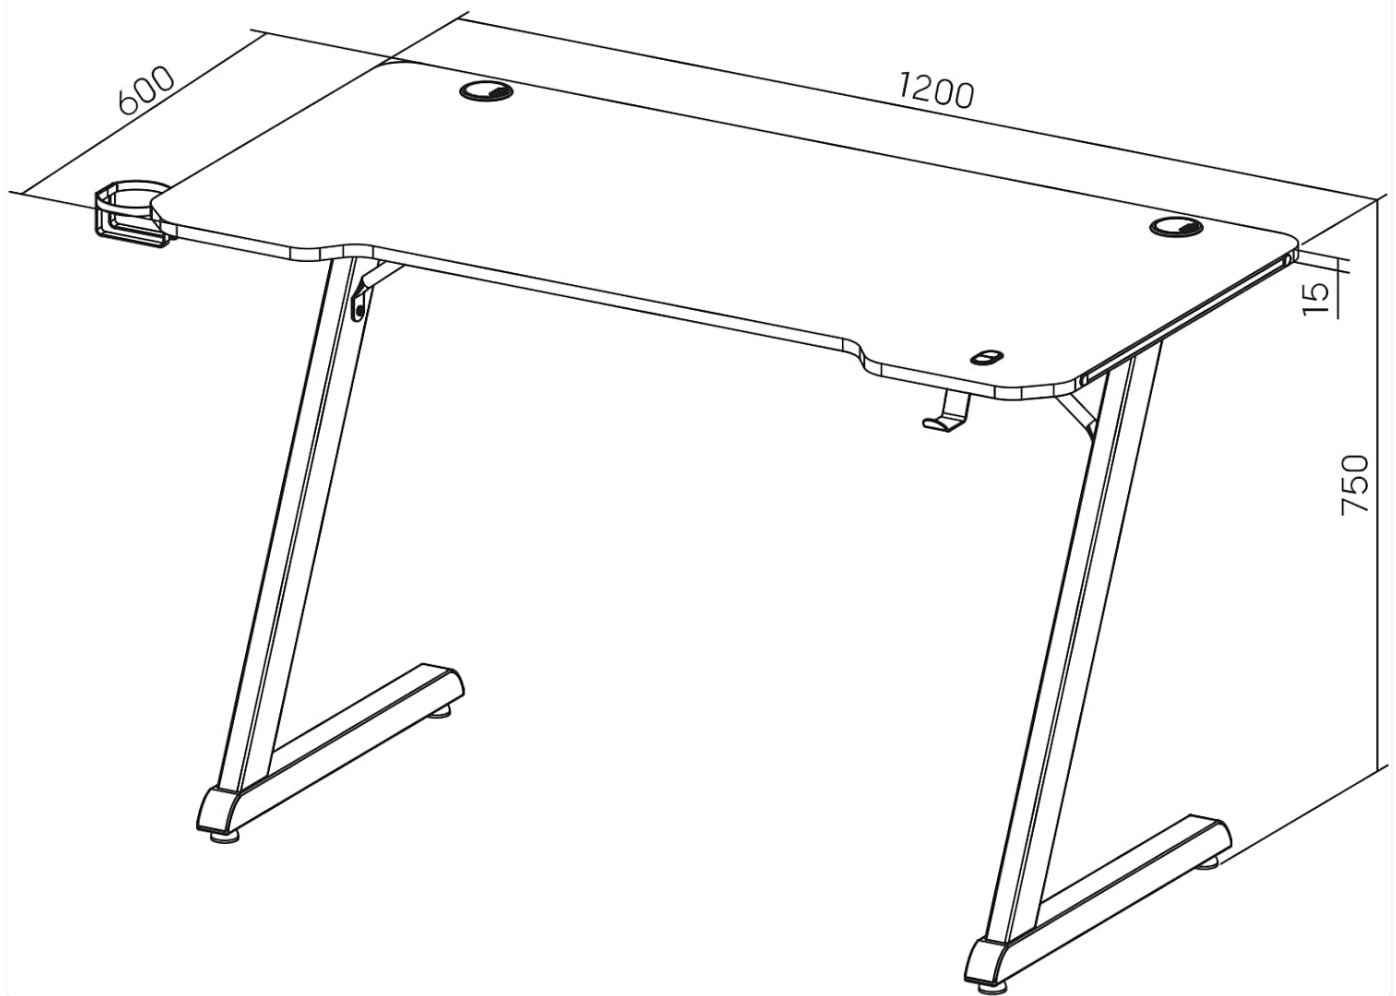


Figure 1: Dimensions of the KIMEX Gaming Desk 150-9001. The tabletop measures 1200mm (width) x 600mm (depth) x 15mm (thickness). The overall height of the desk is 750mm.



Figure 2: Side view of a desk leg, showing the Z-shape design and an optional decorative sticker with green and grey accents. The sticker can be applied during assembly.

OPERATING INSTRUCTIONS

1. RGB Lighting Control

The desk features integrated RGB LED lighting around the edge of the tabletop. Control buttons are located on the desk surface.



Figure 3: Close-up of the RGB control buttons integrated into the desk surface. The buttons are labeled 'MODE' and 'COLOR'.

- **MODE Button:** Press this button to cycle through various lighting effects and patterns (e.g., static colors, breathing effects, dynamic transitions).
- **COLOR Button:** When a static color mode is selected, press this button to change the color. In some dynamic modes,

it may adjust color variations.

- To turn off the RGB lighting, cycle through the modes until the lights turn off, or disconnect the USB power source.

2. Accessory Use

- **Headphone Hook:** Use the integrated hook on the side of the desk to hang your gaming headset, keeping it easily accessible and off the desk surface.
- **Cup Holder:** The attached cup holder provides a secure place for your beverage, reducing the risk of spills on your equipment.

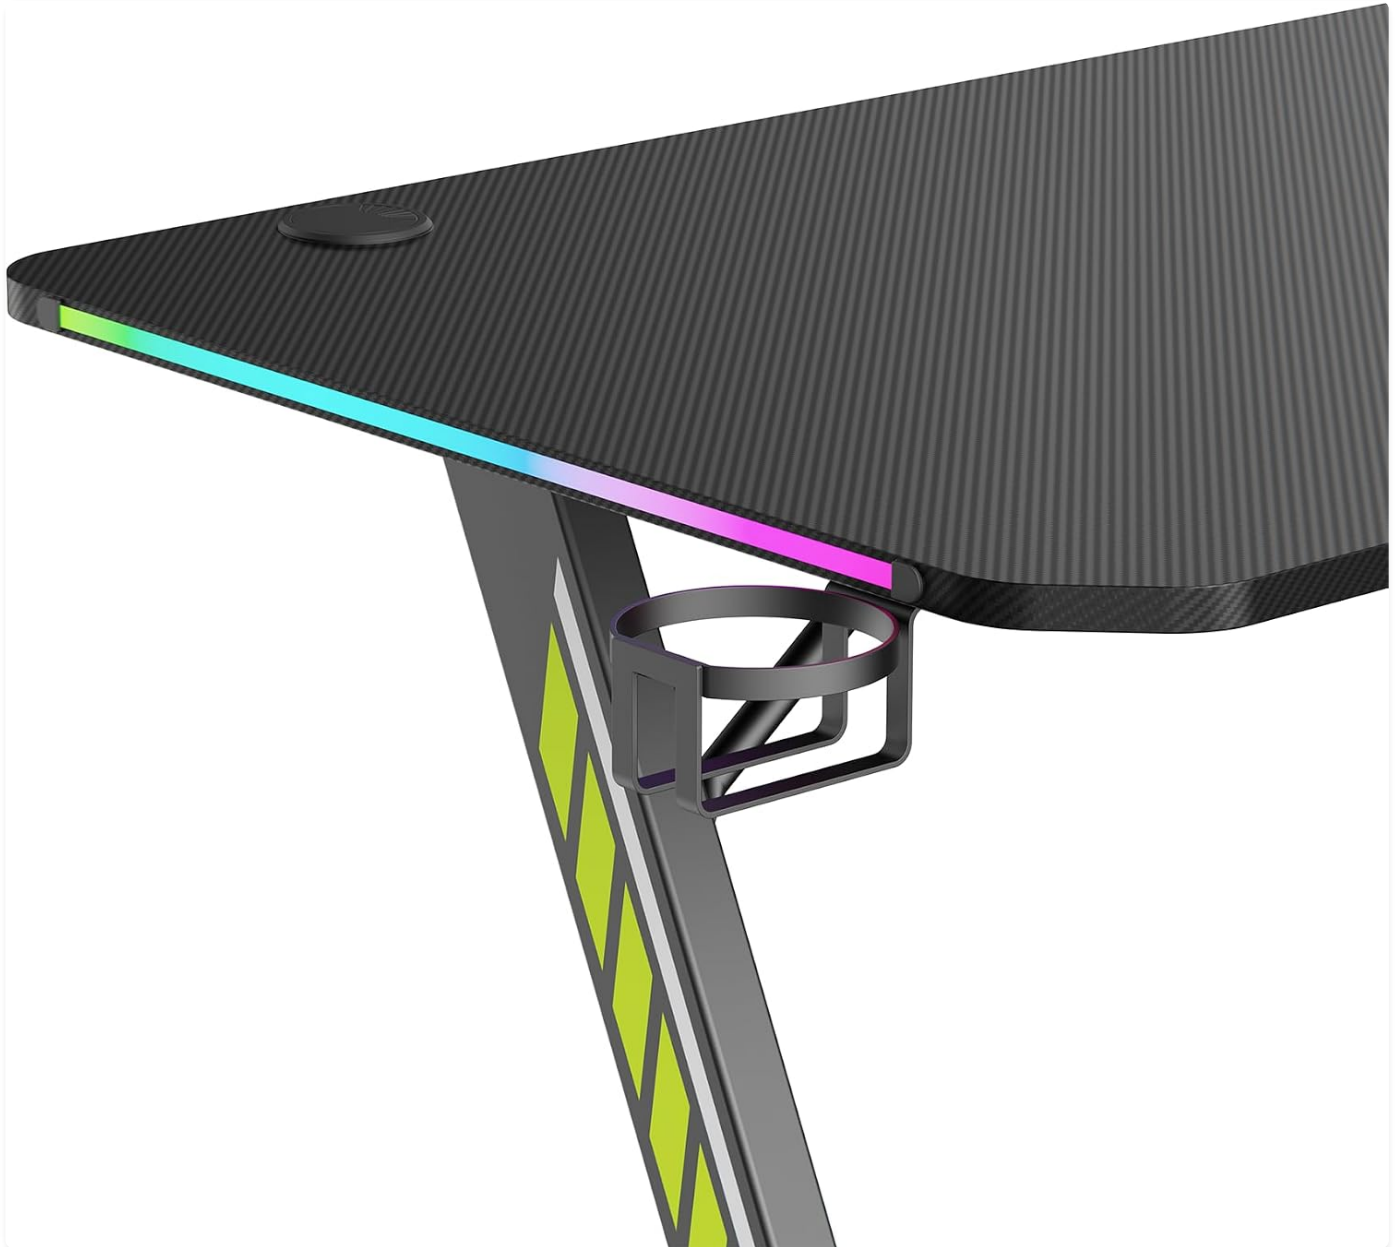


Figure 4: Close-up view of the integrated cup holder and the customizable RGB lighting strip along the edge of the desk.

MAINTENANCE

- **Cleaning:** Wipe the desk surface and legs with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish or RGB strip.
- **Dusting:** Regularly dust the desk to prevent accumulation, especially around the RGB lighting and cable management grommets.
- **Tightening:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary to maintain

stability.

- **Weight Capacity:** Do not exceed the maximum recommended load capacity of 75 kg to prevent damage to the desk.

TROUBLESHOOTING

Problem	Possible Cause	Solution
RGB lighting does not turn on.	Power cable not connected or faulty.	Ensure the USB power cable is securely connected to a working USB port or adapter. Try a different USB power source.
RGB lighting is stuck on one color/mode.	Control buttons unresponsive.	Disconnect and reconnect the USB power. Press the MODE/COLOR buttons firmly.
Desk feels wobbly or unstable.	Loose screws or uneven floor.	Check and tighten all assembly screws. Adjust the leveling feet at the bottom of the desk legs to stabilize.
Accessories (cup holder/headphone hook) are loose.	Not properly installed or tightened.	Ensure accessories are fully inserted into their slots and any securing mechanisms are engaged.

PRODUCT SPECIFICATIONS

Brand	KIMEX
Model Number	150-9001
Desk Design	Computer Desk / Gaming Desk
Dimensions (L x W x H)	120 x 60 x 75 cm (47.2 x 23.6 x 29.5 inches)
Tabletop Thickness	1.5 cm (0.6 inches)
Weight	12 kg (26.4 lbs)
Maximum Load Capacity	75 kg (165 lbs)
Color	Matte Black
Tabletop Material	Melamine (MDF)
Base Material	Alloy Steel
Feet Material	Stainless Steel
Special Features	Customizable RGB Lighting, Headphone Hook, Cup Holder
Assembly Required	Yes

WARRANTY INFORMATION

The KIMEX Gaming Desk 150-9001 comes with a**3-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use.

Please retain your proof of purchase for any warranty claims. For specific terms and conditions, refer to the warranty card included with your product or contact customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues not covered in this manual, please contact KIMEX customer support.

For further information and support, you may visit the official KIMEX store on Amazon:[KIMEX Amazon Store](#).

© 2026 KIMEX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question