

YITAHOME MAYIHnRPyk

YITAHOME 70" Mid Century TV Stand with Fluted Sliding Doors

MODEL: MAYIHnRPYK

Introduction

Thank you for choosing the YITAHOME 70" Mid Century TV Stand. This manual provides detailed instructions for the assembly, operation, and maintenance of your new TV stand. Designed with a sleek fluted aesthetic and a walnut finish, this unit offers both style and practical storage solutions for your living space. Key features include silent sliding doors, adjustable shelving, and integrated cable management.

Please read these instructions carefully before beginning assembly to ensure proper setup and safe use of the product. Keep this manual for future reference.

Safety Information

- Always follow the assembly instructions precisely.
- Ensure all parts are securely fastened before placing any items on the stand.
- This TV stand includes anti-tipping parts. It is crucial to install these to prevent accidental tipping, especially in households with children or pets.
- Do not overload the shelves. Refer to the specifications for weight limits.
- Keep small parts and packaging materials away from children during assembly.
- The design incorporates rounded corners for enhanced safety.

Setup and Assembly

Assembly of your YITAHOME TV stand is designed to be straightforward. All necessary parts are numbered, and a detailed manual is included in the packaging. Please ensure you have all components before starting.

1. **Unpack and Identify Parts:** Carefully unpack all components and hardware. Compare them against the parts list provided in your physical manual to ensure nothing is missing.
2. **Prepare Your Workspace:** Choose a clean, flat, and spacious area for assembly. Lay down a blanket or cardboard to protect your floor and the furniture pieces.

3. **Follow Step-by-Step Instructions:** Refer to the detailed assembly manual provided with your product. Each step is illustrated to guide you through the process.
4. **Secure All Fasteners:** Ensure all screws, bolts, and connectors are tightened securely. Do not overtighten to avoid damaging the wood.
5. **Install Anti-Tipping Hardware:** For safety, attach the provided anti-tipping hardware to the TV stand and the wall according to the instructions.

For a visual guide to the product's features and potential assembly steps, please refer to the video below:

Video: YITAHOME Mid Century Modern Fluted TV Stand. This video showcases the design and features of the TV stand, providing a helpful overview for assembly and use.



Image: Detailed dimensions of the YITAHOME 70 inch TV stand, showing height, width, depth, and internal compartment measurements.

Operating Instructions

The YITAHOME TV stand is designed for ease of use and efficient organization.

- **Sliding Doors:** The fluted doors operate on a smooth, silent track. Gently slide them left or right to access the concealed storage compartments.
- **Adjustable Shelves:** The internal shelves can be adjusted to different heights to accommodate various media devices, books, or decorative items. Locate the pre-drilled holes and use the provided shelf pins to secure the

shelves at your desired level.

- **Cable Management:** Utilize the built-in cable ports located at the back of the stand to route and organize your electronic device cables. This helps maintain a clean and clutter-free entertainment area.
- **Robotic Vacuum Clearance:** The stand features a 4.5-inch bottom clearance, allowing most robotic vacuum cleaners to pass underneath for easy floor cleaning.



USER-CENTERED DESIGN FOR EVERY SPACE

Comprehensive Design from Safety to Storage

Image: A close-up view of the TV stand, illustrating the spacious tabletop, open storage, concealed storage behind the fluted doors, rounded edges for safety, and the robotic vacuum clearance.



Image: A detailed view of the TV stand's side compartment, highlighting the adjustable shelf and the smooth groove for the sliding door mechanism.

Maintenance

To keep your YITAHOME TV stand in optimal condition, follow these simple maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.
- **Heat and Moisture:** Keep the stand away from direct heat sources and areas of high humidity.
- **Regular Checks:** Periodically check all fasteners and tighten them if necessary to maintain stability.

Troubleshooting

If you encounter any issues with your YITAHOME TV stand, please refer to the following common solutions:

- **Missing Parts:** If any parts are missing upon unboxing, please contact YITAHOME customer service immediately with your product model number and a description of the missing parts.
- **Stability Issues:** Ensure all screws and bolts are fully tightened. If the stand still feels unstable, re-check the assembly steps to confirm all components are correctly installed. Ensure the stand is placed on a level surface.
- **Sliding Doors Sticking:** Check the door tracks for any obstructions or debris. Ensure the doors are properly seated in their grooves.
- **Damage During Assembly:** If a part is damaged during assembly, stop and contact customer service for assistance. Do not attempt to force damaged parts together.

Specifications

Feature	Detail
Brand	YITAHOME
Model Number	MAYIHnRPyk
Color	Walnut
Style	Mid-Century
Material Type	Engineered Wood
Overall Dimensions	70 x 15.75 x 23.2 inches (L x W x H)
Item Weight	59.1 pounds
TV Size Compatibility	Up to 75 inches
Robotic Vacuum Clearance	4.5 inches
Storage	Adjustable shelves, concealed storage, open storage
Special Features	Fluted sliding doors, cable management, rounded edges, anti-tipping parts



Image: An illustration demonstrating the YITAHOME TV stand's compatibility with various TV sizes, specifically designed for televisions up to 75 inches.

Warranty and Support

YITAHOME is committed to providing quality products and customer satisfaction. If you have any questions regarding your TV stand, require assistance with assembly, or need to report missing/damaged parts, please do not hesitate to contact our support team.

For customer service and support, please visit the official YITAHOME store on Amazon or refer to the contact information provided in your product packaging. Our team is ready to assist you.

Online Support: [Visit the YITAHOME Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question