

[Manuals.plus](#) /

› [BANDAI](#) /

› BANDAI Digimon Original New Wave 1 Virtual Pet Device Instruction Manual

BANDAI 61134

BANDAI Digimon Original New Wave 1 Virtual Pet Device Instruction Manual

Model: 61134 - Digital Camouflage

INTRODUCTION

The BANDAI Digimon Original New Wave 1 is a virtual pet device that allows users to raise, train, and battle over 100 unique Digimon. This device is an English-language version based on the Digital Monster Ver.20th series, featuring Digimon from the original Digital Monster Ver.1-5. This manual provides essential information for setting up, operating, and maintaining your Digimon virtual pet device.

SAFETY INFORMATION

WARNING: This product contains a button or coin cell battery. Button batteries are hazardous if swallowed. Refer to the battery installation instructions carefully and keep batteries out of reach of small children. If swallowed, seek immediate medical attention.

This device is recommended for ages 8 and up.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Digimon Original New Wave 1 Device (Digital Camouflage) x 1
- Instruction Manual x 1
- CR2032 Battery x 1 (pre-installed or included separately)



Image: Packaging for the Digimon Original New Wave 1 Digital Camouflage device, showing the device inside a clear window.

1. Battery Installation

The device requires one CR2032 battery. If the battery is not pre-installed or needs replacement, follow these steps:

1. Locate the battery compartment on the back of the device.
2. Use a small screwdriver to open the battery compartment cover.
3. Insert the CR2032 battery with the positive (+) side facing up.
4. Securely close the battery compartment cover.

Ensure the battery is inserted correctly to prevent damage to the device.

2. Initial Device Activation and Settings

Upon first use or after battery replacement, the device will prompt you to set the time and date, and to name your device. Use the device's buttons (A, B, C) to navigate and confirm selections.

- **Button A:** Select/Confirm
- **Button B:** Move/Change selection
- **Button C:** Cancel/Return



Image: The Digimon Original New Wave 1 Digital Camouflage device, displaying a Digimon on its screen and showing the three control buttons.

OPERATING YOUR DIGIMON DEVICE

Basic Controls

The device features three primary buttons for interaction:

- **Button A (Left):** Used to select menu options and confirm actions.
- **Button B (Middle):** Used to scroll through menu options and change values.
- **Button C (Right):** Used to cancel an action or return to the previous screen.

Raising Your Digimon

Your Digimon requires constant care to grow and evolve. Key actions include:

- **Feeding:** Provide food and protein to keep your Digimon healthy and strong.
- **Cleaning:** Clean up after your Digimon to maintain its environment.
- **Training:** Engage in training exercises to improve your Digimon's stats.
- **Battling:** Battle other Digimon to test your Digimon's strength and aid in evolution.

- **Healing:** Administer medicine if your Digimon becomes sick or injured.
- **Sleeping:** Ensure your Digimon gets adequate rest. You can turn off the lights when it's time for sleep.

The device features over 100 trainable Digimon, each with unique evolution paths based on care and battle performance.

Device Communication

The Digimon Original New Wave 1 device supports communication with other compatible Digimon Original New Wave devices. This feature allows for battles and the unlocking of special DigiEggs.

- **Special DigiEggs:** To unlock certain special DigiEggs, you must communicate with five separately sold Digimon Original New Wave devices that have different names entered during their initial setup.
- Refer to the in-game communication menu for detailed instructions on initiating communication.



Image: A hand holding the Digimon Original New Wave 1 Digital Camouflage device, demonstrating its portable size and design.

MAINTENANCE

Battery Replacement

When the screen dims or the device behaves erratically, it may be time to replace the CR2032 battery. Follow the battery installation steps outlined in the "Setup" section.

Important: Always dispose of used batteries responsibly according to local regulations.

Cleaning

To clean your device, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the device in water, as this can cause damage.

TROUBLESHOOTING

Problem	Solution
Device does not power on.	Check battery installation. Ensure the CR2032 battery is correctly inserted with the positive (+) side up. Replace with a new battery if necessary.
Screen is dim or flickering.	The battery may be low. Replace the CR2032 battery.
Buttons are unresponsive.	Try removing and reinserting the battery to perform a soft reset. If the issue persists, contact customer support.
Digimon is not evolving.	Evolution depends on various factors including care, training, and battle outcomes. Ensure consistent care and refer to online guides for specific evolution requirements.

SPECIFICATIONS

- **Model Number:** 61134
- **Color:** Digital Camouflage
- **Dimensions (L x W x H):** 0.75" x 1.63" x 2.63"
- **Power Source:** 1 x CR2032 Battery (included)
- **Operation Mode:** Manual, Button Control
- **Number of Players:** 1
- **Age Range:** 8+ years
- **Materials:** Acrylonitrile Butadiene Styrene, Metal, Polycarbonate, Silicone
- **Manufacturer:** Bandai Namco Toys & Collectibles America

WARRANTY INFORMATION

Specific warranty details for the BANDAI Digimon Original New Wave 1 device are typically provided with the product at the time of purchase or can be found on the official BANDAI website. Please retain your proof of purchase for any warranty claims.

SUPPORT

For further assistance, frequently asked questions, or to contact customer support, please visit the official BANDAI website:

www.bandai.com

You may also find helpful resources and community forums dedicated to Digimon virtual pets online.