



[Manuals.plus](#) /

› [AMZCHEF](#) /

› AMZCHEF 24-inch Built-in Electric Convection Wall Oven User Manual

AMZCHEF 24-inch Built-in Electric Convection Wall Oven

AMZCHEF 24-inch Built-in Electric Convection Wall Oven

User Instruction Manual

[Instructions](#) [Maintenance](#) [Introduction](#) [Setup](#) [Operating](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your AMZCHEF 24-inch Built-in Electric Convection Wall Oven. Please read all instructions carefully before installation and use. This electric oven features a 70L capacity, a powerful convection cooking system, and operates on a 240V~ 60Hz power supply with a 2800W maximum output.



Figure 1: AMZCHEF 24-inch Built-in Electric Convection Wall Oven.

2. SETUP AND INSTALLATION

2.1 Installation Dimensions

Ensure your kitchen cabinet opening meets the required dimensions for proper installation. The product dimensions are 23.4" (W) x 22.24" (D) x 23.4" (H). The required built-in dimensions are 22.24" (W) x 21.85" (D) x 23.4" (H). This oven is compatible for installation under any induction hob or gas cooktop.



Figure 2: Detailed dimensions for oven installation.

2.2 Initial Setup

Before first use, ensure the oven is properly installed and connected to a 240V~ 60Hz power supply. Remove all packaging materials and accessories from the oven cavity. Clean the interior with a damp cloth.

Your browser does not support the video tag.

Video 1: Overview of the AMZCHEF 24-inch Wall Oven, demonstrating its features and appearance. This video can assist with initial visual inspection and understanding the product's design.

3. OPERATING INSTRUCTIONS

Your AMZCHEF oven features a touch control panel and 11 functions, including 8 automatic programming modes for ease of use.

3.1 Control Panel Overview



Figure 3: Multifunctional Timer and Safety Lock features on the control panel.

3.2 Basic Operation

1. **Initial Power On:** When connected to power, the screen displays "12:00" and the **clock icon** flashes 6 times. After 3 seconds, the product will enter standby mode.
2. **Set Clock:** To set the current time, touch the **clock icon**. The hour will flash. Use **+/- buttons** to adjust the hour. Touch the **play/pause button** to confirm and move to minutes. Use **+/- buttons** to adjust minutes. Touch the **play/pause button** to confirm. The clock is now set.
3. **Select Heating Mode:** Touch the **function icon (F)** repeatedly to cycle through available heating modes. The selected mode will flash. Confirm by touching the **play/pause button**.
4. **Set Temperature:** After selecting a heating mode, the temperature will flash. Use **+/- buttons** to adjust the temperature. Touch the **play/pause button** to confirm.
5. **Cooking Time Setting:** After setting the temperature, the cooking time will flash. Use **+/- buttons** to adjust the cooking time. Touch the **play/pause button** to confirm.
6. **Set Delay Time:** To set a delay start, touch the **timer icon**. The delay time will flash. Use **+/- buttons** to adjust. Confirm with **play/pause button**.

7. **Timer / Alarm:** To use as a kitchen timer, touch the **timer icon** twice. Set the desired time using **+/- buttons** and confirm with **play/pause button**. An alarm will sound when the time expires.
8. **Pause Function:** During operation, touch the **play/pause button** to pause cooking. Touch again to resume.
9. **Child Safety Lock:** To activate, touch and hold the **lock icon** for 3 seconds. The lock indicator will appear. To unlock, touch and hold the **lock icon** for 3 seconds again.



Figure 4: Visual guide for oven operation, including setting the clock, heating mode, and timer.

3.3 Automatic Programming Modes

The oven includes 8 automatic programming modes: insulation, warming, toasting, pizza, chicken leg mode, bread, cake, and beef. These modes have pre-set temperatures and times for convenience.

2.5Cu.f Large Capacity

Roast the whole chicken with no problem!
Prepare large meals for a party at ease as well as customize small amounts of food for your family.



Figure 5: Display of the 8 quick automatic cooking modes.

3.4 Convection Cooking

The powerful convection system circulates heated air for even baking and faster preheating. This ensures uniform cooking results, especially for larger items.

8 Quick Automatic Cooking Modes

The program mode determines the right type of heating, temperature and cooking time for you. Easy to cook!



Figure 6: All-round three-dimensional heating with the rear circulating fan for even cooking.

3.5 Setting the Clock and Temperature (Video Guides)

Your browser does not support the video tag.

Video 2: Instructions on how to set the clock on the oven's control panel.

Your browser does not support the video tag.

Video 3: Guide on how to set the cooking temperature for the oven.

4. MAINTENANCE AND CLEANING

4.1 Cleaning the Oven Interior

The oven features an upgraded enamel interior for easier cleaning. After each use, allow the oven to cool completely. Wipe down the interior surfaces with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive oven cleaner as directed by the product manufacturer. Avoid using harsh chemicals or abrasive pads that could damage the enamel finish.

4.2 Cleaning the Exterior

Clean the exterior surfaces, including the stainless steel finish and glass door, with a soft cloth and a non-abrasive cleaner suitable for stainless steel. Do not spray cleaners directly onto the control panel. Instead, apply cleaner to a cloth and then wipe the panel.

4.3 Rack Positions

The oven offers 5 rack positions for versatile cooking. Ensure racks are clean and properly positioned before cooking.

Your browser does not support the video tag.

Video 4: Demonstrates general usage of a single wall oven, including rack placement and interior view, which can be helpful for maintenance and cleaning.

5. TROUBLESHOOTING

If you encounter issues with your oven, please refer to the following common troubleshooting steps:

- **Oven not heating:** Check if the oven is properly plugged in and the circuit breaker has not tripped. Ensure a cooking mode and temperature have been selected and confirmed.
- **Display not working:** Verify power supply. If the display is blank, try resetting the circuit breaker.
- **Uneven cooking:** Ensure food is placed centrally on the rack. Utilize the convection fan for more even heat distribution. Avoid overcrowding the oven.
- **Safety lock engaged:** If the control panel is unresponsive, check if the child safety lock is active. Hold the lock icon for 3 seconds to deactivate it.
- **Error codes:** If an error code appears on the display, consult the full user manual (available for download) or contact customer support for assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	AMZCHEF
Model	24-inch Built-in Electric Convection Wall Oven
Color	Stainless Steel
Capacity	2.5 cu. ft. (70 Liters)
Power Supply	240V~ 60Hz
Maximum Output	2800W
Heating Method	Convection
Installation Type	Built-In
Control Type	Touch Control
Functions	11 Functions, 8 Automatic Recipes
Additional Features	Timer Function, Safety Lock

7. WARRANTY AND SUPPORT

AMZCHEF provides a 1-year warranty for this built-in oven. We also offer lifelong technical support and 24-hour premium service. If you encounter any issues or require assistance, please do not hesitate to contact our customer support team.

Contact Information:

Website: www.amzchef.com (for support and full manual download)

Email: support@amzchef.com (example email, please refer to product packaging for exact contact details)