

Decofy tv stand

Decofy Mid Century TV Stand Instruction Manual

Model: tv stand

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Ensure all parts are present and undamaged before beginning assembly. Do not use if any parts are missing or broken.
- Assembly should ideally be performed by two adults to prevent injury and ensure proper construction.
- Use appropriate tools as recommended. An electric screwdriver can significantly ease the assembly process.
- Always attach the provided anti-tipping device to a wall stud to prevent the unit from tipping over, especially in households with children or pets.
- Do not overload the TV stand. Refer to the specifications for weight limits.
- Place the TV stand on a flat, level surface to ensure stability.

2. PACKAGE CONTENTS

Before starting assembly, verify that all components listed in your product's packing list are present. If any parts are missing or damaged, please contact customer support.

Typical components include:

- Wood panels (top, bottom, sides, shelves, back)
- Fluted sliding doors
- Metal handles
- Support legs
- Power outlet unit with extension cord
- Assembly hardware (screws, dowels, cam locks, etc.)
- Anti-tipping hardware

3. ASSEMBLY INSTRUCTIONS

Follow the detailed step-by-step instructions provided in the included assembly manual. Each part is numbered for easy identification.

1. **Unpack and Organize:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface (like a blanket or carpet) to prevent scratches. Group similar hardware together.
2. **Assemble the Frame:** Begin by connecting the main frame components (side panels, bottom panel) using the designated hardware. Ensure all connections are secure.
3. **Install Shelves:** Insert the adjustable shelf pins into the desired holes. Place the adjustable shelves onto these pins. The center shelves are fixed.
4. **Attach Support Legs:** Securely fasten the support legs to the bottom of the unit.
5. **Install Power Outlet:** Integrate the power outlet unit into its designated slot on the top panel. Route the extension cord as instructed.
6. **Mount Sliding Doors:** Carefully attach the fluted sliding doors to their tracks. Ensure they slide smoothly.
7. **Attach Anti-Tipping Device:** This is a critical safety step. Secure the L-shaped anti-tipping parts to the back of the TV stand and then to a wall stud using appropriate wall anchors (not always included, depending on wall type).



Image: Overall dimensions of the Decofy Mid Century TV Stand, showing height, length, and depth, along with internal compartment measurements.

For TVs up to 70"



Image: Illustration of the adjustable shelves and the integrated cable management hole in the back panel, suitable for TVs up to 70 inches.

Humanized Design



Image: Close-up view of the fluted sliding doors, adjustable support legs, and the spacious bottom clearance designed for robotic vacuums.

4. OPERATING INSTRUCTIONS

This TV stand is designed for convenient use and organization of your media devices.

- **Sliding Doors:** The fluted doors slide horizontally along the track. Gently push or pull the doors to open or close the side compartments.
- **Adjustable Shelves:** The shelves in the side compartments can be adjusted to different heights. To adjust, remove the shelf, reposition the metal pins to the desired height, and then place the shelf back onto the pins.
- **Power Outlet:** The integrated power outlet features 2 standard AC outlets (125V/12A), 1 USB port, and 1 Type-C port (5V/2A). Plug the stand's extension cord into a wall outlet. Use the ports to power and charge your electronic devices.
- **Cable Management:** Utilize the cable holes in the back panel to route wires and cords, keeping them organized and out of sight.

TV Stand with Power Outlet



Extension cord
4.9ft (1.5m)



2AC Outlets
125V/12A



USB Ports & Type-C
5V/2A

Image: Detail of the integrated power outlet featuring two AC outlets, one USB port, and one Type-C port, along with the 4.9ft (1.5m) extension cord.

Modern TV Stand



Image: Overview of the TV stand showcasing its waterproof woodgrain tabletop, metal handles, and safe rounded corner design.

5. MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration.
- **Heat and Moisture:** Keep the unit away from excessive heat and moisture. Use coasters under drinks.
- **Hardware:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

6. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

Problem	Possible Cause	Solution
TV stand is wobbly	Loose hardware; uneven floor	Tighten all assembly screws. Ensure the unit is on a level surface; use shims if necessary.
Sliding doors stick or don't move smoothly	Debris in track; misaligned installation	Clean the door tracks. Recheck door installation to ensure proper alignment.
Power outlets/USB ports not working	Extension cord not plugged in; faulty connection	Ensure the stand's extension cord is securely plugged into a functional wall outlet. Check the power outlet unit's connection within the stand.
Missing parts during assembly	Packaging error	Contact customer support with your product model and a description of the missing parts.

7. PRODUCT SPECIFICATIONS

- **Brand:** Decofy
- **Model Number:** tv stand
- **Color:** Walnut
- **Style:** Mid Century TV Stand
- **Material Type:** Engineered Wood
- **Item Dimensions (L x W x H):** 63 x 15.76 x 22.85 inches
- **Item Weight:** 60.5 pounds
- **TV Size Compatibility:** Up to 70 inches
- **Power Outlet:** 2 AC Outlets (125V/12A), 1 USB Port (5V/2A), 1 Type-C Port (5V/2A)
- **Included Components:** Shelves, Power Outlet
- **Additional Features:** Adjustable Shelves, Power Outlet, Sliding Doors, Storage, Rounded Corners

8. WARRANTY AND SUPPORT

This product is typically covered by a 30-day return policy. For specific warranty details or to report missing/damaged parts, please refer to your purchase documentation or contact Decofy customer support directly.

For assistance, please visit the Decofy store on Amazon or contact their customer service as indicated on your purchase receipt.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question