

Manuals.plus /

› Faber /

› Faber Air Fryer Oven 14L FFAO CrispX PRO 14 BK User Manual

Faber FFAO CrispX PRO 14 BK

Faber Air Fryer Oven 14L FFAO CrispX PRO 14 BK User Manual

Model: FFAO CrispX PRO 14 BK | Brand: Faber

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local power supply. Do not immerse the cord, plug, or appliance in water or other liquids. Always plug into a grounded outlet.
- **Heat Safety:** The appliance surfaces become hot during use. Use oven mitts or gloves when handling hot surfaces or accessories. Do not block air vents.
- **Placement:** Place the appliance on a stable, heat-resistant surface, away from walls and other appliances to allow adequate ventilation. Do not place near flammable materials.
- **Children:** This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- **Maintenance:** Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before cleaning or storing.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for repair.

2. PRODUCT OVERVIEW

The Faber Air Fryer Oven FFAO CrispX PRO 14 BK is a versatile kitchen appliance designed for various cooking methods including air frying, grilling, roasting, baking, and toasting. It features a spacious interior and precise controls for optimal results.

Key Features:

- **Capacity:** 14 Liters, suitable for small families and various dishes.
- **Power:** 1400 Watts for efficient and fast cooking.

- **Temperature Control:** Adjustable thermostat from 90°C to 230°C.
- **Cooking Modes:** 6-stage selector for Fry, Grill, Roast, Bake, Toast, and Defrost.
- **Timer:** Built-in 0-60 minute timer with automatic shut-off and bell notification.
- **Visibility:** Large observation window and inner cavity lamp for monitoring food.
- **Rack Positions:** Three adjustable rack positions for cooking flexibility.
- **Heating Elements:** Four stainless-steel heating elements for even heat distribution.
- **Easy Cleanup:** Removable and dishwasher-safe accessories.

Components and Accessories:

The appliance comes with the following components:

- Air Fryer Oven Unit
- Bake Tray
- Crumb Tray
- Tray Handle
- Wire Rack
- Air Fry Basket

EFFORTLESS CLEANUP

Designed for Everyday Convenience.

Removable accessories for quick cleaning
and easy maintenance.



Image: The Faber Air Fryer Oven with its removable accessories, including the bake tray, crumb tray, wire rack, air fry basket, and tray handle, highlighting ease of cleanup.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the air fryer oven and all accessories from the packaging.
2. Remove any protective film, stickers, or packing materials from the appliance.
3. Retain the packaging for future storage or transport.

Placement:

- Place the oven on a flat, stable, and heat-resistant surface.
- Ensure there is at least 10-15 cm of clear space on all sides (back, sides, and top) for proper air circulation.

- Do not place the appliance directly under cabinets or near flammable materials like curtains.

Initial Cleaning:

1. Wipe the exterior of the oven with a damp cloth.
2. Wash all removable accessories (bake tray, crumb tray, wire rack, air fry basket, tray handle) in warm, soapy water. Rinse thoroughly and dry completely.
3. Do not use abrasive cleaners or scouring pads, as these can damage surfaces.

First Use (Burn-off):

Before cooking food, it is recommended to run the oven empty to eliminate any manufacturing odors.

1. Insert the crumb tray at the bottom.
2. Plug the power cord into a grounded electrical outlet.
3. Turn the Temperature knob to 230°C.
4. Turn the Function knob to 'Bake' or 'Roast'.
5. Turn the Timer knob to 15 minutes. The power indicator light will illuminate.
6. Allow the oven to run for 15 minutes. A slight odor or smoke is normal during this initial burn-off.
7. Once the timer rings, turn all knobs to the 'OFF' position and unplug the appliance.
8. Allow the oven to cool completely before its first cooking use.

4. OPERATING INSTRUCTIONS

Control Panel:

The Faber Air Fryer Oven features three control knobs and a power indicator light:

- **Temperature Knob:** Adjusts cooking temperature from 90°C to 230°C.
- **Function Knob:** Selects the desired cooking mode (Air Fry, Bake, Roast, Grill, Toast, Defrost).
- **Timer Knob:** Sets the cooking time from 0 to 60 minutes. Includes an 'OFF' position.
- **Power Indicator Light:** Illuminates when the oven is operating.

FABER
FRANKE'S AIR EXPERT

1400W

POWERFUL PERFORMANCE

Fast Heat. Even Results.

Four stainless-steel heating elements deliver consistent cooking throughout the cavity.



Image: Close-up of the Faber Air Fryer Oven's control panel, showing the temperature, function, and timer knobs, along with the power indicator light.

General Operation:

1. Place the crumb tray at the bottom of the oven.
2. Place food on the appropriate accessory (bake tray, wire rack, or air fry basket) and insert it into one of the three rack positions.
3. Close the oven door securely.
4. Plug the appliance into a grounded power outlet.
5. Turn the **Temperature Knob** to the desired temperature.
6. Turn the **Function Knob** to select the cooking mode.
7. Turn the **Timer Knob** to set the cooking duration. The power indicator light will turn on.
8. When the cooking time is complete, the timer will ring, and the oven will automatically shut off.
9. Carefully remove cooked food using oven mitts and the tray handle.
10. Unplug the appliance after use.

Cooking Modes:

The oven offers 6 versatile cooking modes:

- **Air Fry:** Ideal for crispy foods with little to no oil. Uses the convection fan for even circulation.
- **Bake:** For cakes, cookies, and casseroles.
- **Roast:** Perfect for meats, poultry, and vegetables.
- **Grill:** For browning and crisping the top of dishes.
- **Toast:** For bread, bagels, and frozen waffles.
- **Defrost:** Gently thaws frozen items.



Image: The Faber Air Fryer Oven showcasing its 6-in-1 cooking versatility with a pizza baking inside, surrounded by other prepared dishes like roasted chicken and fries.

Rack Positions:

The oven has three rack positions to accommodate different food sizes and cooking needs:

- **Upper Position:** For grilling, toasting, or quick browning.

- **Middle Position:** Standard position for most baking, roasting, and air frying.
- **Lower Position:** For larger items or slow cooking.



Image: The interior of the Faber Air Fryer Oven, clearly showing the three distinct rack positions for flexible cooking arrangements.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Faber Air Fryer Oven.

Before Cleaning:

1. Always unplug the appliance from the power outlet.
2. Allow the oven and all accessories to cool down completely before cleaning.

Cleaning the Interior:

- Wipe the interior walls with a damp cloth and mild detergent.
- For stubborn stains, a non-abrasive sponge or brush can be used.
- Ensure the interior is dry before next use.

Cleaning the Exterior:

- Wipe the exterior with a soft, damp cloth.
- Do not use abrasive cleaners, harsh chemicals, or steel wool, as these can damage the finish.

Cleaning Accessories:

- The bake tray, crumb tray, wire rack, air fry basket, and tray handle are dishwasher-safe.
- Alternatively, wash them in warm, soapy water, rinse thoroughly, and dry completely.
- Regularly empty and clean the crumb tray to prevent grease buildup.



Image: Illustration of the dishwasher-safe accessories for the Faber Air Fryer Oven, emphasizing easy and convenient cleaning.

Storage:

Ensure the appliance is clean and completely dry before storing. Store it in a cool, dry place.

6. TROUBLESHOOTING

If you encounter any issues with your Faber Air Fryer Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged in. Check the power outlet with another appliance. Turn the Timer knob past 0 to activate.
Food is not cooking evenly.	Overcrowding; incorrect rack position; insufficient preheating.	Avoid overcrowding the oven; cook in smaller batches. Adjust rack position as needed. Allow the oven to preheat fully before adding food.
White smoke coming from the oven.	Grease buildup; fatty foods.	Clean the crumb tray and interior thoroughly. For fatty foods, ensure the crumb tray is clean and consider using less oil.
Food is not crispy.	Too much oil; overcrowding; moisture in food.	Use minimal oil. Do not overcrowd the air fry basket. Pat food dry before cooking. Ensure 'Air Fry' function is selected.
Oven smells during first use.	Manufacturing residue burn-off.	This is normal. Follow the 'First Use (Burn-off)' instructions in Section 3. The smell will dissipate after initial use.

If the problem persists after trying these solutions, please contact Faber customer support.

7. SPECIFICATIONS

Feature	Specification
Brand Name	Faber
Model Number	131.0758.833
Product Dimensions (D x W x H)	33D x 33.5W x 32.4H Centimeters
Capacity	14 Liters
Output Wattage	1400 Watts
Min Temperature Setting	80 Degrees Celsius
Max Temperature Setting	230 Degrees Celsius
Material	Plastic, Stainless Steel
Item Weight	5 Kilograms
Color	Black
Special Features	Timer, View Window, Inner Cavity Lamp, 3 Rack Positions
Dishwasher Safe Parts	Yes (Removable accessories)
Included Components	1 Air oven, Bake Tray, Crumb Tray, Tray Handle, Wire Rack, Air Fry Basket

8. WARRANTY AND SUPPORT

Warranty Information:

Faber products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty covering defects in materials and workmanship under normal use. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of the warranty. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support:

For any product inquiries, technical assistance, or warranty claims, please contact Faber customer support:

- **Manufacturer:** Franke Faber India PVT LTD
- **Customer Service Contact:** 1800-209-3486
- **Manufacturer Address:** 1086/1/2, SANASWADI, TAL - SHIRUR, PUNE - 412208, MAHARASHTRA, INDIA

You can also visit the official Faber website for more information and support resources.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0H2JDFR2Y>

More documents and user manuals: <https://manuals.plus/>