

Electactic JC-18UEX-F

Electactic JC-18UEX-F Mini Beverage Refrigerator User Manual

Model: JC-18UEX-F

1. IMPORTANT SAFETY INFORMATION

Read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded 115V, 60Hz electrical outlet. Do not use extension cords or ungrounded adapters.
- **Placement:** Place the refrigerator on a stable, level surface. Ensure adequate ventilation around the unit (at least 5 inches clearance on sides and back). Avoid direct sunlight or heat sources.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- **Flammable Refrigerant:** This appliance contains R600a refrigerant, which is flammable. Handle with care and ensure proper ventilation. Do not damage the refrigerant circuit.
- **Cleaning:** Always unplug the appliance before cleaning or performing maintenance.

2. PRODUCT OVERVIEW

The Electactic JC-18UEX-F is a compact 0.6 cu ft (18L) mini beverage refrigerator designed for cooling drinks. It features digital temperature control and quiet operation, suitable for various indoor environments.

Key Features:

- 0.6 cu ft (18L) capacity, holds up to 24 standard cans.
- Digital temperature control (40°F to 61°F).
- Quiet compressor operation (≤36 dB).
- Adjustable interior shelf.
- Internal LED lighting.

Components:

- Main Refrigerator Unit
- Adjustable Shelf
- Power Cord (attached)



Image: The mini fridge interior displaying various beverage configurations, including wine bottles and soda cans, illustrating its 0.6 cu ft capacity.

3. SETUP

1. **Unpacking:** Carefully remove all packaging materials, including foam and tape. Inspect the refrigerator for any shipping damage.
2. **Placement:** Choose a location with a firm, level surface that can support the weight of the refrigerator when full. Ensure there is at least 5 inches (12.7 cm) of space around the back and sides for proper air circulation. Avoid placing near heat sources or in direct sunlight.
3. **Initial Cleaning:** Before first use, wipe the interior and exterior of the refrigerator with a soft cloth and mild detergent. Rinse with clean water and dry thoroughly.
4. **Power Connection:** Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in. This allows the refrigerant to settle. Connect the power cord to a dedicated 115V, 60Hz grounded electrical outlet.
5. **Initial Operation:** For optimal performance, run the empty refrigerator for 24 hours after plugging it in to allow the interior to reach a stable temperature.

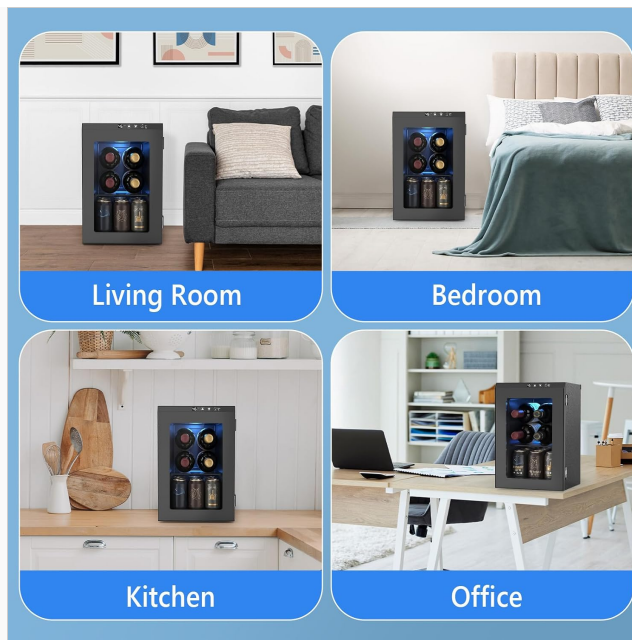


Image: The mini fridge shown in different home and office environments, demonstrating its versatile placement options.

4. OPERATING INSTRUCTIONS

Control Panel:

The control panel is located on the top front of the refrigerator. It includes a digital display and touch buttons for temperature adjustment and light control.

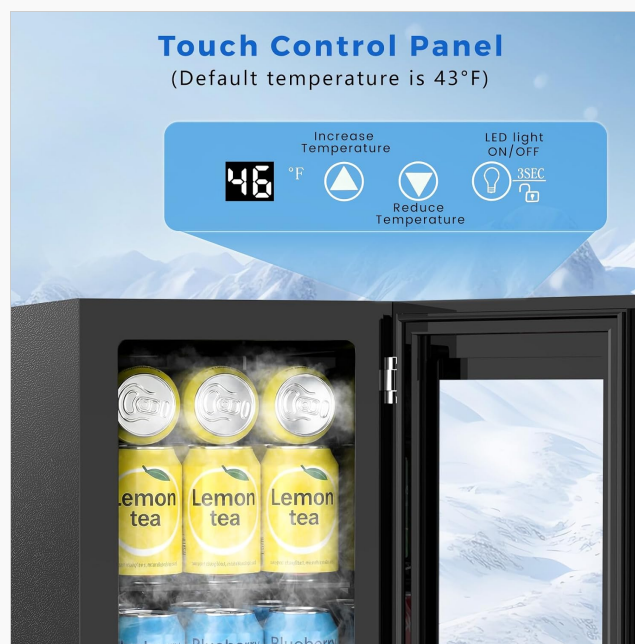


Image: Close-up of the digital touch control panel, showing the temperature display, temperature increase/decrease buttons, and the LED light on/off button.

Temperature Adjustment:

1. Press the **Up Arrow** button to increase the desired temperature.
2. Press the **Down Arrow** button to decrease the desired temperature.
3. The temperature can be set between 40°F (4°C) and 61°F (16°C). The display will show the set temperature for a

few seconds, then revert to the current internal temperature.

LED Light Control:

Press the **Light Bulb** icon button to turn the interior LED light on or off.

Loading Beverages:

- Arrange beverages to allow for proper air circulation. Do not block the internal fan or vents.
- Avoid overfilling the refrigerator, as this can hinder cooling efficiency.
- The adjustable shelf can be repositioned or removed to accommodate different bottle and can sizes.



Image: Visual guide indicating optimal temperature ranges for various beverages such as milk (40-46°F), cola (47-53°F), champagne (54-56°F), and red wine (57-61°F).

5. MAINTENANCE

Cleaning:

1. **Always unplug the refrigerator** before cleaning.
2. **Interior:** Clean the interior with a soft cloth, warm water, and a mild, non-abrasive detergent. Do not use harsh chemicals or abrasive cleaners.
3. **Exterior:** Wipe the exterior with a soft, damp cloth. For stubborn stains, use a mild detergent.
4. **Door Seal:** Regularly clean the door gasket to ensure a tight seal.
5. Ensure all parts are dry before plugging the unit back in.

Defrosting:

This refrigerator features manual defrosting. Frost buildup can occur on the cooling plate. To defrost:

1. Unplug the refrigerator from the power outlet.
2. Remove all beverages and the adjustable shelf.
3. Leave the door open to allow frost to melt naturally. Place a towel at the bottom to absorb water.

4. Once defrosted, clean and dry the interior thoroughly before plugging the unit back in.

Long-Term Storage:

If the refrigerator will not be used for an extended period:

- Unplug the unit.
- Empty and clean the interior.
- Leave the door slightly ajar to prevent odors and mold growth.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power to the unit.	Check if the power cord is securely plugged in. Verify the outlet has power.
Refrigerator is not cooling sufficiently.	Temperature setting is too high; Door is not closed properly; Excessive items inside; Poor ventilation.	Lower the temperature setting. Ensure the door is fully closed. Reduce the number of items. Ensure adequate clearance around the unit.
Excessive noise.	Unit is not level; Items inside are vibrating.	Adjust leveling feet to ensure the unit is stable. Rearrange items to prevent contact with walls or shelves.
Condensation inside the unit.	High humidity; Door opened frequently; Door seal is faulty.	This is normal in humid conditions. Minimize door openings. Check door seal for damage.

7. SPECIFICATIONS

- **Model:** JC-18UEX-F
- **Capacity:** 0.6 cu ft (18 Liters)
- **Dimensions (D x W x H):** 37.7 cm x 27.8 cm x 42 cm (14.8 in x 10.9 in x 16.5 in)
- **Weight:** 9.8 kg (21.6 lbs)
- **Voltage:** 115V, 60Hz
- **Temperature Range:** 40°F - 61°F (4°C - 16°C)
- **Noise Level:** ≤36 dB
- **Cooling Method:** Compressor
- **Defrost System:** Manual
- **Annual Energy Consumption:** 60 kWh/year
- **Included Components:** 1 Beverage Refrigerator, 1 Adjustable Shelf



Image: Diagram illustrating the fast cooling system, highlighting the quiet compressor, air circulation system, and R600a refrigerant.



Image: A visual representation of the refrigerator's quiet operation, showing a noise level of 36 dB compared to other common household sounds.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact Electactic customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Please have your model number (JC-18UEX-F) and purchase date available when contacting support.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question