

[Manuals.plus](#) /

› [MERACH](#) /

› MERACH UltraWalk W60 Walking Pad Treadmill User Manual

## MERACH UltraWalk W60

# MERACH UltraWalk W60 Walking Pad Treadmill User Manual

Model: UltraWalk W60

[Contents](#)   [Setup](#)   [Operation](#)   [Introduction](#)   [Safety Information](#)   [Package](#)  
[Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the MERACH UltraWalk W60 Walking Pad Treadmill. This manual provides essential information for the safe assembly, operation, and maintenance of your new fitness equipment. Please read it thoroughly before first use and retain it for future reference. The UltraWalk W60 is designed to provide a convenient and effective walking and light jogging experience with features like auto incline, Bluetooth connectivity, and a compact design.



Image: The MERACH UltraWalk W60 Walking Pad Treadmill in Dark Gray.

## 2. IMPORTANT SAFETY INFORMATION

---

Before using the MERACH UltraWalk W60, please review the following safety precautions to prevent injury or damage to the equipment.

- Consult your physician before starting any new exercise program.
- Place the walking pad on a flat, stable surface with adequate clearance around it (at least 2 feet on all sides).
- Keep children and pets away from the equipment during operation.
- Ensure the power cord is not pinched or damaged. Do not use if the cord is damaged.
- Wear appropriate athletic footwear.
- Do not step on or off the walking belt while it is in motion.
- Use the safety key/clip (if included) at all times.
- Do not attempt to service the walking pad yourself. Contact customer support for assistance.
- Maximum user weight capacity is 400 lbs. Do not exceed this limit.
- Unplug the walking pad when not in use or before cleaning/maintenance.

### 3. PACKAGE CONTENTS

---

Verify that all components are present in the package:

- MERACH UltraWalk W60 Walking Pad Treadmill
- Remote Control
- Power Cord
- User Manual (this document)
- Lubricant (if included)


## Out of Sight, Never Out of Reach

Easy storage without adding extra hassle



**Magnetic**  
remote storage

**50 mm**  
Easy-Roll Wheels

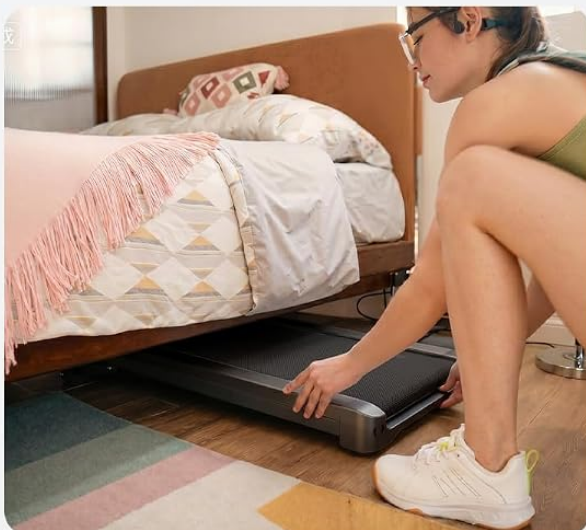

**Ultra-slim**  
**5.1"** profile

## 4. SETUP GUIDE

---

The MERACH UltraWalk W60 is designed for minimal assembly. Follow these steps to prepare your walking pad for use.

1. **Unpacking:** Carefully remove the walking pad from its packaging. Place it on a flat, stable surface.
2. **Placement:** Ensure there is at least 2 feet of clear space behind and to the sides of the walking pad for safe operation.
3. **Power Connection:** Plug the power cord into the walking pad's power port and then into a grounded electrical outlet.
4. **Remote Control:** The remote control is pre-paired. If not, refer to the troubleshooting section or the quick start guide for pairing instructions. The remote can be magnetically docked to the walking pad for convenient storage.
5. **App Connection:**
  - Download the MERACH App from the Apple App Store or Google Play Store.
  - Enable Bluetooth on your mobile device.
  - Open the MERACH App and follow the on-screen instructions to connect to your UltraWalk W60.

# Out of Sight, Never Out of Reach

Easy storage without adding extra hassle



**Magnetic**  
remote storage

**50 mm**  
Easy-Roll Wheels



**Ultra-slim**  
**5.1"** profile

Image: Close-up of the magnetic remote dock and easy-roll wheels for convenient setup and storage.

# Walk Smarter with Merach

Guidance, tracking, and feedback that help you keep going

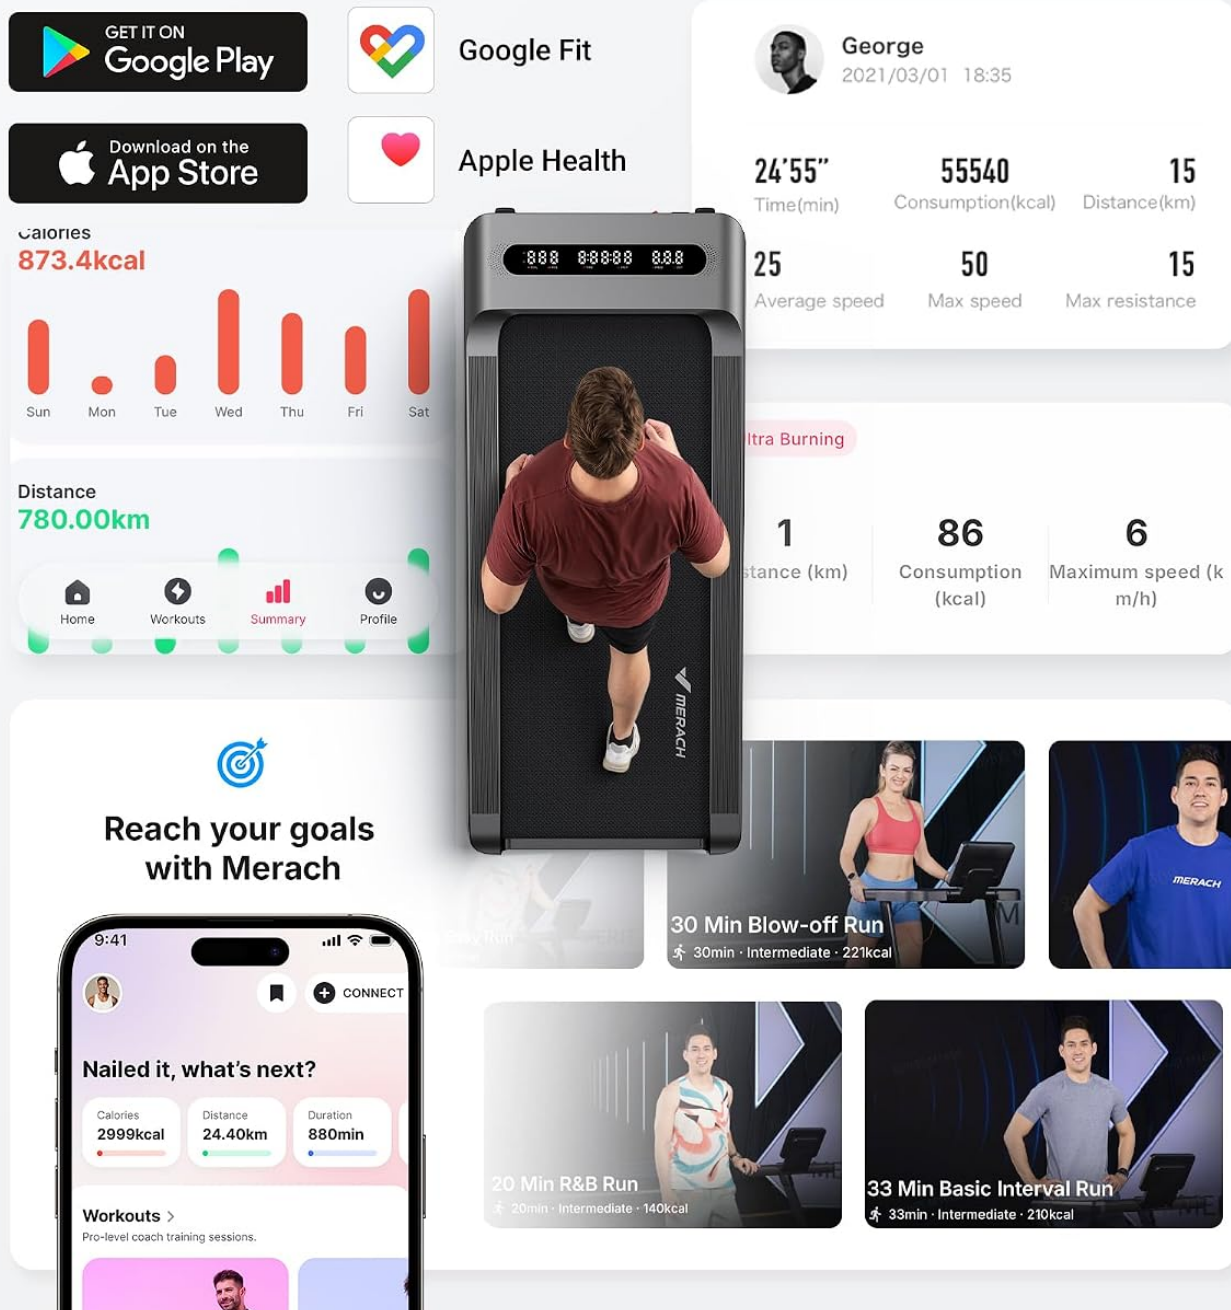 


Image: The MERACH App interface, demonstrating workout tracking and smart control features.

## 5. OPERATING INSTRUCTIONS

Familiarize yourself with the controls and features of your UltraWalk W60.

### 5.1 Basic Operation

- **Power On/Off:** Press the power button on the remote control or the walking pad to turn it on or off.
- **Start/Stop:** Press the Start/Stop button on the remote or app to begin or end a workout.

- **Speed Adjustment:** Use the '+' and '-' buttons on the remote or the app to adjust the walking speed. The speed range is typically 0.6 to 4.0 MPH.
- **Auto Incline:** The UltraWalk W60 features 12 levels of auto incline. Use the incline buttons on the remote or app to adjust the incline percentage (up to 12%).
- **Display:** The integrated LED display shows time, speed, distance, calories, steps, and incline level.

# Same Time, Double the Fat Burn

12% Auto incline for real uphill burn



**70% ↑**

Burn More Calories



**60% ↓** pressure

Gentle on Your Knees



**Engage**

More Muscles



Image: A user demonstrating walking on the MERACH UltraWalk W60 with the 12% auto incline feature engaged.

# Walk Like You Mean It

A wider deck for a more natural stride



Image: A user walking on the MERACH UltraWalk W60, illustrating the spacious 16.5" x 41.3" walking deck.

## 5.2 Smart Features

- **MERACH App Control:** Use the app to control speed, incline, track real-time data, access training modes, and sync with Apple Health and Google Fit. The app also features pause memory.
- **Bluetooth Speaker:** Connect your mobile device via Bluetooth to the walking pad's integrated speaker to enjoy music during your workout.
- **RGB Lighting:** The walking pad features RGB lighting for an enhanced user experience.
- **Child Lock:** For safety, the walking pad includes a child lock function. Refer to the app or quick start guide for

activation/deactivation.



Image: A user enjoying a workout on the MERACH UltraWalk W60 with the RGB lighting and Bluetooth speaker features active.

## 5.3 Official Product Video

Your browser does not support the video tag.

Video: An official MERACH video showcasing the UltraWalk W60 Plus, highlighting its robust build and features. This video demonstrates the product's design and functionality.

## 6. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your MERACH UltraWalk W60.

- **Cleaning:** Wipe down the walking pad with a damp cloth after each use. Avoid using abrasive cleaners or solvents.
- **Lubrication:** The walking belt may require lubrication periodically. Refer to the quick start guide or contact customer support for specific instructions and recommended lubricant.
- **Belt Adjustment:** If the walking belt starts to slip or move off-center, it may need adjustment. Consult the quick start guide or customer support for detailed steps.
- **Storage:** When not in use, the UltraWalk W60 can be stored flat or upright to save space. Use the integrated wheels for easy movement.

# Out of Sight, Never Out of Reach

Easy storage without adding extra hassle



**Magnetic**  
remote storage

**50 mm**  
Easy-Roll Wheels



**Ultra-slim**  
**5.1"** profile



Image: Demonstrates the compact storage options for the MERACH UltraWalk W60, showing it stored both flat under furniture and upright.

## 7. TROUBLESHOOTING

If you encounter issues with your MERACH UltraWalk W60, try the following solutions.

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                            | Possible Cause                                            | Solution                                                                                                    |
|------------------------------------|-----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| Walking pad does not power on.     | Power cord not connected, outlet issue, power switch off. | Ensure power cord is securely plugged in. Check the wall outlet. Verify the power switch on the unit is on. |
| Belt slips or hesitates.           | Belt too loose, insufficient lubrication.                 | Adjust the walking belt tension (refer to manual for specific steps). Apply lubricant if needed.            |
| Remote control not responding.     | Low battery, remote not paired.                           | Replace remote control batteries. Re-pair the remote control (refer to quick start guide).                  |
| App cannot connect to walking pad. | Bluetooth off, app issue, walking pad not powered on.     | Ensure Bluetooth is enabled on your device. Restart the app and walking pad.                                |

For issues not listed here, please contact MERACH customer support.

 
## 8. SPECIFICATIONS

Key technical specifications for the MERACH UltraWalk W60 Walking Pad Treadmill:

| Feature                        | Detail                   |
|--------------------------------|--------------------------|
| Brand                          | MERACH                   |
| Model Name                     | MR-T27 (UltraWalk W60)   |
| Product Dimensions (D x W x H) | 51.4"D x 22"W x 6.5"H    |
| Material                       | Alloy Steel              |
| Maximum Speed                  | 4 Miles per Hour         |
| Maximum Horsepower             | 3.5 HP (Peak) / 1.25 CHP |
| Maximum Incline Percentage     | 12% (Auto Incline)       |
| Maximum Weight Recommendation  | 400 Pounds               |
| Connectivity Technology        | Bluetooth, App           |
| Display Type                   | LED                      |
| Included Components            | Remote Control           |
| Noise Level (Average)          | 53.6 dB                  |

# High-HP Brushless Motor

Built to power heavy-duty load and solid incline

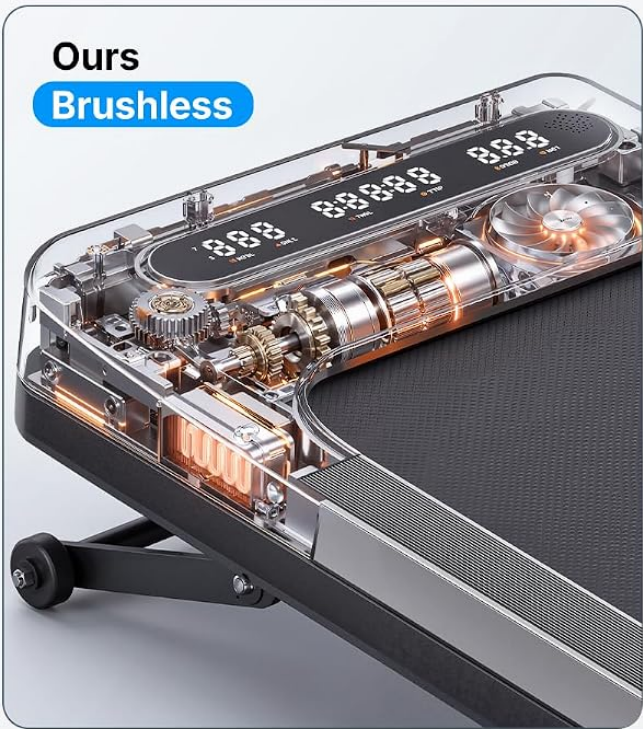

|                              |          |                              |
|------------------------------|----------|------------------------------|
| 15,000 Hours*                | Lifespan | 800 Hours                    |
| 1.25 CHP/3.5 HP Peak         | Power    | 0.75 CHP/Peak HP Only        |
| Average 53.6 dB              | Quiet    | <70 dB                       |
| Hall Sensor: Smooth Starts   | Control  | No Hall Sensor: Jerky Starts |
| Dual-Vent Convection Cooling | Cooling  | Basic Cooling                |

\*Calculated based on motor engineering specifications and design parameters. Actual lifespan may vary by usage frequency and environment

Image: Technical comparison highlighting the MERACH UltraWalk W60's brushless motor, lifespan, power, and quiet operation against other models.

# Built Strong for Heavy Steps

400 lbs – Built to Last

**67.7 LBS**

 
MERACH W60 Plus



Others **43 lbs**



**Thickened Steel**

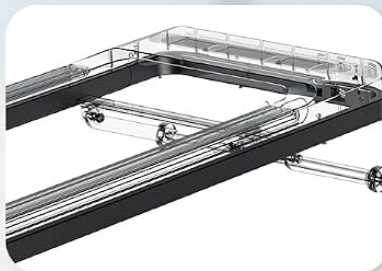

**All-Steel Frame**



**Heavy Duty Build**

Image: Visual representation of the MERACH UltraWalk W60's robust 67.7 lbs steel frame and 400 lbs capacity, compared to lighter alternatives.

## 9. WARRANTY AND CUSTOMER SUPPORT

MERACH provides a **3-year warranty** for the UltraWalk W60 Walking Pad Treadmill. This warranty covers manufacturing defects and ensures a reliable ownership experience.

For any questions, assistance with setup, troubleshooting, or replacement needs, please contact MERACH customer support. Our service team is dedicated to providing responsive and helpful support.

Contact information can typically be found on the MERACH official website or through your purchase platform.

