

[Manuals.plus](#) /

› [iRobot](#) /

› iRobot Roomba 115X Combo Robot Vacuum & Mop User Manual

iRobot 115X Combo

iRobot Roomba 115X Combo Robot Vacuum & Mop User Manual

Model: 115X Combo

INTRODUCTION

The iRobot Roomba 115X Combo is designed to provide efficient vacuuming and mopping for small to medium-sized homes. It features a powerful 15,000 Pa suction for vacuuming and a washable microfiber pad for mopping, capable of covering up to 900 sq ft per charge. Equipped with ClearView™ LiDAR navigation, the robot maps rooms, avoids obstacles, and cleans in neat rows. Its design includes an extended mop pad and edge-sweeping brush for thorough cleaning along baseboards and into corners. The Roomba 115X Combo supports multiple cleaning modes, including SmartScrub for deeper cleaning, and can be controlled via the Roomba Home App or voice commands.

Your browser does not support the video tag.

Video Description: An overview of the iRobot Roomba 115X Combo Robot, highlighting its key features and functionality as a vacuum and mop combination.

WHAT'S IN THE BOX

Upon unboxing your iRobot Roomba 115X Combo, verify that all components are present:

- iRobot Roomba 115X Combo Robot
- Home Base Charging Dock
- Power Cord
- Washable Microfiber Mopping Pad
- Edge-Sweeping Brush (pre-installed or included separately)
- User Manual (this document)

What's in the box.



115 Combo Robot



Charging Dock



Microfiber Mopping Pad



Edge-Sweeping Brush

Image Description: A visual representation of the items included in the product packaging: the Roomba 115 Combo Robot, Charging Dock, Microfiber Mopping Pad, and Edge-Sweeping Brush.

SETUP

1. **Place the Home Base:** Choose a location for the Home Base charging dock against a wall, ensuring there are no obstacles for at least 1.5 feet (0.5 meters) on either side and 4 feet (1.2 meters) in front. Plug in the power cord.
2. **Charge the Robot:** Place your Roomba onto the Home Base. The robot will begin charging. Allow it to fully charge

before its first use (typically 3 hours).


3. **Install the iRobot Home App:** Download the iRobot Home App from your device's app store. Follow the in-app instructions to connect your Roomba to your home's 2.4 GHz Wi-Fi network. This is crucial for accessing all smart features and controls.
4. **Initial Mapping Run:** Once connected, initiate a mapping run through the app. The robot will navigate your home to create a map, which is essential for efficient cleaning and setting up custom zones.

OPERATING INSTRUCTIONS

The Roomba 115X Combo offers flexible control options:

- **Using the iRobot Home App:** The app provides full control over your robot. You can schedule cleaning times, select specific rooms to clean, adjust suction power (4 levels), set mopping water/solution levels (3 levels), choose between 1 or 2 cleaning passes, and activate SmartScrub mode for deeper cleaning.
- **Voice Control:** Connect your Roomba to compatible voice assistants like Alexa, Siri, or Google Assistant for hands-free control.
- **Robot Button:** Press the CLEAN button on the robot to start or pause a cleaning cycle. Press and hold to send the robot back to its Home Base.

Control every detail of your clean

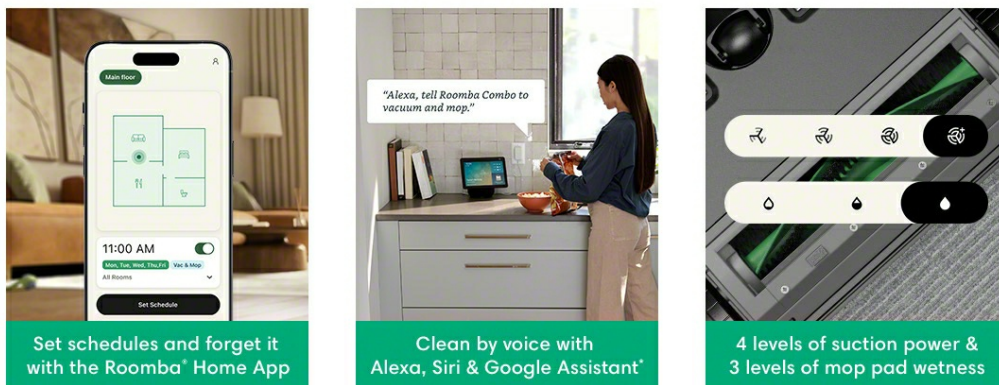

*Works with Alexa, Siri, and Google Assistant-enabled devices. Alexa and all related logos are trademarks of <http://Amazon.com> or its affiliates. Google and Google Home are trademarks of Google LLC. Siri is a registered trademark of Apple Inc., registered in the U.S. and other countries and regions.

Image Description: This image illustrates the various ways to control the Roomba 115X Combo, including scheduling via the Roomba Home App, voice commands with smart assistants, and manual settings for suction and mopping levels.

CLEANING MODES AND FEATURES

- **Vacuum and Mop in One Pass:** The robot simultaneously vacuums with 15,000 Pa suction and mops, lifting dust and light smudges from sealed hard floors.
- **ClearView™ LiDAR Navigation:** Utilizes LiDAR technology to precisely map your home, allowing the robot to clean in neat, efficient rows and navigate around furniture and obstacles, even in low light conditions.
- **Thorough Edge and Corner Cleaning:** An extended mop pad and edge-sweeping brush are designed to reach along baseboards and deep into corners, ensuring comprehensive cleaning.
- **SmartScrub:** This mode mops 2x deeper compared to standard vacuum & mop mode, ideal for tackling tougher messes like coffee spills.
- **No Mop Zones:** Through the app, you can define specific areas as "No Mop Zones" to prevent the robot from

mopping carpets or rugs, keeping them dry and protected.

- **Spot Clean:** Quickly target and clean small spills or messes, such as cereal or muddy pawprints, without initiating a full room cleaning cycle.
- **Anti-Hair-Wrap Brushes:** Designed to resist pet hair tangles, making it suitable for homes with pets.

A washable microfiber pad removes smudges and pawprints with ease.



Set customizable No Mop Zones to keep rugs dry and protected.



Image Description: The underside of the robot vacuum is shown, illustrating how its brushes, powerful suction, and mop pad work together to clean floors and remove debris.

Gets where other robots miss.

An extended mop pad and edge-sweeping brush reach along baseboards and deep into corners for a more complete clean.

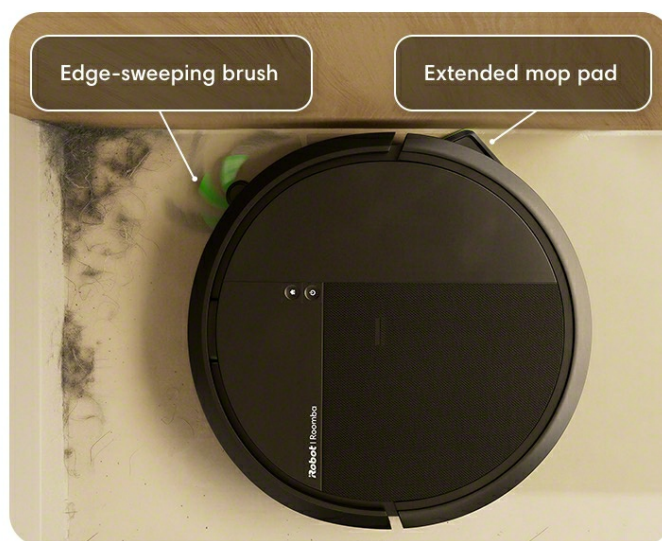


Image Description: The Roomba 115X Combo is depicted cleaning a room, with an overlay showing its LiDAR laser mapping technology at work, precisely navigating and avoiding obstacles.

MAINTENANCE

Regular maintenance ensures optimal performance of your Roomba 115X Combo:

- **Empty the Dust Bin:** After each cleaning cycle, or as needed, remove and empty the dust bin. Tap out debris into a trash receptacle.
- **Clean the Washable Microfiber Pad:** Remove the mopping pad after each use and rinse it thoroughly with water. It can also be laundered as needed.
- **Clean Brushes and Filter:** Periodically check the main brushes and edge-sweeping brush for hair or debris entanglement. Clean or replace them every 3-6 months, or as indicated by the app. Replace the filter every 3-6

months to maintain strong suction performance.

- **Clean Sensors:** Wipe the robot's sensors with a clean, dry cloth to ensure proper navigation.

TROUBLESHOOTING

If you encounter issues with your Roomba 115X Combo, refer to the following common solutions:

Problem	Solution
Robot not charging or turning on	Ensure the Home Base is plugged in and the robot is correctly docked. Check for debris on charging contacts. If issues persist, the battery may need replacement.
Robot not connecting to Wi-Fi/App	Confirm your Wi-Fi network is 2.4 GHz. Restart your router and the robot. Re-attempt the setup process in the iRobot Home App.
Poor cleaning performance	Empty the dust bin. Clean or replace brushes and filter. Ensure the mopping pad is clean and properly attached. Check for blockages in the suction path.
Robot getting stuck frequently	Clear obstacles like loose cables, small toys, or thick rugs from the cleaning path. Use the app to set Keep Out Zones or No Mop Zones for problematic areas. Clean cliff sensors.
Robot making unusual noises	Check brushes and wheels for tangled hair or debris. Ensure all components are correctly installed.

For more detailed troubleshooting or technical support, please visit the official iRobot support website or contact their customer service.

SPECIFICATIONS

Feature	Detail
Brand	iRobot
Model Name	Roomba 115X Combo
Model Number	Y416020
Suction Power	15,000 Pa
Navigation Type	LiDAR Navigation (ClearView™)
Battery Life	Up to 173 minutes
Battery Type	Lithium Ion
Control Method	App Control, Voice Control, On-robot Button
Filter Type	Cartridge
Form Factor	Round
Item Dimensions (L x W x H)	11.73"L x 11.93"W x 3.29"H

Feature	Detail
UPC	885155060440

WARRANTY AND SUPPORT

For information regarding the product warranty, registration, and customer support, please refer to the official iRobot website or the documentation included with your purchase. iRobot provides resources for product registration, troubleshooting guides, and direct contact for technical assistance.
Visit the [iRobot Store on Amazon](#) for additional product information and accessories.

© 2026 iRobot Corporation. All rights reserved. Roomba is a registered trademark of iRobot Corporation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0H34PBVQB>

More documents and user manuals: <https://manuals.plus/>