

## Monster TVLink 300

# Monster TVLink 300 Wireless TV Headphones User Manual

Model: TVLink 300

## 1. INTRODUCTION

The Monster TVLink 300 wireless TV headphones are designed to provide a personal audio experience for television viewing. This system includes comfortable over-ear headphones and a transmitter charging base, allowing for clear, synchronized sound without disturbing others. The headphones feature Bluetooth 5.3 for stable connectivity and a long battery life for extended listening sessions.

## 2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Monster TVLink 300 Wireless Headphones
- Transmitter Charging Base
- Optical Audio Cable
- 3.5mm AUX Audio Cable
- RCA Adapter Cable
- USB-C Charging Cable
- User Manual



Image: Components of the Monster TVLink 300 system, including headphones, charging base, and various audio cables.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Monster TVLink 300 headphones and transmitter base.



Image: Labeled diagram of the headphones and transmitter base, indicating buttons, ports, and indicator lights.

#### Headphones

- **On/Off button:** Powers the headphones on or off.
- **Volume up button:** Increases audio volume. Also functions as 'previous song' in Bluetooth mode.
- **Volume down button:** Decreases audio volume. Also functions as 'next song' in Bluetooth mode.
- **Multi-function button (MFB):** Controls playback (play/pause), answers/ends calls.
- **USB-C charging port:** For direct charging of headphones.
- **Indicator light:** Shows power and connection status.
- **Mic:** Built-in microphone for calls.

#### Transmitter Charging Base

- **USB-C charging port:** Powers the transmitter base.

- **Optical input:** Connects to TV via optical cable.
- **Aux-in port:** Connects to TV via 3.5mm AUX cable.
- **LED indicator light:** Shows connection status and charging status.
- **Charging interface:** For automatic charging of headphones when placed on the base.

## 4. SETUP INSTRUCTIONS

Follow these steps to set up your Monster TVLink 300 system:

1. **Power the Transmitter Base:** Connect the USB-C charging cable to the transmitter base and plug the other end into a power adapter (not included) or a USB port on your TV. The LED indicator on the base will light up.
2. **Connect to your TV:** Choose one of the following audio connection methods:
  - **Optical (Recommended):** Connect the optical audio cable from the transmitter's optical input to your TV's optical audio output (often labeled 'Digital Audio Out' or 'Optical Out'). Ensure your TV's audio output is set to 'PCM' format if necessary.
  - **AUX:** Connect the 3.5mm AUX audio cable from the transmitter's Aux-in port to your TV's 3.5mm audio output (headphone jack).
  - **RCA:** If your TV has RCA audio outputs (red and white ports), use the RCA adapter cable with the 3.5mm AUX cable to connect to the transmitter's Aux-in port.

# Flexible Connection Options

Three ways to link the headphones to TV, choose freely what fits best.



Image: Flexible connection options for the transmitter base, including Optical, AUX, and RCA.

- 3. Charge the Headphones:** Place the headphones onto the transmitter charging base. Ensure the charging contacts align. The headphone indicator light will show charging status. A full charge provides up to 45 hours of playback.
- 4. Power On Headphones:** Press and hold the On/Off button on the headphones until the indicator light illuminates. The headphones will automatically connect to the transmitter base.

Once connected, audio from your TV will be transmitted wirelessly to your headphones.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Operation

- **Power On/Off:** Press and hold the On/Off button on the headphones for approximately 3 seconds.
- **Volume Control:** Use the Volume Up (+) and Volume Down (-) buttons on the headphones to adjust the listening volume.
- **Automatic Connection:** After initial setup, the headphones will automatically connect to the transmitter base when powered on and within range.

## 5.2 Charging

To charge the headphones, simply place them onto the transmitter charging base. The headphones will begin charging automatically. The indicator light on the headphones will show charging status (e.g., red for charging, off or blue for fully charged, refer to specific LED behavior in the quick start guide if available). You can also charge the headphones directly using a USB-C cable connected to their USB-C port.

## 5.3 Bluetooth Mode (Independent Use)

The headphones can also be used independently via Bluetooth 5.3 with other devices like smartphones or tablets.

1. **Pairing:** With the headphones powered off, press and hold the On/Off button for approximately 5-7 seconds until the indicator light flashes rapidly (indicating pairing mode).
2. **Connect:** On your device, enable Bluetooth and select "Monster TVLink 300" from the list of available devices.
3. **Playback Control:** Use the Multi-function button (MFB) for play/pause, and the Volume Up/Down buttons for next/previous track.

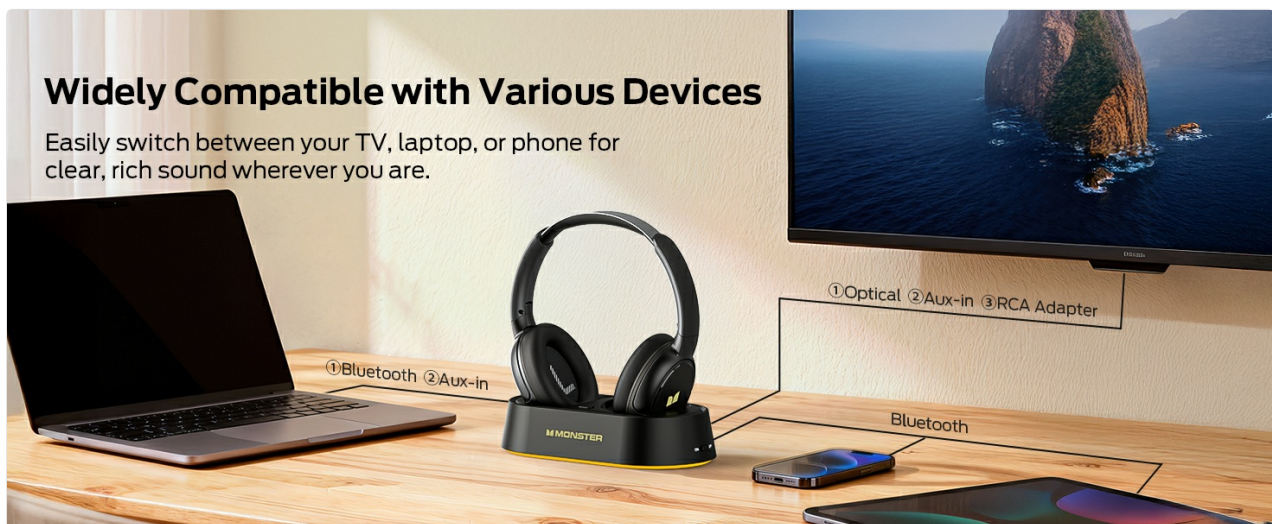


Image: The Monster TVLink 300 system demonstrating compatibility with various devices including TV, laptop, and smartphone.

## 6. MAINTENANCE

Proper care ensures the longevity and performance of your headphones:

- **Cleaning:** Use a soft, dry cloth to clean the headphones and transmitter base. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones on the charging base or in a cool, dry place. The foldable design allows for compact storage.
- **Battery Care:** To maintain battery health, avoid fully discharging the headphones frequently. Charge them regularly, even if not used for extended periods.
- **Avoid Moisture:** Keep the device away from water and excessive humidity.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Possible Cause	Solution
No sound from headphones.	Headphones not powered on or not connected. TV audio output settings incorrect. Cables loose or incorrect.	Ensure headphones are powered on and charged. Check that the transmitter base is powered and connected to the TV. Verify TV audio output is set to the correct source (e.g., PCM for optical). Re-seat all audio cables.
Audio lag or delay.	Interference or distance from transmitter.	Ensure headphones are within optimal range of the transmitter. Minimize obstacles between headphones and transmitter.
Headphones not charging on base.	Improper placement on base. Base not powered. Dirty charging contacts.	Ensure headphones are correctly seated on the base and contacts align. Verify the transmitter base is powered. Clean charging contacts on both headphones and base with a dry cloth.
Cannot pair headphones via Bluetooth.	Headphones not in pairing mode. Device Bluetooth off.	Ensure headphones are powered off, then press and hold the On/Off button for 5-7 seconds to enter pairing mode. Verify Bluetooth is enabled on your device.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	Monster TVLink 300
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Ear Placement	Over Ear
Form Factor	Over Ear
Battery Life	Up to 45 Hours
Compatible Devices	Television
Additional Features	Foldable
Headphone Jack	No Jack
Color	Black
Manufacturer	Monster
Parcel Dimensions	21.3 x 19.8 x 8.4 cm; 680 g

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Monster website. Keep your purchase receipt for warranty claims.