

[Manuals.plus](#) /

› [BOOX](#) /

› BOOX Go 6 (Gen2) E-Reader User Manual

BOOX Go 6 (Gen2)

BOOX Go 6 (Gen2) E-Reader User Manual

Your guide to setting up, operating, and maintaining your BOOX Go 6 (Gen2) ePaper device.

INTRODUCTION

The BOOX Go 6 (Gen2) is a compact and lightweight 6-inch monochrome ePaper e-reader designed for an optimal reading experience. Featuring an E-Ink screen and running on Android, it offers versatility for accessing various reading applications and content. This manual provides essential information to help you get started and make the most of your device.



Image: The BOOX Go 6 (Gen2) e-reader in Plum color, showcasing its sleek design.

SETUP

1. Unboxing and Initial Charge

Upon opening the package, ensure all components are present. Your BOOX Go 6 (Gen2) includes:

- BOOX Go 6 (Gen2) E-Reader
- USB Charging Cable

Before first use, fully charge your device using the provided USB cable and a compatible power adapter (not included). The charging port is typically located at the bottom of the device.

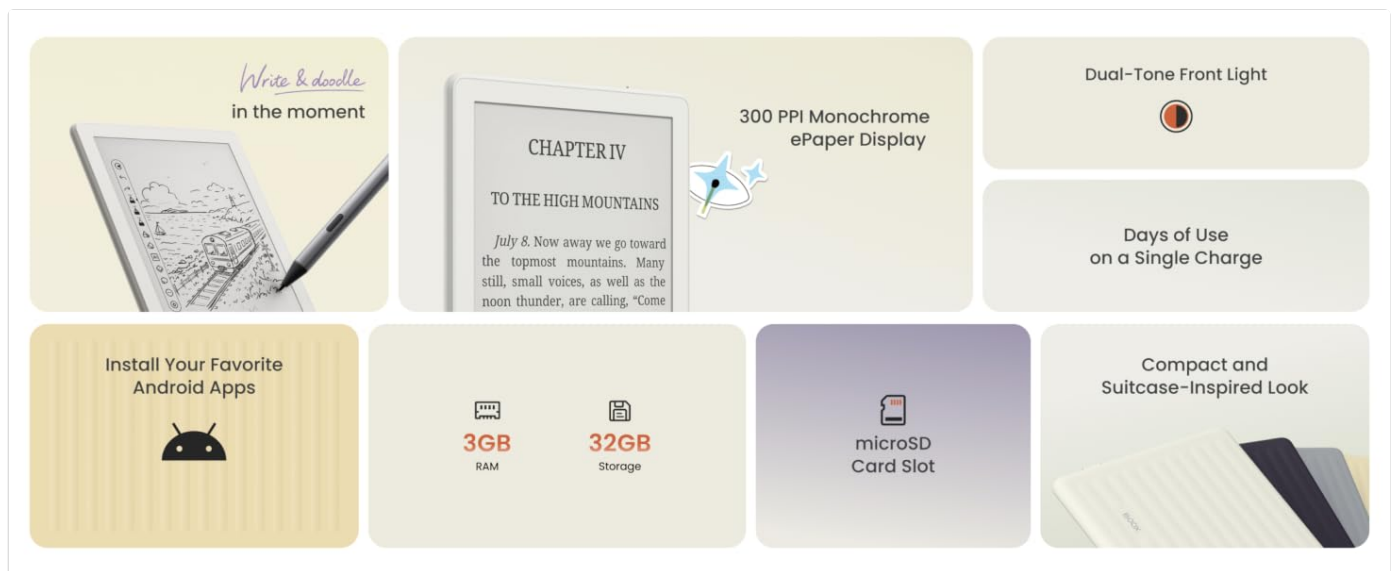


Image: The BOOX Go 6 (Gen2) e-reader, charging cable, and other packaging contents.

2. Powering On/Off

To power on, press and hold the power button (usually on the top or side) for a few seconds until the screen activates. To power off, press and hold the power button, then select "Power Off" from the on-screen options.

3. Initial Configuration

Follow the on-screen prompts to complete the initial setup, which includes selecting your language, connecting to a Wi-Fi network, and logging into your Google account (optional, but recommended for app access).

OPERATING INSTRUCTIONS

1. Navigating the Interface

The BOOX Go 6 (Gen2) features a responsive touchscreen for navigation. Swipe to browse, tap to select, and use pinch-to-zoom gestures where applicable. The Android operating system provides a familiar interface for most users.



Image: The BOOX Go 6 (Gen2) home screen showing various application icons, including Google Play Books, Audible, and the Play Store.

2. Reading Books and Documents

Open your preferred reading application (e.g., Kindle, Google Play Books, or the built-in reader) to access your library. Tap on a book cover to open it. Swipe left or right to turn pages. The E-Ink display provides a paper-like reading experience, reducing eye strain.



Image: The BOOX Go 6 (Gen2) e-reader displaying a book on a light-colored surface, highlighting the clear E-Ink text.

3. Adjusting Display Settings

Access the quick settings panel by swiping down from the top of the screen. Here you can adjust the front light brightness and color temperature (if available), switch between display modes (e.g., normal, bold, night mode), and customize font settings for optimal readability.



Image: The BOOX Go 6 (Gen2) e-reader interface displaying options for different reading modes such as Original, Bold, Night, and Relaxed.



Image: The BOOX Go 6 (Gen2) e-reader displaying front light adjustment controls for brightness and warmth, with a user reading in a dimly lit environment.

4. Installing Applications

As an Android device, the BOOX Go 6 (Gen2) supports installing various applications from the Google Play Store. Navigate to the Play Store app, search for your desired reading or productivity apps, and install them as you would on any Android tablet or phone.

5. File Management and Storage

The device comes with 32 GB of internal storage. You can manage your files, including books, documents, and downloaded apps, using the built-in file manager. The BOOX Go 6 (Gen2) also supports a microSD card slot for expandable storage, allowing you to carry an extensive library.

6. Using Bluetooth

The BOOX Go 6 (Gen2) is Bluetooth compatible. You can connect Bluetooth headphones or speakers for audiobooks, or pair with other Bluetooth accessories for enhanced functionality.

MAINTENANCE

1. Cleaning the Device

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials. Clean the device body with a dry, soft cloth.

2. Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. For long-term storage, charge the battery to about 50% and power off the device. Regular charging and discharging within normal operating temperatures will help maintain battery health.

3. Software Updates

BOOX provides regular firmware updates to improve performance, add new features, and enhance security. It is recommended to keep your device's software up to date. You can check for updates in the device settings under "System Updates." BOOX commits to at least 3 years of firmware updates for each product.

TROUBLESHOOTING

Device Not Turning On

- Ensure the device is sufficiently charged. Connect it to a power source for at least 30 minutes.
- Press and hold the power button for 10-15 seconds to perform a forced restart.

Screen Not Responding

- Restart the device.
- Ensure the screen is clean and free of debris.
- If the issue persists, a factory reset might be necessary (see below).

Connectivity Issues (Wi-Fi/Bluetooth)

- Toggle Wi-Fi/Bluetooth off and on in the settings.

- Restart your router or Bluetooth accessory.
- Ensure you are within range of the network or device.

Performing a Factory Reset

If you encounter persistent software issues, a factory reset can resolve them.**Warning:** A factory reset will erase all data on your device. Back up important files before proceeding. To perform a factory reset, go to *Settings > System > Reset options > Erase all data (factory reset)*.

SPECIFICATIONS

Brand	BOOX
Model Name	BOOX Go 6 (Gen2)
Display Technology	E-Ink
Screen Size	6 Inches
Operating System	Android
Memory (RAM)	3 GB
Storage Capacity	32 GB
Connectivity	USB, Bluetooth
Human Input	Touchscreen
Color	Plum
Product Dimensions (L x W x H)	14.9 x 0.7 x 10.9 cm
Item Weight	160 Grams
Included Components	Charging cable

WARRANTY AND SUPPORT

Warranty Information

The BOOX Go 6 (Gen2) comes with an official 2-year customer service warranty. This warranty covers manufacturing defects and ensures support for your device.

Customer Support

Should you encounter any issues or have questions regarding your BOOX tablet, please visit the official BOOX help center. You can submit your inquiries there, and expect a response within 24 hours.

BOOX also provides 10 GB of free cloud storage for every user and guarantees at least 3 years of firmware updates for each product, reflecting a commitment to continuous improvement and user satisfaction.

For more information, visit the [BOOX Brand Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question