

[Manuals.plus](#) /

› [HYSEYY](#) /

› HYSEYY Rolling Clothes Rack Model 1321 Instruction Manual

HYSEYY 1321

HYSEYY Rolling Clothes Rack Model 1321 Instruction Manual

Model: 1321

1. PRODUCT OVERVIEW

The HYSEYY Rolling Clothes Rack Model 1321 is a heavy-duty, freestanding garment rack designed for organizing clothing and accessories. Constructed from carbon steel, it features a reinforced X-brace design for stability and includes multiple storage options such as hanging rods and mesh shelves. Its mobile design with lockable wheels allows for easy relocation.





Image 1.1: Fully assembled HYSEYY Rolling Clothes Rack, showcasing its capacity for hanging clothes and storing items on shelves. The rack is black with a sturdy metal frame.

2. PRODUCT FEATURES

- **Sturdy & Stable Construction:** Crafted from high-quality carbon steel with a welded frame and X-shaped cross-bracing for enhanced stability. Supports a total weight capacity of up to 380 lbs.
- **Versatile Storage:** Includes two hanging rods and three mesh shelves. The hanging rods accommodate various garment lengths, while shelves provide space for folded items, shoes, and small luggage.
- **Extra Depth Design:** With a depth of 16.24 inches, clothes hang freely without crowding or pressing against walls, preventing wrinkles and maintaining cleanliness.
- **Smooth Mobility:** Equipped with four 360-degree rotating wheels, two of which are lockable, allowing for easy movement across different floor types and secure positioning.
- **Adjustable Components:** Both middle shelves and hanging rods can be adjusted up to 3.54 inches to suit different storage needs.

16.54-Inch Wider Design

Extra Width Keeps Clothes Off the Wall

16.54in



Image 2.1: Detail view highlighting the X-shaped cross-bracing on the back and the welded frame construction, which contribute to the rack's overall stability and durability.

Sturdy & Stable



Image 2.2: Detailed view of the lockable wheels, illustrating their 360-degree rotation capability and the locking mechanism for secure placement.

3. SETUP AND ASSEMBLY

The HYSEYY Rolling Clothes Rack is designed for quick and easy assembly, typically taking about 20 minutes. All necessary tools and components are included. Follow these steps for proper setup:

1. Unpack all components and verify against the parts list (not provided in this manual, refer to packaging).
2. Begin by attaching the base frames to the vertical support poles. Ensure all connections are secure.
3. Install the middle shelves and hanging rods. These are adjustable; position them according to your preferred height for garments.
4. Attach the X-shaped cross-bracing to the back of the frame for added stability.
5. Securely attach the top shelf to the upper vertical poles.
6. Ensure all metal screw connections are tightened. The rack is built with all-metal connections and no plastic parts

for a solid structure.

7. For family safety, always use the included anti-tip hardware to secure the rack to your wall, especially if it will be heavily loaded.



Image 3.1: An exploded diagram illustrating the main components and their connection points for assembling the clothes rack.

Your browser does not support the video tag.

Video 3.1: Official product video demonstrating the assembly process and key features of the HYSEYY Rolling Clothes Rack Model 1321. This video provides a visual guide to setting up the rack.

4. OPERATING INSTRUCTIONS

4.1 Moving the Rack

To move the clothes rack, ensure the two lockable wheels are in the unlocked position. Gently push or pull the rack to its desired location. The 360-degree rotating casters allow for smooth movement across various floor surfaces.

4.2 Locking the Wheels

Once the rack is in its desired position, engage the brakes on the two lockable wheels. This will secure the rack in place and prevent unintended movement.

4.3 Adjusting Shelves and Rods

The middle shelves and hanging rods can be adjusted in height. To adjust, loosen the securing mechanisms (refer to the assembly diagram for specific points), reposition the shelf or rod to the desired height (up to 3.54 inches of adjustment), and then re-secure the mechanisms firmly.

5. MAINTENANCE

- **Cleaning:** Wipe the carbon steel frame and mesh shelves with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically check all screw connections and the X-brace for tightness. Re-tighten if necessary to maintain stability.
- **Weight Distribution:** Distribute clothing and items evenly across the hanging rods and shelves to prevent undue stress on any single point and maintain the rack's balance. Do not exceed the maximum weight capacity of 380 lbs.

6. TROUBLESHOOTING

6.1 Rack Wobbles After Assembly

- Ensure all screws and connections are fully tightened.
- Verify that the X-shaped cross-bracing is correctly installed and secured.
- Check if the rack is on an even surface.

6.2 Wheels Not Rolling Smoothly

- Check if the wheel locks are engaged. Disengage them for movement.
- Inspect wheels for any debris (e.g., hair, lint) that might be obstructing their rotation. Clean if necessary.

6.3 Clothes Touching the Wall

- Ensure the rack is positioned with sufficient clearance from the wall. The 16.24-inch depth is designed to prevent this when properly placed.

7. SPECIFICATIONS

Feature	Specification
Brand	HYSEYY
Model Number	1321
Material	Carbon Steel
Color	Black
Product Dimensions (D x W x H)	16.54" x 33.46" x 74.8"
Item Weight	17.4 pounds

Feature	Specification
Maximum Weight Recommendation	380 pounds
Number of Shelves	3
Installation Type	Free Standing
Additional Features	Heavy Duty, Lockable Wheel, Portable, Space Saver, With Adjustable Shelves



Quick & Easy Assembly

20 Minutes to a New Wardrobe

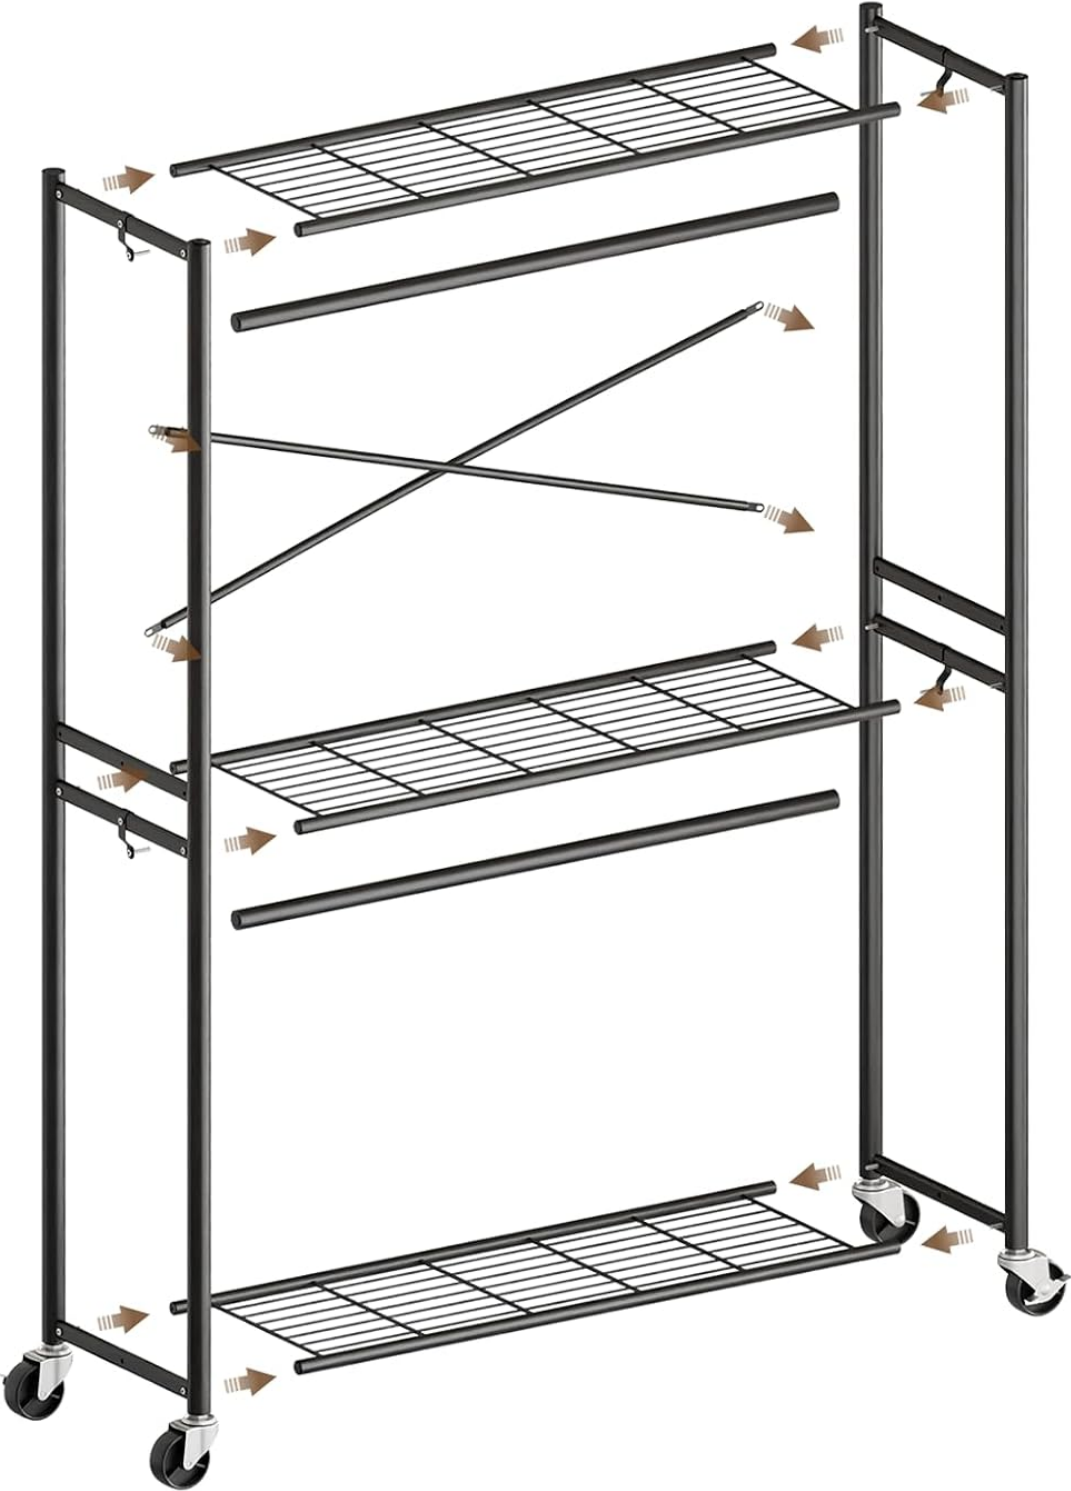


Image 7.1: Visual representation of the product dimensions: 16.54 inches deep, 33.46 inches wide, and 74.8 inches high.

8. CUSTOMER SUPPORT

For any inquiries, technical support, or issues before or after your purchase, please contact our dedicated after-sales team. You can reach us via the Amazon Message Center. Your satisfaction is our priority.

Warranty Information: Specific warranty details are typically provided with your purchase documentation. Please refer to the warranty card or product packaging for comprehensive information regarding coverage and terms.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question