

Ninja FS701BL

Ninja SLUSHi Twist Smart Frozen Drink Maker

Model: FS701BL

INTRODUCTION

The Ninja SLUSHi Twist Smart Frozen Drink Maker is designed to create a variety of frozen beverages, including slushies, cocktails, and milkshakes. This appliance features Dual SlushAssist technology, allowing for the preparation of two distinct flavors simultaneously. This manual provides essential information for the safe and efficient operation, maintenance, and care of your device.

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using the Ninja SLUSHi Twist. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the appliance is placed on a stable, level surface away from the edge of the countertop.
- Do not immerse the motor base, cord, or plug in water or other liquids.
- Always unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils out of the vessel during operation to prevent injury.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WHAT'S INCLUDED

Your Ninja SLUSHi Twist package includes the following components:

- Motor base with WhisperChill Compressor
- Two (2) 72-oz Vessels (48-oz max liquid fill per vessel)
- Two (2) Premium Dual Dispense Handles
- Two (2) Auger Systems
- Two (2) Condensation Catches
- Three-Piece Drip Tray

SETUP

Before first use, wash all removable parts in warm, soapy water. Rinse thoroughly and dry. Place the motor base on a clean, dry, and level surface.

1. **Assemble the Drip Tray:** Place the three-piece drip tray components together and slide it into the designated slot at the front base of the unit.
2. **Install Condensation Catches:** Attach the two condensation catches below each vessel's dispensing area.
3. **Insert Auger Systems:** Place an auger system into each vessel, ensuring it is securely seated.
4. **Attach Vessels:** Securely place each 72-oz vessel onto its corresponding side of the motor base. Ensure they click into place.
5. **Attach Dispense Handles:** Insert the premium dual dispense handles into the front of each vessel.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: The Ninja SLUSHi Twist Smart Frozen Drink Maker, fully assembled and ready for use, showcasing its dual vessel design.

OPERATING INSTRUCTIONS

The Ninja SLUSHi Twist utilizes Dual SlushAssist Technology to intelligently prepare your frozen drinks.

Preparing Ingredients

No ice is needed for operation. Simply pour your desired liquid ingredients into the vessels. Each vessel has a maximum liquid fill capacity of 48 oz. Ensure ingredients are at refrigerator temperature for optimal results.

Making a Single Flavor Slush

1. Pour your chosen liquid into one of the vessels, observing the 48-oz max fill line.
2. Press the 'SLUSH ASSIST' button corresponding to the filled vessel. The machine will automatically sense the ingredients and adjust the temperature for optimal slush consistency.
3. Wait for the 'Ready' indicator light to illuminate.
4. To dispense, pull the premium dispense handle forward.

Making Dual Flavor Slush

1. Pour different liquid ingredients into each of the two vessels, adhering to the 48-oz max fill line for each.
2. Press the 'DUAL SLUSH ASSIST' button located in the center. The technology will independently process both flavors.
3. Wait for both 'Ready' indicator lights to illuminate.
4. To dispense both flavors simultaneously for a twisted drink, pull both premium dispense handles forward.

A promotional image for the Ninja SLUSHi Twist slush machine. The machine is dark blue with two large, clear, rounded dispensing vessels on top. The left vessel is filled with red slush and the right with yellow slush. Both vessels have 'MAX FILL 48oz' and 'MIN FILL 16oz' markings. The machine's front panel features the 'NINJA' logo, two 'SLUSH ASSIST' buttons with 'Ready' indicator lights, and 'Rinse' buttons. A central 'DUAL SLUSH ASSIST' button is also present. A glass is positioned in the center, receiving a twisted drink with alternating layers of red and yellow slush. To the left and right of the machine are two pairs of glasses, each containing a single-flavor slush (red and yellow respectively). The background is a gradient of blue and green.

DOUBLE THE SLUSH.* DOUBLE THE FLAVOR.

Ninja™ SLUSHi™ Twist is the only way to slush 2 flavors at the touch of a button. Serve 2 flavors at once, or combine both flavors into 1 twisted drink.

*vs. Ninja SLUSHi FS300

Image: The Ninja SLUSHi Twist dispensing two distinct frozen drinks into individual glasses, demonstrating its dual-flavor capability.



NINJA
EXCLUSIVE
WITH SLUSHiTWIST™

CREATE ENDLESS COMBINATIONS WITH SLUSHiTWIST™

Combine 2 flavors into 1 perfectly personalized twisted drink,
from Miami Vices to creamsicle milkshakes.

Image: A close-up of the Ninja SLUSHi Twist dispensing a twisted, two-flavor frozen drink into a single glass.

Temperature Controls

The unit features 14 Temperature Control Settings, allowing you to customize the texture of your frozen drink. Use the up and down arrows on the control panel to adjust the desired temperature. Lower settings typically result in a softer slush, while higher settings produce a firmer consistency.



THE EASY WAY TO SLUSH

Easily create 2 frozen drinks at once—no ice needed.
Simply pour, press Dual SlushAssist™, twist, and enjoy.

Image: A detailed view of the control panel, highlighting the 'DUAL SLUSH ASSIST' button and the temperature adjustment interface.



DUAL SLUSHASSIST™ TECHNOLOGY

Intelligently senses ingredients in each vessel and auto-adjusts temperatures so both drinks come out perfectly, every time. No manual programs or guesswork needed.

Image: The Ninja SLUSHi Twist in operation, with two distinct frozen beverages, demonstrating the intelligent Dual SlushAssist technology.

144oz
TOTAL CAPACITY*

*48-oz max liquid fill per vessel



2X MORE DRINKS**

Serve the party and slush up to 10+ servings[†] at once.

**vs. Ninja SLUSHi FS300

†9-oz serving size

Image: The Ninja SLUSHi Twist surrounded by several glasses of frozen drinks, emphasizing its large 144 oz total capacity for serving multiple portions.



Image: A visual representation of various frozen drink combinations, showcasing the versatility of the Ninja SLUSHi Twist in creating custom layered or mixed flavors.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your Ninja SLUSHi Twist.

Built-in Rinse Cycle

The unit features a built-in Rinse Cycle for quick and easy cleaning of the vessels. After dispensing, fill the vessels with water and press the 'Rinse' button located below each 'SLUSH ASSIST' button. This cycle helps to remove residual liquid.

Deep Cleaning

1. Unplug the appliance from the power outlet.
2. Remove the dispense handles, vessels, auger systems, and condensation catches.
3. Wash all removable parts in warm, soapy water. Use a soft brush for hard-to-reach areas.
4. Rinse all parts thoroughly and allow them to air dry completely before reassembly or storage.
5. Wipe the motor base with a clean, damp cloth. Do not immerse the motor base in water.

6. Clean the drip tray regularly to prevent spills and maintain hygiene.

TROUBLESHOOTING

If you encounter issues with your Ninja SLUSHi Twist, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; power outlet malfunction; unit not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check that vessels are correctly seated on the motor base.
Slush is too watery or too thick.	Incorrect temperature setting; ingredients not cold enough; improper sugar content.	Adjust the temperature control settings. Ensure ingredients are refrigerated before use. Refer to recipes for recommended sugar amounts.
Dispensing is slow or blocked.	Dispense handle not fully open; frozen mixture too thick; blockage in the dispensing mechanism.	Ensure the dispense handle is fully pulled forward. If mixture is too thick, adjust temperature settings or allow it to soften slightly. Check for any obstructions in the spout.
'Ready' light does not illuminate.	Processing is still in progress; insufficient liquid in vessel.	Allow more time for the SlushAssist technology to complete the cycle. Ensure liquid level is above the minimum fill line.

SPECIFICATIONS

- **Model Number:** FS701BL
- **Product Dimensions:** 17.48 x 11.93 x 16.26 inches
- **Item Weight:** 38.4 pounds
- **Total Capacity:** 144 oz (48-oz max liquid fill per vessel)
- **Temperature Controls:** 14 settings
- **Manufacturer:** SharkNinja

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please visit the official Ninja website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: SharkNinja

Website: www.ninjakitchen.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question