

[Manuals.plus](#) /

› [Claiks](#) /

› Claiks 40x24 Inch Electric Standing Desk User Manual

Claiks P3.01.001.0003

Claiks 40x24 Inch Electric Standing Desk User Manual

Model: P3.01.001.0003

INTRODUCTION

Thank you for choosing the Claiks 40x24 Inch Electric Standing Desk. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new desk. Please read these instructions carefully before use and retain them for future reference.



An overview of the Claiks electric standing desk, showcasing its clean white design and ample workspace for multiple monitors and accessories.

SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or damaged.
- Keep children and pets away from the desk during operation to prevent injury.
- Do not overload the desk. The maximum weight capacity is 156 lbs (70 kg).
- Ensure the power cord is properly connected and routed to avoid tripping hazards.
- Avoid placing liquids directly on the control panel or near electrical components.
- Do not attempt to disassemble or repair the motor or control system yourself. Contact qualified service personnel if issues arise.

PACKAGE CONTENTS

Please verify that all the following components are included in your package:

- Desktop Surface (40" x 24")
- Desk Legs (2)
- Foot Pads (2)
- Control Panel with LED Display
- Motor and Frame Components
- Power Adapter and Cable
- Cable Management Hub
- Multi-purpose Hooks (2)
- Assembly Hardware (screws, Allen wrench)
- User Manual

SETUP AND ASSEMBLY

Assembly of your Claiks electric standing desk is designed to be straightforward, typically taking around 30 minutes. Follow these general steps:

1. **Assemble the Tabletop:** Carefully place the desktop surface upside down on a soft, clean surface to prevent scratches.
2. **Install the Desk Frame:** Attach the desk legs and frame components to the underside of the tabletop using the provided hardware. Ensure all screws are tightened securely.
3. **Connect Power Cords:** Connect the motor and control panel cables to the main control box, then connect the power adapter. Route cables neatly using the integrated cable management features.
4. **Attach Foot Pads and Hooks:** Secure the foot pads to the bottom of the desk legs and attach the multi-purpose hooks to the designated areas on the frame.
5. **Initial Power-Up:** Plug the desk into a power outlet. The LED display on the control panel should light up.

30-Minute Assembly

Simple Instructions for Perfect Setup



Assembling
Tabletop



Install
Desk Frame



Connect
Power Cords



This visual guide outlines the straightforward assembly process, broken down into three key steps: attaching the tabletop, securing the desk frame, and connecting the electrical components.

OPERATING INSTRUCTIONS

Height Adjustment

The desk's height can be adjusted smoothly and quietly from 28.3 inches to 46.5 inches.

- Press the **Up Arrow** button to raise the desk.
- Press the **Down Arrow** button to lower the desk.
- Release the button at your desired height. The current height will be displayed on the LED screen.



The desk's smooth height control allows for effortless transitions between sitting and standing positions, accommodating users of various heights. The image shows the desk at its minimum and maximum adjustable heights.

Memory Presets

The control panel features three memory preset buttons (1, 2, 3) to save and recall your preferred sitting and standing heights.

- **To Save a Height:** Adjust the desk to your desired height. Press and hold one of the memory buttons (1, 2, or 3) until the LED display flashes or shows 'S-' followed by the number, indicating the height has been saved.
- **To Recall a Height:** Press the corresponding memory button (1, 2, or 3). The desk will automatically move to the saved height.

Multi-Function Keypad

Control whatever you want



LED Display



Up/Down



3 Memory Presets

The control panel features an LED display showing the current height, up and down adjustment buttons, and three programmable memory presets for quick height changes.

MAINTENANCE

- **Cleaning:** Wipe the desktop surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals. The desktop is scratch-resistant and water-repellent, but prompt cleaning of spills is recommended.
- **Cable Management:** Periodically check and reorganize cables to prevent tangles and ensure smooth desk operation.
- **Inspection:** Regularly inspect all screws and connections to ensure they remain tight. Tighten if necessary.
- **Motor Care:** The motor is designed for long-term use. Avoid continuous operation for extended periods without rest.

TROUBLESHOOTING

If you encounter issues with your desk, refer to the following common solutions:

- **Desk Not Moving:** Check all cable connections, especially the power cord and motor cables. Ensure the desk is plugged into a working power outlet.
- **Uneven Height Adjustment:** Perform a reset procedure (see below). Ensure the desk is not overloaded or obstructed.
- **Error Code 'rES' on Display:** This indicates a reset is required.

Reset Procedure (for 'rES' error or uneven movement)

To reset the desk, press and hold the **Down Arrow** button for approximately 8 seconds until the display shows '28.3'. Release the button. The desk should now operate normally.

This video provides a step-by-step guide on how to resolve the 'rES' error mode that may appear on the desk's control panel, ensuring proper functionality.

SPECIFICATIONS

Feature	Detail
Model Number	P3.01.001.0003
Desktop Dimensions (W x D)	40 inches x 24 inches
Adjustable Height Range	28.3 inches to 46.5 inches
Maximum Load Capacity	156 lbs (70 kg)
Motor Noise Level	Under 45dB
Material	Engineered Wood (Desktop), Alloy Steel (Frame)
Color	White
Special Features	LED Display, 3 Memory Presets, Cable Management, 2 Hooks, Scratch-resistant & Water-repellent Top

Desk Dimensions



Max Load 156lbs

24"

40"

46.5"

28.3"

This image illustrates the key dimensions of the desk: 40 inches wide, 24 inches deep, and an adjustable height range from 28.3 inches to 46.5 inches. It also highlights the maximum load capacity of 156 lbs.

Stable at Any Height



The desk's robust steel-reinforced frame ensures stability at any height, minimizing wobble even during adjustments. A glass of water on the desk illustrates its steady operation.

WARRANTY INFORMATION

Claiks products are manufactured to high-quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or contact Claiks customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need troubleshooting support, please contact Claiks customer service. Contact information can typically be found on the product packaging or on the official Claiks website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0H44B5RR9>

More documents and user manuals: <https://manuals.plus/>