

IIGENAI GN-408

IIGENAI GN-408 MP3 MP4 Player User Manual

Model: GN-408

1. INTRODUCTION

The IIGENAI GN-408 is a portable MP3/MP4 player designed for versatile media playback. It supports music, video, FM radio, voice recording, e-books, and image viewing. Featuring a 1.8-inch TFT screen and a built-in speaker, this device offers a compact and lightweight solution for your entertainment needs. It is equipped with a 450mAh battery for extended use and includes a professional intelligent digital noise reduction chip for high-quality audio output.

Important Note: This player does not have internal memory. A micro SD card (up to 64GB, not included) is required for storing and playing media files. The Bluetooth function connects only to wireless headphones or Bluetooth speakers; it does not connect to mobile phones, computers, or car radios.



Figure 1: IIGENAI GN-408 MP3 MP4 Player Overview

2. SETUP

2.1 Package Contents

Please verify that all items are present in the package:

- 1 x IIGENAI GN-408 MP3/MP4 Player
- 1 x USB Charging Cable

- 1 x Wired Headphones
- 1 x User Manual

2.2 Charging the Device

Before initial use, fully charge the player. Connect the provided USB cable to the player's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The charging time is approximately 2 hours.

2.3 Installing a Micro SD Card

The player requires a micro SD card for media storage. Locate the micro SD card slot on the side of the device. Gently insert a micro SD card (up to 64GB) into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.



Figure 2: Micro SD Card Slot and Headphone Jack

2.4 Connecting Headphones

For private listening and FM radio reception, connect the provided wired headphones to the 3.5mm audio jack on the player.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

To power on the device, press and hold the power button (usually located on the side or top) until the screen illuminates. To power off, press and hold the power button again until the device shuts down.

3.2 Basic Navigation

The player features classic physical buttons for navigation. Use the directional buttons (up, down, left, right) to move through menu options on the 1.8-inch TFT screen. The 'M' button typically serves as a menu or back button, while the central button is for selection or play/pause. The 'VOL' button controls the volume.

3.3 Music Playback

Navigate to the 'Music' icon on the main menu. Select it to browse your audio files stored on the micro SD card. The player supports MP3, WMA, APE, WAV, and FLAC formats. During playback, you can use the navigation buttons to control volume, skip tracks, and access playback options such as equalizer settings, repeat modes, and shuffle.



Conveniente e simples

MP3 JOGADOR

19:32

music video sound recording

radio e-book picture

game set up file

12 HORA
TOCAR MÚSICA

450 MAH
CAPACIDADE DA BATERIA

64 GB
SUPPORTA CARTÃO DE MEMÓRIA MICRO SD

BLUETOOTH

FONE DE OUVIDO

LCD
TIPO DE TELA

The advertisement features a central image of a black MP3 player with a 1.8-inch TFT screen. The screen displays a menu with icons for music, video, sound recording, radio, e-book, picture, game, set up, and file. The player has a circular navigation pad with buttons labeled M, VOL, and directional arrows. The background is a dark blue gradient with large, stylized text and icons. The text 'Conveniente e simples' is at the top left. The main title 'MP3 JOGADOR' is in large white letters. The time '19:32' is shown at the top of the screen. The battery capacity '450 MAH' and storage '64 GB' are highlighted on the left. The Bluetooth and earphone icons are on the right. The LCD screen type is highlighted in a circle at the bottom right.

3.4 Video Playback

Select the 'Video' icon from the main menu to access video files. Ensure your video files are in a compatible format for the device's 128x160 pixel resolution screen.

3.5 FM Radio

To use the FM radio function, ensure wired headphones are connected, as they act as the antenna. Select 'Radio' from the main menu. You can then scan for stations and save your favorites.

3.6 Voice Recorder

The player includes a built-in voice recorder. Select the 'Recording' option to start, pause, and save audio recordings.

3.7 E-book Reader

Access the 'E-book' function to read text files. The player supports TXT format e-books.

3.8 Image Viewer

Select 'Picture' to view images stored on your micro SD card. The player supports JPG and GIF image formats.

3.9 Bluetooth Connectivity

To connect to wireless headphones or Bluetooth speakers, navigate to the 'Bluetooth' settings. Enable Bluetooth and search for available devices. Select your desired device to pair. Remember, this player's Bluetooth is designed for audio output to compatible devices only and does not connect to smartphones, computers, or car audio systems.

4. MAINTENANCE

4.1 Cleaning

Wipe the device with a soft, dry, lint-free cloth. Do not use liquid cleaners or abrasive materials, as they may damage the screen or casing.

4.2 Storage

Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid storing it near strong magnetic fields.

4.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, but do not leave it connected to power for excessively long periods after it is fully charged. Avoid exposing the device to extreme heat or cold.

5. TROUBLESHOOTING

5.1 Device Not Turning On

- Ensure the battery is sufficiently charged. Connect the player to a power source using the USB cable and allow it to charge for at least 15 minutes before attempting to power it on again.
- If the device remains unresponsive, try performing a soft reset (refer to the device's specific reset procedure if available, or hold the power button for an extended period, e.g., 10-15 seconds).

5.2 No Sound Output

- Check the volume level. Ensure it is not set to zero or muted.
- Verify that the headphones are properly connected to the 3.5mm audio jack.
- If using Bluetooth, ensure the player is correctly paired with your wireless headphones or speaker and that their volume is also adjusted.
- Test with different headphones to rule out a faulty pair.
- Ensure the audio file is not corrupted or in an unsupported format.

5.3 Bluetooth Connection Issues

- Confirm that you are attempting to connect to a compatible device (wireless headphones or Bluetooth speakers). The player's Bluetooth does not connect to mobile phones, computers, or car radios.
- Ensure both the player and the target Bluetooth device are in pairing mode and within close proximity.
- Turn Bluetooth off and on again on both devices.
- Delete previous pairings and try to pair again.

5.4 Micro SD Card Not Detected or Files Not Playing

- Ensure the micro SD card is inserted correctly and fully into the slot.
- Verify that the micro SD card is not damaged and is formatted correctly (e.g., FAT32).
- Check that the card capacity does not exceed 64GB.
- Confirm that the media files on the card are in supported formats (e.g., MP3/WMA/APE/WAV/FLAC for audio, JPG/GIF for images, TXT for e-books).
- Try using a different micro SD card to determine if the issue is with the card itself.

6. SPECIFICATIONS

Feature	Description
Brand	IIGENAI
Model Name	GN-408 MP3
Connectivity Technology	Bluetooth, USB
Screen Size	1.8 Inches
Screen Technology	TFT
Supported Audio Formats	MP3, WMA, APE, WAV, FLAC
Supported Image Formats	JPG, GIF
Supported E-book Format	TXT
Battery Capacity	450mAh
Charging Time	2 hours
Music Playback Time	Up to 3 hours (with headphones)
Video Playback Time	Up to 3 hours
FM Radio Playback Time	Up to 3 hours
Standby Time	Up to 20 hours

Dimensions (L x W x H)	9.0 cm x 4.0 cm x 0.8 cm
Weight	31g
Internal Memory	None
Expandable Memory	Micro SD card up to 64GB (not included)
Screen Resolution	128 x 160 pixels
Included Components	MP3 Player, USB Charging Cable, Headphones, User Manual

7. WARRANTY AND SUPPORT

7.1 Product Warranty

This IIGENAI GN-408 MP3 MP4 Player comes with a 3-month warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact the retailer or IIGENAI customer service. Please have your purchase receipt and product model number (GN-408) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

