

[Manuals.plus](#) /

› [HyperMotion](#) /

› HyperMotion TOBI TIMBER Tricycle User Manual

HyperMotion TOBI TIMBER

HyperMotion TOBI TIMBER Tricycle User Manual

Model: TOBI TIMBER

INTRODUCTION

Thank you for choosing the HyperMotion TOBI TIMBER Tricycle. This manual provides essential information for the safe assembly, operation, and maintenance of your tricycle. Please read it thoroughly before first use and keep it for future reference. This tricycle is designed for children aged 1 to 5 years.

IMPORTANT SAFETY INFORMATION

- **Adult Supervision Required:** Always supervise your child when using the tricycle. Never leave a child unattended.
- **Weight Limit:** Do not exceed the maximum weight capacity of **25 kg**.
- **Age Range:** Suitable for children from 12 months to 5 years. Ensure the child's age and developmental stage are appropriate for each configuration.
- **Assembly:** Ensure all parts are correctly and securely assembled by an adult before each use. Regularly check all fasteners.
- **Terrain:** Use the tricycle on flat, even surfaces. Avoid stairs, steep inclines, uneven terrain, and areas with vehicle traffic.
- **Protective Gear:** Always ensure your child wears appropriate protective gear, such as a helmet, when riding independently.
- **Moving Parts:** Keep children's fingers and clothing away from moving parts, especially wheels and pedals.
- **Brakes:** Always engage the foot brake when the tricycle is stationary to prevent accidental movement.
- **Modifications:** Do not modify the tricycle in any way, as this may compromise its safety and void the warranty.

PRODUCT FEATURES

The HyperMotion TOBI TIMBER Tricycle is designed to adapt to your child's growth, offering multiple configurations for different developmental stages.

- **Grow-with-Me Design:** Transforms from a parent-controlled stroller tricycle to an independent tricycle for older children (1-5 years).

- **360° Rotating Seat:** Allows the child to face forward or backward towards the parent, enhancing interaction and comfort.
- **Adjustable Backrest:** Provides comfort and support, suitable for naps during rides.
- **Adjustable Parent Push Handle:** Ergonomically designed for comfortable steering by adults of varying heights.
- **Foldable Design:** Compact folding for easy transport and storage.
- **Free Wheel Function:** Prevents pedals from rotating when the parent is pushing, protecting the child's feet.
- **Foot Brake:** Ensures stability and safety when the tricycle is stationary.
- **Protective Canopy:** Shields the child from sun, wind, and light rain.
- **Durable EVA Wheels:** Designed for smooth and quiet rides.



Image: The tricycle's 360-degree rotating seat and adjustable backrest features.



Image: Illustration of the adjustable height feature for the parent push handle.

SETUP AND ASSEMBLY

The HyperMotion TOBI TIMBER Tricycle is designed for quick and tool-free assembly. Follow these general steps to set up your tricycle:

1. **Unpack Components:** Carefully remove all parts from the packaging and ensure all components listed in the

packing list (if provided separately) are present.

2. **Frame Assembly:** Unfold the main frame of the tricycle. Ensure all locking mechanisms click into place securely.
3. **Wheel Attachment:** Attach the front and rear wheels. Ensure they are firmly secured and rotate freely.
4. **Seat Installation:** Install the seat onto the frame. Verify that the rotation mechanism functions correctly and the seat locks into desired positions.
5. **Handlebar and Push Handle:** Attach the child's handlebar and the parent push handle. Adjust the parent handle to a comfortable height.
6. **Canopy and Accessories:** Install the canopy and any other accessories like the basket or cup holder.
7. **Final Check:** Before first use, double-check all connections, bolts, and locking mechanisms to ensure they are tight and secure.



Image: The tricycle's compact folded size for easy transport and storage.

OPERATING INSTRUCTIONS

Adjusting the Seat

- **360° Rotation:** To rotate the seat, locate the release mechanism (usually a lever or button beneath the seat). Engage the mechanism, rotate the seat to the desired direction (forward or parent-facing), and ensure it locks securely into place.
- **Backrest Recline:** The backrest can be adjusted to different angles for your child's comfort. Use the recline lever or strap located behind the seat to set the desired position.

Using the Parent Push Handle

- **Height Adjustment:** Press the adjustment buttons on the sides of the push handle and slide it up or down to your

preferred height. Release the buttons to lock it in position.

- **Steering:** The parent push handle allows you to steer the front wheel of the tricycle. Apply gentle pressure to guide the tricycle.

Free Wheel Function

- To activate the free wheel function, locate the clutch mechanism on the front wheel (often a button or switch near the pedal axle). Engage it to allow the pedals to spin freely without moving the wheel, preventing injury to your child's feet while you push.
- To deactivate, disengage the clutch to allow the child to pedal and propel the tricycle.



Image: Detail of the free wheel lock mechanism on the front wheel.

Foot Brake

- The foot brake is located near the rear wheels. Press down on the brake lever to engage it and prevent the tricycle from moving. Lift the lever to release the brake. Always engage the brake when parking or when the tricycle is stationary.

Canopy Adjustment

- The canopy can be adjusted to provide optimal shade. Extend or retract it as needed.



Image: Adjusting the canopy for sun protection.

MAINTENANCE

- **Cleaning:** Clean the tricycle regularly with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Tighten any loose parts immediately.
- **Storage:** Store the tricycle in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation. The foldable design allows for compact storage.

- **Lubrication:** Moving parts may benefit from occasional lubrication with a silicone-based spray, avoiding contact with plastic or fabric components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tricycle does not steer correctly.	Loose connection in the steering mechanism or parent handle.	Check and tighten all connections related to the handlebar and parent push handle.
Pedals are not moving freely or are stuck.	Free wheel function is engaged/disengaged incorrectly, or obstruction.	Ensure the free wheel mechanism is in the desired position. Check for any debris or obstructions around the pedals.
Tricycle feels unstable.	Loose assembly, uneven ground, or exceeding weight limit.	Verify all parts are securely fastened. Use on flat, even surfaces. Ensure child's weight is within the 25 kg limit.
Canopy does not stay in position.	Loose canopy attachment or adjustment mechanism.	Check the canopy's attachment points and adjustment levers. Ensure they are tightened.

SPECIFICATIONS

Brand: HyperMotion

Model: TOBI TIMBER

Recommended Age: 12 months - 5 years

Maximum Weight Capacity: 25 kg

Materials: Plastic, EVA foam, powder-coated steel

Product Dimensions (Unfolded): 111.5 cm (Length) x 52 cm (Width) x 98 cm (Height)

Folded Dimensions (approx., without wheels/push handle): 54 cm x 30 cm x 44 cm

Assembly Required: Yes

Included Components: Canopy, Parent Handle



Image: Detailed dimensions of the tricycle in both unfolded and folded states.

WARRANTY AND SUPPORT

The HyperMotion TOBI TIMBER Tricycle comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact the seller or manufacturer directly. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question