

[Manuals.plus](#) /

› [MZK](#) /

› MZK ET2603 Lightweight Pressure Washer Instruction Manual

MZK ET2603

MZK ET2603 Lightweight Pressure Washer

Instruction Manual

1. INTRODUCTION

Thank you for choosing the MZK ET2603 Lightweight Pressure Washer. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new pressure washer. Please read it thoroughly before first use and keep it for future reference.

The MZK ET2603 is designed for efficient outdoor cleaning tasks. It delivers a robust water flow of up to 2.0 GPM, making it suitable for various surfaces. Its lightweight design (approximately 9.9 lbs) and one-button start system ensure portability and ease of use.



Image 1.1: MZK Pressure Washer in use, demonstrating its cleaning power on outdoor stairs.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Wear appropriate safety gear:** Always wear eye protection, hearing protection, and protective clothing.
- **Electrical safety:** Ensure the power outlet is grounded. Do not operate the unit with damaged cords or plugs. Keep all connections dry and off the ground.
- **Water pressure:** Never direct the water stream at people, pets, or electrical devices. High-pressure spray can cause injury.
- **Chemicals:** Use only pressure washer safe detergents. Follow detergent manufacturer's instructions.

- **Children and bystanders:** Keep children and bystanders away from the operating area.
- **Total Stop System and Child Safety Lock:** Utilize the built-in safety features. The Total Stop System automatically shuts off the pump when the trigger is released, and the Child Safety Lock prevents accidental operation.

SMART & SAFE OPERATION

Designed for your peace of mind and machine longevity



Image 2.1: Illustration of the Total Stop System and Child Safety Lock for safe operation.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- MZK ET2603 Pressure Washer Unit
- High-Pressure Hose (21 FT)
- Spray Gun with Adjustable Nozzle
- Foam Cannon (320ML capacity)
- Power Cord (17 FT)
- Garden Hose Adapter (for instant setup)
- Instruction Manual

4. SETUP AND ASSEMBLY

Follow these steps to assemble your pressure washer before first use:

1. **Connect the High-Pressure Hose:** Securely attach one end of the 21 FT high-pressure hose to the outlet on the pressure washer unit and the other end to the spray gun. Ensure connections are tight to prevent leaks.
2. **Attach the Spray Gun and Wand:** Connect the spray wand to the spray gun. The adjustable nozzle is integrated into the wand.
3. **Connect Water Supply:**
 - **Standard Faucet:** Connect a standard garden hose (not included) to the water inlet on the pressure washer unit using the provided garden hose adapter. Ensure the water source is turned on fully.
 - **Alternative Water Sources (Bucket/Pool):** If a faucet is not available, the unit can draw water from a bucket or pool using the included garden hose adapter and a suitable intake hose (not included). Ensure the intake hose is fully submerged and free of air bubbles.
4. **Power Connection:** Plug the 17 FT power cord into a grounded electrical outlet.



Image 4.1: Visual guide for connecting the spray wand, high-pressure hose, and water inlet.

NO FAUCET? NO PROBLEM!

Draw water from anywhere. Garden hose adapter INCLUDED for instant setup



Image 4.2: The pressure washer can draw water from various sources, including buckets and pools, using the appropriate adapter.

5. OPERATING INSTRUCTIONS

5.1 Starting the Unit

1. Ensure all connections are secure and the water supply is turned on.
2. Press the one-button start on the unit.
3. Squeeze the trigger on the spray gun to begin spraying.

5.2 Using the Adjustable Nozzle

The integrated adjustable nozzle offers four spray patterns. Twist the nozzle to select the desired spray angle:

- **0° (Pinpoint Blasting):** For intense spot cleaning and stubborn grime like rust, cracks, and metal surfaces.
- **15°-25° (Heavy-Duty Washing):** For powerful stain removal on hard surfaces such as concrete, driveways, and boats.
- **25°-60° (Everyday Surface Cleaning):** Safely wash delicate surfaces without damage, including wooden decks, fences, and automobiles.
- **60°-120° (Gentle Rinsing & Watering):** Perfect for light dusting and garden care, suitable for windows, gardens,

and patio furniture.



Image 5.1: The all-in-one adjustable nozzle allows for quick changes between spray patterns for various cleaning tasks.



Image 5.2: 0° spray for concentrated cleaning on tough stains.



Image 5.3: 15°-25° spray for heavy-duty washing of hard surfaces.



Image 5.4: 25°-60° spray for general cleaning of various surfaces.



Image 5.5: 60°-120° spray for gentle rinsing and watering.

5.3 Using the Foam Cannon

The included foam cannon is ideal for applying detergent, especially for car washing.

1. Fill the foam cannon bottle with appropriate pressure washer detergent.
2. Attach the foam cannon to the spray gun.
3. Spray the detergent onto the desired surface. The external soap bottle design helps prevent internal corrosion of the machine.
4. After applying detergent, remove the foam cannon and rinse the surface with clean water using the adjustable nozzle.

ULTIMATE VERSATILITY FOR EVERY TASK

One machine to tackle all your outdoor cleaning projects.



Image 5.6: Applying rich snow foam to a car using the foam cannon for deep cleaning.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Clean Nozzle:** Periodically check the nozzle for blockages and clean if necessary.
- **Water Filter:** Inspect and clean the water inlet filter regularly to prevent debris from entering the pump.
- **Hose and Connections:** Check hoses and connections for wear, damage, or leaks before each use. Replace any damaged parts immediately.
- **Storage:** Store the pressure washer in a dry, frost-free area. Drain all water from the pump and hoses before storing to prevent freezing damage.
- **Winterization:** For prolonged storage in freezing temperatures, use a pump protector or non-toxic antifreeze solution to protect the pump.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not start	No power supply; Power cord not plugged in; Faulty outlet	Check power connection; Try a different outlet; Reset circuit breaker
No water pressure	Water supply off; Kinked hose; Clogged nozzle; Air in pump	Turn on water supply; Straighten hose; Clean nozzle; Bleed air from pump by running with trigger open until steady stream
Pulsating pressure	Air in pump; Water supply restriction; Clogged nozzle	Bleed air from pump; Check water supply for kinks or blockages; Clean nozzle
Water leaks	Loose connections; Damaged O-rings or seals	Tighten all connections; Inspect and replace damaged O-rings or seals

8. SPECIFICATIONS

Feature	Specification
Model Number	ET2603
Power Source	Electric
Maximum Flow Rate	2.0 Gallons Per Minute (GPM)
Hose Length	21 Feet
Power Cord Length	17 Feet
Product Dimensions (L x W x H)	11.02" x 7.68" x 11.02"
Weight	9.9 lbs
Nozzle Type	4-Gear Adjustable Nozzle (0°, 15-25°, 25-60°, 60-120°)
Foam Cannon Capacity	320 ML

9. WARRANTY AND SUPPORT

MZK products are manufactured to high-quality standards. For warranty information, technical support, or replacement parts, please refer to the contact information provided with your purchase or visit the official MZK website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0H5C44R8V>

More documents and user manuals: <https://manuals.plus/>