

[Manuals.plus](#) /

› [ECOPAD](#) /

› ECOPAD T30MAX Android 16 Tablet User Manual

ECOPAD T30MAX

ECOPAD T30MAX Android 16 Tablet User Manual

Model: T30MAX

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your ECOPAD T30MAX Android 16 Tablet. Please read this guide thoroughly to ensure proper use and to maximize your device's performance.

WHAT'S IN THE BOX

Your ECOPAD T30MAX tablet package includes the following items:

- ECOPAD T30MAX 12-inch 2K Tablet
- Wireless Keyboard
- Wireless Mouse
- Stylus Pen
- Folio Stand Case
- Fast Charger
- USB-C Cable
- User Manuals (this document)

Cinematic Dual Speakers & Lightning-Fast WiFi 6

Powerful Connections. Crystal-Clear Meetings.



Integrated
Microphone



13MP
Rear Flash Camera



8MP
Front Camera



Face ID
Unlock

Image: The ECOPAD T30MAX tablet with its complete set of accessories, including the wireless keyboard, mouse, stylus, folio stand case, charger, and USB-C cable.

SETUP INSTRUCTIONS

1. Initial Power On and Basic Configuration

- Charge the Tablet:** Before first use, connect the tablet to the fast charger using the provided USB-C cable and charge it completely.
- Power On:** Press and hold the power button located on the side of the tablet until the ECOPAD logo appears.
- Initial Setup Wizard:** Follow the on-screen prompts to select your language, region, and connect to a Wi-Fi network.
- Google Account:** Sign in with your Google account or create a new one to access the Google Play Store and other Google services.

2. Connecting Accessories

The ECOPAD T30MAX comes with a wireless keyboard, mouse, and stylus for enhanced productivity.

Wireless Keyboard and Mouse:

1. **Enable Bluetooth:** On your tablet, go to **Settings > Connected devices > Bluetooth** and turn Bluetooth on.
2. **Pair Keyboard/Mouse:** Turn on the keyboard/mouse. Press the pairing button (usually on the underside) until the indicator light flashes.
3. **Select Device:** On your tablet, select the keyboard/mouse from the list of available Bluetooth devices and follow any on-screen instructions to complete pairing.

Stylus Pen:

The stylus pen is typically ready to use upon removal from its holder or by simply touching the screen. No pairing is usually required for basic functionality.

3. Face ID Setup

1. Go to **Settings > Security & privacy > Device unlock > Face unlock**.
2. Follow the on-screen instructions to register your face. Ensure you are in a well-lit area and hold the tablet at eye level.



Image: The ECOPAD T30MAX tablet demonstrating the Face ID unlock feature for secure access.

OPERATING INSTRUCTIONS

1. Display Features

The T30MAX features a 12-inch 2K display with a 90Hz refresh rate for smooth visuals.

- **Resolution:** Enjoy crisp images and text with 2000 x 1200 pixels.
- **Refresh Rate:** The 90Hz refresh rate provides smoother scrolling and a more fluid user experience compared to standard 60Hz displays.
- **Reading Mode:** Activate Reading Mode in display settings to reduce blue light and eye strain during extended reading sessions.

Ultra-Fluid 90Hz Refresh Rate Touch Screen

- 90 Hz | 50% More Frames than 60Hz
- Zero Blur, Say Goodbye to Lag
- Ultra-Smooth Scrolling & Swiping
- Fluid Browsing, Less Eye Strain
- Lag-Free Gaming & Instant Response



Image: The ECOPAD T30MAX tablet showcasing its 90Hz touch screen for ultra-fluid interaction.


2. Performance and Storage

The tablet is powered by an Octa-Core T7250 CPU and offers substantial RAM and storage.

- **Processor:** The T7250 Octa-Core CPU ensures efficient multitasking and responsive application performance.
- **RAM:** With 48GB RAM (8GB physical + 40GB extended), the tablet handles multiple applications smoothly.
- **Storage:** 256GB of internal storage is provided, expandable up to 1TB via a Micro SD card (sold separately).

Revolutionary 48GB Extended RAM & 256GB Storage

8GB hardware RAM combined with 40GB smart virtual expansion matrix for lag-free multitasking.
Store everything with 256GB ROM, expandable up to 1TB via Micro SD slot.

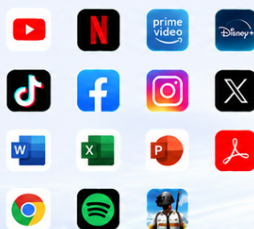

48GB
48GB Extended RAM
8GB Physical RAM +
40GB Virtual RAM

256GB
256GB ROM
Store more of what
matters to you.

Up to 1TB Expandable
More space for more
possibilities.

 **≈ 68,000+**
Photos
(4MB)

 **≈ 5,000+**
Songs
(5MB)

 **≈ 1,000+**
Videos
(1080P)

 **≈ 500,000+**
Documents
(500KB)



Note:
SD Card Sold
Separately.

Image: The ECOPAD T30MAX tablet highlighting its 48GB RAM and 256GB ROM, with support for Micro SD card expansion.

3. Battery Management

The 10000mAh battery provides extended usage times.

- **Charging:** Use the included fast charger and USB-C cable for optimal charging speed.
- **Battery Saver:** Enable Battery Saver mode in **Settings > Battery** to extend battery life when needed.
- **Usage:** Expect up to 10 hours of video streaming, 14 hours of work/study, and over 300 hours of standby time.

Massive 10000mAh Battery, Endless Energy

Power that keeps up with your life, Built for work, study, entertainment, and everything in between.



Video Streaming:

10 hrs

Watch more, worry less.



Work & Study:

14 hrs

Stay productive all day.



Standby:

300+ hrs

Always ready when you need it.



Overcharge
Protection



Overcurrent
Protection



Overvoltage
Protection



Temperature
Protection

Image: The ECOPAD T30MAX tablet showcasing its massive 10000mAh battery and its protective features.

4. Camera Usage

The tablet is equipped with dual cameras for photos and video calls.

- **Rear Camera:** 13MP with flash for clear photos and document scanning.
- **Front Camera:** 8MP for video calls and selfies.
- **Features:** Supports HD video calls, noise reduction, and wide-angle views for online meetings.



Image: The ECOPAD T30MAX tablet highlighting its 13MP rear camera with flash and 8MP front lens for clear video calls and photos.

5. Connectivity

Stay connected with various wireless technologies.

- **Wi-Fi 6:** Provides fast and stable internet connections.
- **Bluetooth 5.2:** For connecting wireless headphones, speakers, keyboard, and mouse.
- **GPS:** Independent offline GPS for accurate navigation.
- **Wireless Casting:** Cast your tablet's screen to compatible smart TVs or displays.

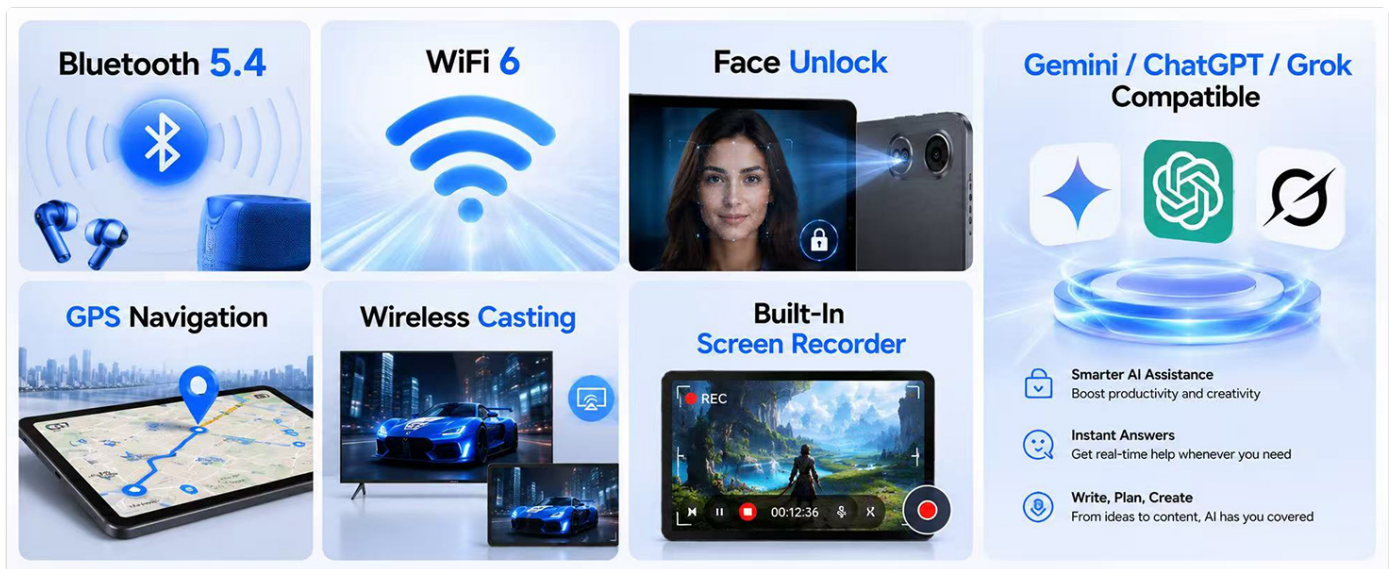


Image: The ECOPAD T30MAX tablet illustrating its connectivity features including Bluetooth 5.4, WiFi 6, Face Unlock, GPS Navigation, Wireless Casting, and a Built-in Screen Recorder.

6. Software Features

The tablet runs on Android 16 with enhanced security and streaming capabilities.

- **Android 16:** Enjoy a clean, ad-free experience with enhanced privacy protection and system stability.
- **Widevine L1:** Supports Full HD/2K streaming on platforms like Prime Video, Netflix, and HBO for a cinematic viewing experience.
- **AI Compatibility:** Compatible with AI tools like Gemini, Grok, and ChatGPT for boosted productivity.

Widevine L1 Cinematic Experience

Widevine L1 unlocks Full HD/2K streaming on Prime Video, Netflix, YouTube, HBO and more.

L1 Widevine L1

- ✓ Full HD / 2K
- ✓ Sharper Details
- ✓ Vibrant Colors
- ✓ Smooth Playback
- ✓ Premium Experience

L3 Widevine L3

- ✗ SD Only
- ✗ Blurry Image
- ✗ Dull Colors
- ✗ Buffering Lag
- ✗ Lower Experience

Stable Streaming
No buffering

Higher Clarity
See every detail

Stronger Security
Content protected

Better Experience
Crisp, vivid, immersive

Image: The ECOPAD T30MAX tablet demonstrating Widevine L1 support for high-quality streaming on various platforms.

MAINTENANCE

1. Screen Protection

Your tablet comes with a pre-installed protective screen film. To maintain screen clarity and prevent scratches:

- Avoid sharp objects coming into contact with the screen.
- Clean the screen gently with a microfiber cloth. Do not use harsh chemicals.

2. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not let the battery completely drain frequently. Charge it before it reaches very low levels.
- Use only the provided charger or a certified compatible charger.

3. Cleaning

- Wipe the tablet's exterior with a soft, damp cloth.
- Avoid getting moisture into ports or openings.

TROUBLESHOOTING

If you encounter issues with your ECOPAD T30MAX tablet, refer to the following common solutions:

Problem	Possible Solution
Tablet is slow or lags during use.	Close unnecessary background applications. Clear cache for frequently used apps. Restart the tablet. Ensure sufficient free storage space.
Keyboard or mouse not responding/registering.	Ensure the accessories are charged and powered on. Re-pair the Bluetooth devices in Settings. Check for any physical obstructions or interference. Restart both the tablet and the accessory.
Wi-Fi connectivity issues.	Restart your Wi-Fi router. Forget the network on your tablet and reconnect. Ensure you are within range of the Wi-Fi signal.
Battery drains quickly.	Reduce screen brightness. Close unused apps. Disable unnecessary features like Bluetooth or GPS when not in use. Activate Battery Saver mode.
Tablet does not power on.	Ensure the tablet is fully charged. Try holding the power button for 10-15 seconds to force a restart.

SPECIFICATIONS

Key technical specifications for the ECOPAD T30MAX Android 16 Tablet:

Feature	Detail
Brand	ECOPAD
Model Name	T30MAX
Operating System	Android 16
Processor	Unisoc T7250 Octa-Core CPU
RAM Memory	48 GB (8GB physical + 40GB extended)
Storage Capacity	256 GB (Expandable up to 1TB via MicroSD)
Screen Size	12 inches
Display Resolution	2000 x 1200 pixels (2K)
Display Refresh Rate	90 Hz

Feature	Detail
Battery Capacity	10000 mAh
Rear Camera	13 MP with Flash
Front Camera	8 MP
Connectivity	Wi-Fi 6, Bluetooth 5.2, GPS, USB Type-C, 3.5mm Audio Jack
Biometric Security	Face ID
Included Components	Tablet, Keyboard, Mouse, Stylus, Folio Stand Case, Charger, USB-C Cable

WARRANTY INFORMATION

The ECOPAD T30MAX tablet comes with a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in your product packaging or visit the official ECOPAD website. The warranty description indicates origin from China.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please visit the official ECOPAD support website or contact their customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

