

VAC01, VAC02, HL107, HL132, HL127Pro

Generic Washable Vacuum Filter Instruction Manual

For Cromoce VAC01 VAC02, Saker HL107 HL132, AIPROIN HL127Pro, and other compatible handheld vacuum cleaners

1. INTRODUCTION

This manual provides essential information for the proper installation, effective use, and routine maintenance of your new washable vacuum filter. Designed as a replacement accessory, this filter helps maintain the cleaning efficiency of your handheld vacuum by effectively capturing dust, dirt, and debris. Regular maintenance of the filter is crucial for optimal performance and extended lifespan of your vacuum cleaner.

2. COMPATIBILITY

This washable vacuum filter is compatible with the following handheld vacuum cleaner models:

- Cromoce VAC01
- Cromoce VAC02
- Saker HL107
- Saker HL132
- AIPROIN HL127Pro
- houscly ST6653/ST-6655
- HRYCF-07081
- CUGEFRE ST-6691Plus

Please verify your vacuum cleaner's model number to ensure proper fit and function.

3. INSTALLATION

Follow these steps to install the new washable vacuum filter into your handheld vacuum cleaner:

1. **Prepare the Vacuum:** Ensure your handheld vacuum cleaner is turned off and unplugged (if applicable) before beginning installation.
2. **Remove Old Filter:** Locate the dust cup or filter compartment on your vacuum. Carefully open it and remove the old, dirty filter. Dispose of the old filter responsibly.
3. **Insert New Filter:** Take one of the new washable filters. Align the filter with the opening in the dust cup or filter

compartment. Gently push the filter into place until it sits securely. Ensure there are no gaps around the edges to prevent dust leakage.

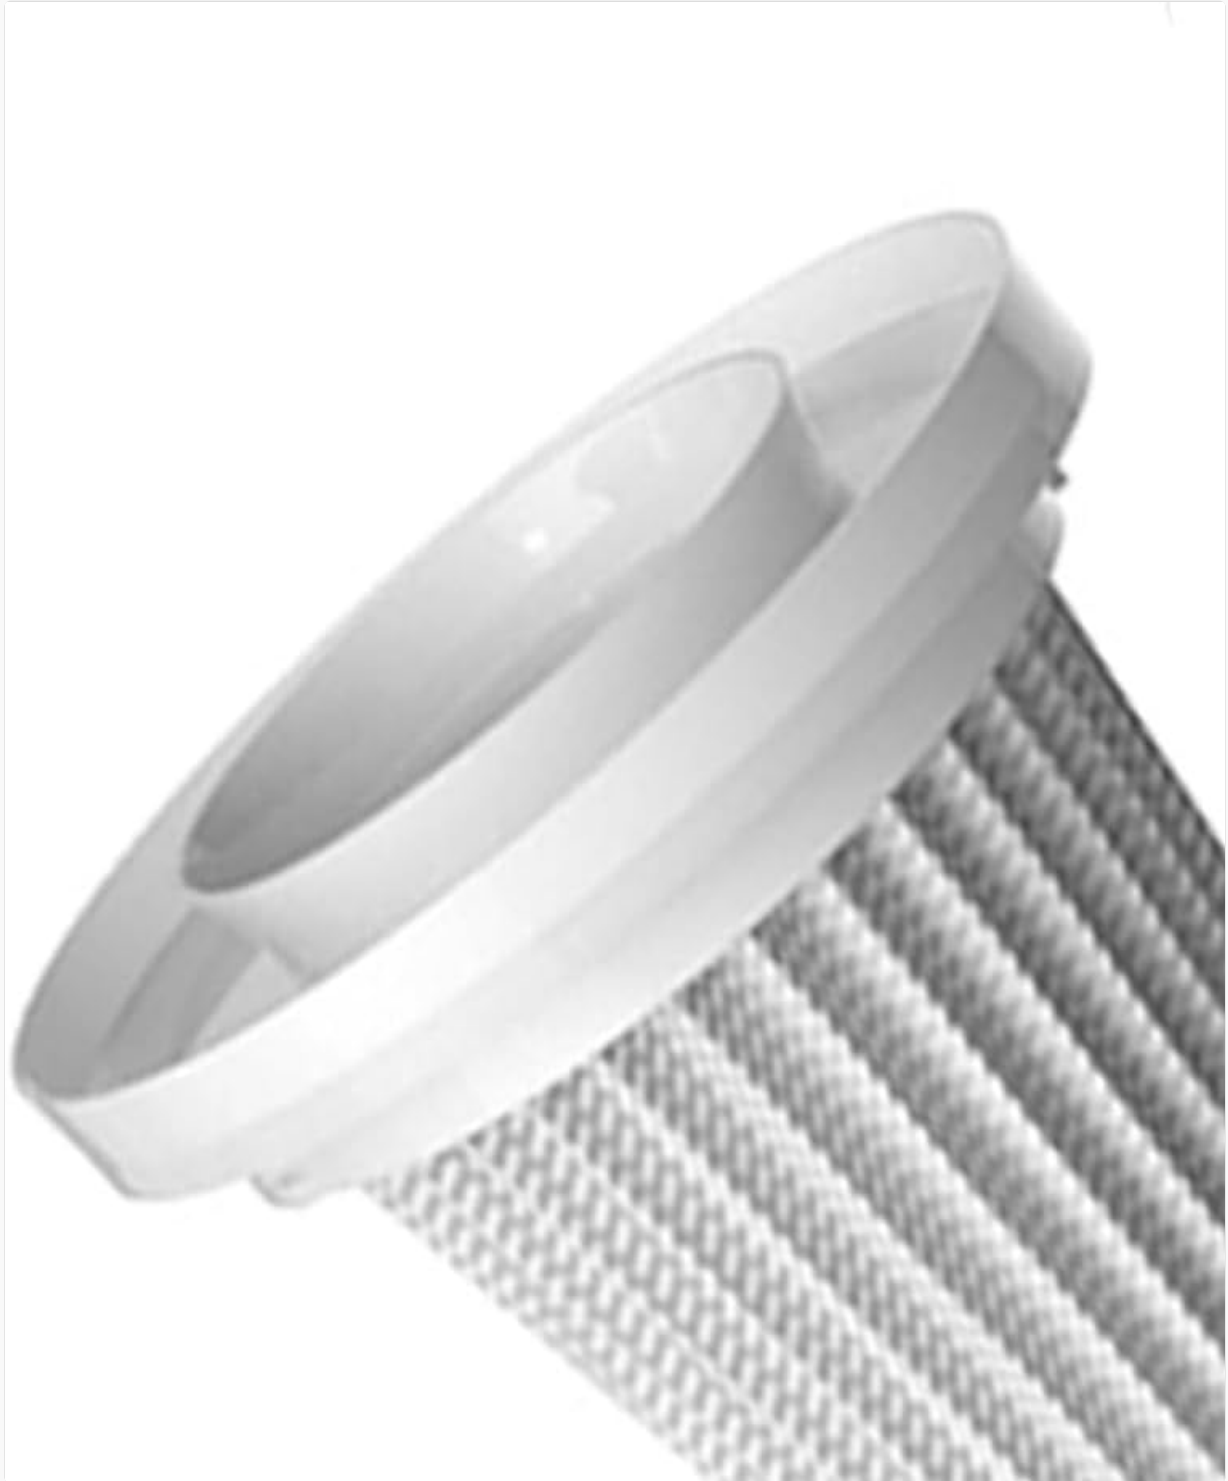


Figure 1: Close-up of the filter's top, illustrating its design for secure fitting.

4. **Close Compartment:** Close the dust cup or filter compartment firmly. Ensure it is latched correctly to maintain proper suction.

4. OPERATION

Once installed, the washable vacuum filter operates automatically as part of your vacuum cleaner's filtration system. It is designed to trap fine dust particles and debris, preventing them from re-entering the air or damaging the vacuum's motor. For optimal performance, ensure the filter is clean and properly installed before each use.



Figure 2: A set of four washable vacuum filters, highlighting their pleated filtration surface.

5. MAINTENANCE

Regular cleaning of your washable filter is essential to maintain your vacuum's suction power and extend the filter's lifespan. Follow these steps for cleaning:

1. **Remove Filter:** Turn off and unplug the vacuum. Open the dust cup and carefully remove the filter.
2. **Tap Out Debris:** Gently tap the filter over a waste bin to dislodge loose dust and debris.
3. **Wash the Filter:** Rinse the filter under cool, running water. You can gently rub the pleated surface with your fingers to remove embedded dirt. Do not use harsh detergents or brushes, as this may damage the filter material.
4. **Dry Completely:** This is a critical step. Allow the filter to air dry completely for at least 24 hours before reinstalling it. Placing it in direct sunlight or using a hairdryer is not recommended as it may deform the filter. Ensure it is absolutely dry to prevent mold growth and maintain filtration efficiency.

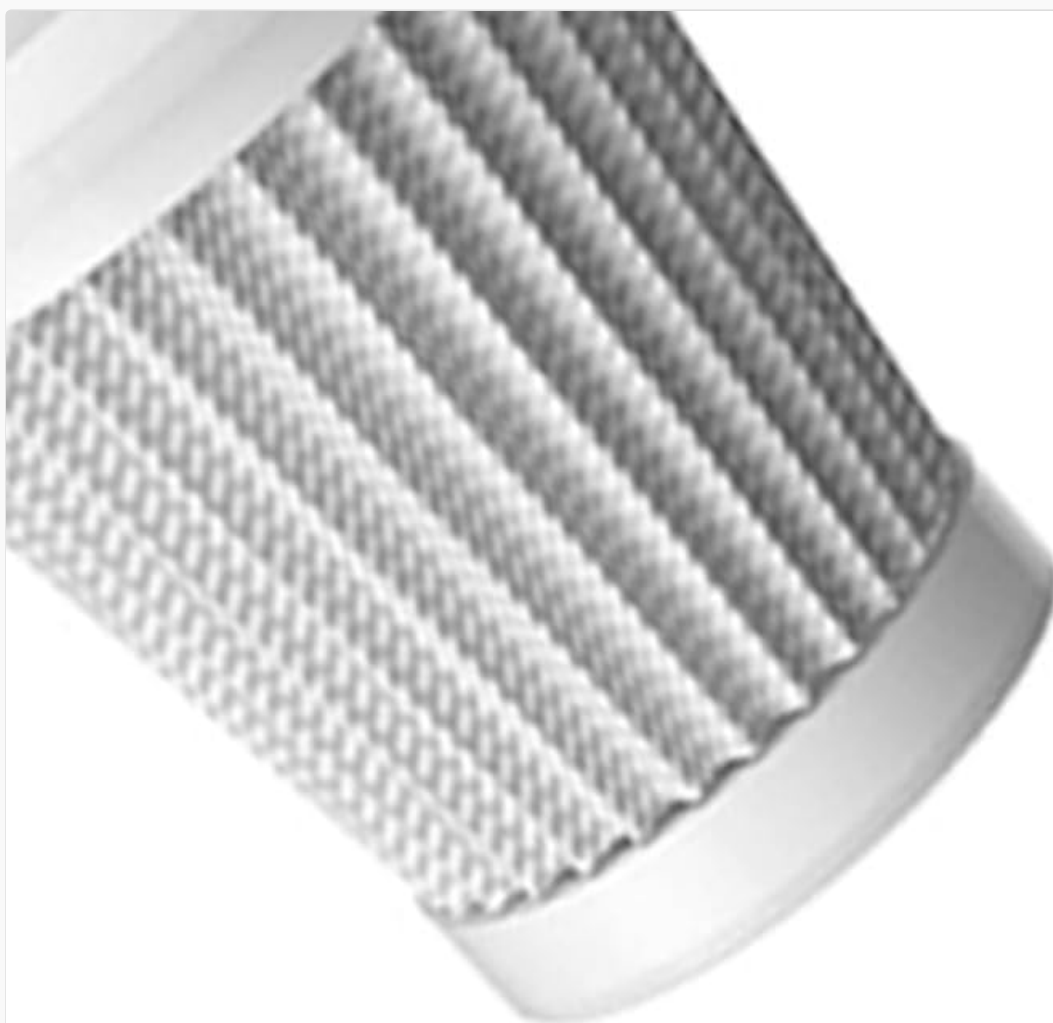


Figure 3: Detailed view of the filter's mesh, designed for effective dust capture.

5. **Reinstall Filter:** Once completely dry, reinstall the filter into your vacuum cleaner following the installation steps outlined in Section 3.

Important: Never operate your vacuum cleaner without a filter or with a wet filter. This can damage the motor and void any potential warranty.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Reduced Suction Power	Filter is dirty or clogged.	Clean the filter according to the maintenance instructions (Section 5). Ensure it is completely dry before reinstallation.
Filter Does Not Fit	Incorrect filter model for your vacuum.	Verify your vacuum cleaner's model number against the compatibility list (Section 2).
Dust Escaping Vacuum	Filter not installed correctly or damaged.	Reinstall the filter, ensuring it is seated securely without gaps. Inspect the filter for any tears or damage; replace if necessary.

7. SPECIFICATIONS

- **Product Name:** Washable Vacuum Filter
- **Material:** Filter media (specific material not provided, designed for washing)
- **Color:** As shown (typically white/light grey)
- **Item Weight:** Approximately 46 g (per filter)
- **Package Content:** Typically 4 filters per pack
- **Compatibility:** Refer to Section 2 for a detailed list of compatible models.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question