

Ankuwa ECO9002

Ankuwa Electric Can Opener ECO9002 User Manual

Model: ECO9002

1. PRODUCT OVERVIEW

The Ankuwa Electric Can Opener is a battery-operated kitchen tool designed for effortless can opening. It features one-touch operation, a smooth-edge cutting mechanism, and a magnetic lid lift for safe and convenient use. This device is suitable for various standard can sizes and shapes, making it ideal for individuals with limited hand strength, seniors, or anyone seeking a hands-free can opening experience.

Key features include:

- **One-Touch Operation:** Start and stop with a single press.
- **Smooth Edge Cutting:** Leaves no sharp edges on the can or lid.
- **Magnetic Lid Lift:** Safely removes the lid after cutting.
- **Versatile:** Works with most standard round, square, and oval cans.
- **Battery Powered:** Operates on 4 AA batteries (not included) for cordless convenience.

Can Opener Can Open Can for Everyone

The advertisement features a central image of a woman with long brown hair, smiling and giving a thumbs-up. She is positioned behind a large, black, oval-shaped electric can opener. The background is a vibrant red with faint, overlapping images of various food cans. Below the main image, there are four circular inset photographs, each with a label above it. The top-left inset shows a chef in a white uniform and hat, labeled 'Chef'. The top-right inset shows a young man with his arms in white casts, labeled 'Injuries'. The bottom-left inset shows an elderly couple in a kitchen, labeled 'Seniors'. The bottom-right inset shows a woman in a red apron holding her hand in pain, labeled 'Arthritis patients'.

Chef

Injuries

Seniors

Arthritis patients

Image: The Ankuwa Electric Can Opener is designed for ease of use by a wide range of individuals, including those with limited hand mobility.

For All Can Size and Shapes



Circular



Elliptical



Square



Image: The can opener is designed to work with various can shapes and sizes, including circular, elliptical, and square cans.

2. SAFETY INFORMATION

This electric can opener is designed with safety in mind. The cutting mechanism operates along the side of the lid, creating a smooth edge that minimizes the risk of accidental cuts. Always handle opened cans and lids with care, even with the smooth edge feature.

Smooth Edge



Image: The can opener creates a smooth edge, enhancing safety during and after use.

Battery Safety

- Use only 4 AA batteries. Do not mix old and new batteries, or different types of batteries.
- Ensure correct polarity (+/-) when inserting batteries.
- Remove batteries if the device will not be used for an extended period.
- If batteries become warm during use, check for correct installation and replace if necessary.

3. SETUP

Battery Installation

1. Locate the battery compartment on the underside of the can opener.
2. Slide open the battery cover.
3. Insert 4 AA batteries, ensuring correct polarity (+ and - terminals). The device includes a removable battery belt for easier replacement.
4. Close the battery cover securely.

Higher Speed



Image: Open the battery compartment and insert 4 AA batteries, observing polarity. A ribbon assists with battery removal.

Initial Blade Check

Before first use, ensure the cutting blade is fully retracted. In rare cases, the blade may remain extended after manufacturing quality control. If this occurs, insert the batteries, press the start button once, and wait for the blade to return to its starting position before placing the opener on a can.

4. OPERATING INSTRUCTIONS

Follow these steps to open a can safely and efficiently:

1. **Position the Opener:** Place the electric can opener flat on top of the can, ensuring the cutting wheel and gear are aligned with the can's rim.
2. **Start Operation:** Press the start button once. The opener will automatically grip the can and begin rotating to cut the lid.
3. **Automatic Cutting:** Allow the opener to complete a full rotation around the can. It will continue cutting until you press the button again.
4. **Stop Operation:** Once the cutting is complete, press the start button again. Wait approximately 2 seconds for the blade to fully retract to its starting position.
5. **Remove Opener and Lid:** Carefully lift the can opener from the can. The built-in magnet will hold the lid, allowing for safe and easy disposal.

1. Press to Start



2. Automatic 360° Rotation to Open

3. To Stop in 2s, Press the Button Once More



4. Lift Up the Can Opener and Lid

Image: Step-by-step guide illustrating the operation of the can opener from starting to lid removal.



Image: The 'One Touch' button initiates the automatic 360-degree rotation for opening cans.

Important Notes:

- The automatic can opener does not stop by itself. You must press the button again to stop it and retract the blade.
- Do not lift or pull the opener away from the can before the blade has fully retracted to avoid damage or injury.
- Not recommended for rimless cans, cans with damaged rims, unusually thick seams, or cans that cannot sit securely on a flat surface.

5. MAINTENANCE AND CLEANING

To ensure the longevity and hygienic operation of your Ankuwa Electric Can Opener, follow these simple cleaning instructions:

- **Wipe Clean:** After each use, wipe the surface of the can opener with a damp cloth.
- **Avoid Water Immersion:** Do not immerse the can opener in water or rinse it under running water, as this can

damage the electronic components.

- **Dry Thoroughly:** Ensure the device is completely dry before storing it.

6. TROUBLESHOOTING

If you encounter any issues with your electric can opener, refer to the following common solutions:

- **Opener Not Starting:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old or depleted batteries with new AA batteries.
- **Opener Stops Mid-Cycle:**
 - Ensure the can is stable and not moving during operation.
 - Check battery power; replace if low.
- **Blade Not Retracting:**
 - Press the start button again and wait for approximately 2 seconds for the blade to retract. Do not force it.
- **Batteries Becoming Warm:**
 - Verify that the positive and negative terminals of the batteries are installed correctly. Incorrect battery placement can cause overheating.
 - If the issue persists, replace the batteries.
- **Uneven Cut or Opener Slipping:**
 - Ensure the can opener is placed firmly and squarely on the can's rim.
 - This opener is not suitable for cans with unusual rim designs, damaged rims, or extremely thick seams.

7. PRODUCT SPECIFICATIONS

Specification	Detail
Brand	Ankuwa
Model Number	ECO9002
Operation Mode	Automatic
Power Source	4 AA Batteries (not included)
Blade Material	Stainless Steel
Product Dimensions	9.7W x 21.3H Centimetres (approx. 8.38*3.81*2.55 inches)
Color	Black+grey

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly through their official website or customer service channels. Keep your purchase receipt as proof

of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question