

[Manuals.plus](#) /

› [FANMIS](#) /

› FANMIS Digital Analog Watch (Model 8105) User Manual

FANMIS 8105

FANMIS Digital Analog Watch (Model 8105) User Manual

Your guide to operating and maintaining your FANMIS timepiece.

INTRODUCTION

Thank you for choosing the FANMIS Digital Analog Watch, Model 8105. This watch combines classic analog timekeeping with modern digital functions, including world time, multiple alarms, a stopwatch, countdown timer, and an LED backlight. This manual provides detailed instructions to help you set up and utilize all features of your new watch.



Image: FANMIS Digital Analog Watch, Model 8105, in Black Gold. This image shows the watch face with both analog hands and digital displays for time, day, and date.

WATCH COMPONENTS

Familiarize yourself with the buttons and display areas of your watch:

- **MODE Button:** Cycles through different modes (Timekeeping, Alarm, Stopwatch, Countdown, World Time).
- **LIGHT Button:** Activates the LED backlight.
- **START Button:** Used to start/stop functions in Stopwatch/Countdown modes, and to adjust settings.
- **RESET Button:** Used to reset values or confirm settings.
- **Analog Display:** Traditional hour and minute hands.

- **Digital Display:** Shows time, date, day, and other digital functions.

DETAILS

Details Display

Exquisite details, crafted with care.



Dual-display design

Multiple functional dials, stylish and personalized in design, easy to read the time.

Image: Detailed view of the watch face, illustrating the dual analog and digital displays, along with indicators for various functions like alarm, snooze, and daylight saving time.

SETUP AND BASIC OPERATION

1. Setting Time and Date

1. In Timekeeping Mode, press and hold the **RESET** button until the seconds begin to flash. This indicates setting mode.
2. Press the **MODE** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **START** button to increase the flashing value. Hold **START** to rapidly advance.
4. Once all settings are correct, press the **RESET** button to exit setting mode.

2. 12/24 Hour Format

In Timekeeping Mode, press the **START** button to toggle between 12-hour (with 'PM' indicator) and 24-hour

formats.

3. Daylight Saving Time (DST)

In Timekeeping Mode, press and hold the **START** button to activate or deactivate DST. An indicator will appear on the digital display when DST is active.

OPERATING MODES

Press the **MODE** button to cycle through the following functions:

- **Timekeeping Mode:** Displays current time, date, and day.
- **Alarm Mode:** Set and manage up to five daily alarms.
- **Stopwatch Mode:** Measure elapsed time.
- **Countdown Timer Mode:** Set a timer for a specific duration.
- **World Time Mode:** View times in different time zones.

1. Alarm Mode

1. From Timekeeping Mode, press **MODE** once to enter Alarm Mode.
2. Press **START** to select Alarm 1 through Alarm 5.
3. To set an alarm, press and hold **RESET** until the hour flashes.
4. Use **START** to adjust the hour, then press **MODE** to move to minutes. Use **START** to adjust minutes.
5. Press **RESET** to confirm and exit alarm setting.
6. To turn an alarm ON/OFF, select the alarm and press **START**. An alarm icon will appear when active.
7. **Snooze Function:** When an alarm sounds, press **LIGHT** to activate snooze. The alarm will sound again after approximately 5 minutes.
8. **Hourly Chime:** In Alarm Mode, press **MODE** until the hourly chime indicator flashes. Press **START** to toggle ON/OFF.

2. Stopwatch Mode

1. From Timekeeping Mode, press **MODE** twice to enter Stopwatch Mode.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.

3. Countdown Timer Mode

1. From Timekeeping Mode, press **MODE** three times to enter Countdown Timer Mode.
2. To set the countdown time, press and hold **RESET** until the hour flashes.
3. Use **START** to adjust the hour, then press **MODE** to move to minutes. Use **START** to adjust minutes.
4. Press **RESET** to confirm the countdown time.
5. Press **START** to begin the countdown.
6. Press **START** again to pause/resume the countdown.
7. Press **RESET** to stop and reset the countdown.

4. World Time Mode

1. From Timekeeping Mode, press **MODE** four times to enter World Time Mode.
2. Press **START** to cycle through different world time zones.

5. LED Backlight

Press the **LIGHT** button at any time to illuminate the digital display for a few seconds, allowing for easy reading in low-light conditions.

MAINTENANCE

Water Resistance (5 ATM)

Your FANMIS watch is rated 5 ATM (50 meters) water resistant. This means it is suitable for daily splashes, rain, and hand washing. It is **not** suitable for showering, bathing, swimming, diving, or any activities involving prolonged water immersion or high-pressure water exposure.

- **DO NOT** press any buttons underwater.
- Avoid exposing the watch to extreme hot or cold temperatures, as this can affect water resistance seals.
- If mist or droplets appear inside the watch surface, contact customer support immediately to prevent moisture corrosion of internal components.

Cleaning

Wipe the watch case and band regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or solvents.

Battery

The watch is powered by a battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery.
Time is inaccurate.	Incorrect time setting; exposure to strong magnetic fields.	Re-set the time. Keep watch away from strong magnetic sources.
Mist or condensation inside the watch.	Water ingress; sudden temperature changes.	Stop using the watch immediately and contact customer support.
Buttons are unresponsive.	Watch is wet; internal malfunction.	Ensure watch is dry. If issue persists, contact customer support.

SPECIFICATIONS



Image: Rear view of the FANMIS watch, displaying the stainless steel case back with water resistance rating and model information.

Feature	Detail
Model Number	8105
Display Type	Analog-Digital
Movement Type	Quartz (Electronic)
Case Material	Acrylonitrile Butadiene Styrene (ABS)
Band Material	Thermoplastic Polyurethane (TPU)
Crystal Material	Glass

Feature	Detail
Case Diameter	48 millimeters
Case Thickness	16 millimeters
Band Width	22 millimeters
Water Resistance Depth	50 meters (5 ATM)
Additional Features	Alarm, Easy Reader, World Time, LED Backlight
Power Source	Battery Powered

WARRANTY INFORMATION

Your FANMIS Digital Analog Watch comes with a**Limited Warranty**. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact customer support.

CUSTOMER SUPPORT

Should you have any questions, require assistance with your watch, or need to make a warranty claim, please contact FANMIS customer support through the official FANMIS store or website.

Visit the FANMIS
Store