

[Manuals.plus](#) /

› [Bright Starts](#) /

› Bright Starts Rockin' Crawling Crab Interactive Toy Instruction Manual

Bright Starts 17635

Bright Starts Rockin' Crawling Crab Instruction Manual

Model: 17635

INTRODUCTION

The Bright Starts Rockin' Crawling Crab is an interactive toy designed to encourage babies aged 6 months and older to crawl and develop motor skills. This toy plays music, moves, and dances, featuring built-in sensors to avoid obstacles and an auto-stop function when lifted.



Image: The Bright Starts Rockin' Crawling Crab toy in red and teal colors.

WHAT'S IN THE BOX

- 1 x Rockin' Crawling Crab toy

SETUP

Battery Installation

The Rockin' Crawling Crab requires 3 AAA batteries. Demonstration batteries are included, but it is recommended to replace them for optimal performance.

1. Locate the battery compartment on the underside of the crab.
2. Using a Phillips head screwdriver, loosen the screw and open the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the cover and tighten the screw securely.

OPERATING INSTRUCTIONS

Power On/Off

The toy features an on/off switch, typically located near the battery compartment. Ensure the switch is in the "ON" position to activate the toy.

Activating Movement and Music

To start the crab's movement, music, and dancing, press the button located on the top of its bright red shell.

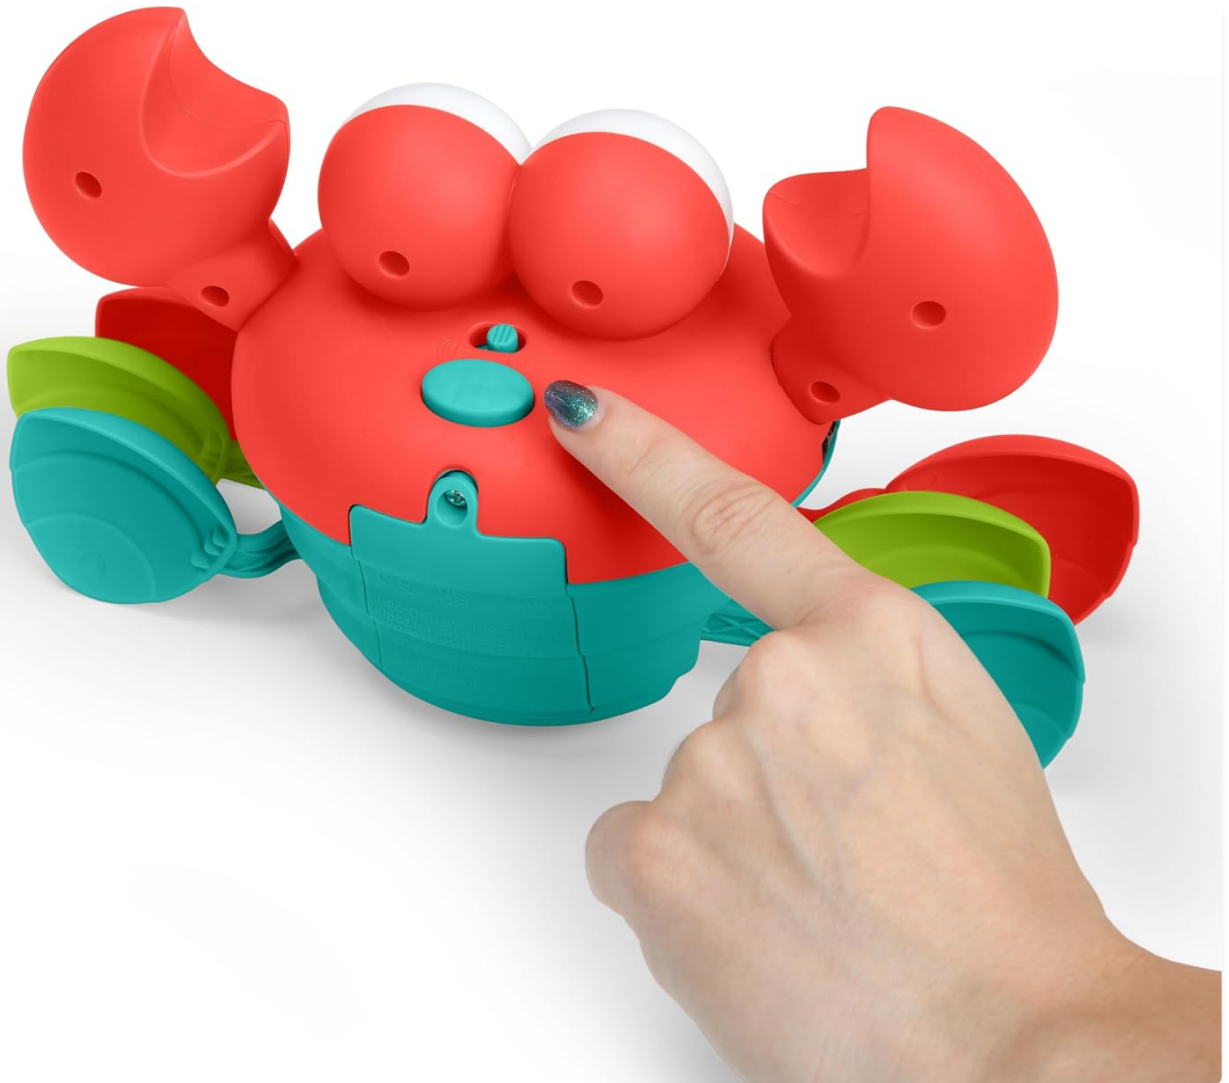


Image: A hand pressing the button on the crab's back to activate it.

Obstacle Avoidance

The Rockin' Crawling Crab is equipped with integrated sensors that detect obstacles. When the crab encounters an object, it will automatically change direction to continue moving, providing uninterrupted play.

Auto-Stop Sensor

For safety and convenience, the crab's legs will automatically stop moving when the toy is lifted from the surface. This feature prevents the legs from spinning freely while being held.



Image: A baby interacting with the moving Rockin' Crawling Crab toy.

MAINTENANCE

Cleaning Instructions

To clean the Rockin' Crawling Crab, simply wipe it with a damp cloth and mild soap. Do not immerse the toy in water or use harsh cleaning agents.

TROUBLESHOOTING

- **Toy is not moving or playing music:**

Ensure the on/off switch is in the "ON" position. Check the batteries and replace them if necessary, as demonstration batteries may have limited life.

- **Toy moves too fast:**

The crab is designed to move at a stimulating pace to encourage crawling. This is normal operation.

- **Toy stops moving unexpectedly:**

The toy has an auto-stop sensor that activates when it is lifted. Ensure the toy is placed on a flat surface. If it stops on its own, it may have encountered an obstacle and is redirecting, or the batteries may be low.

SAFETY INFORMATION

- Keep the toy away from fire or direct heat sources.
- Always supervise children during play.
- Recommended for babies aged 6 months to 3 years.
- Do not allow children to put the toy in their mouth.
- Ensure battery compartment is securely closed to prevent access to batteries.

SPECIFICATIONS

Model Number	17635
Recommended Age	6 months - 3 years
Dimensions (L x W x H)	11.3 x 24.79 x 15.19 cm (4.45 x 9.76 x 5.98 inches)
Weight	261.27 g (0.58 lbs)
Batteries Required	3 x AAA (included for demonstration)
Material Composition	70% Plastic, 30% Metal

WARRANTY AND SUPPORT

For information regarding warranty, returns, or customer support, please refer to the product packaging or contact Bright Starts customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question