

[Manuals.plus](#) /

› [Hoover](#) /

› Hoover H-CARE 300 Washing Machine User Manual - 10 kg Capacity, 1400 RPM

Hoover H3W 410BL10H-S

Hoover H-CARE 300 Washing Machine User Manual

Model: H3W 410BL10H-S

1. INTRODUCTION

Thank you for choosing the Hoover H-CARE 300 Washing Machine. This appliance is designed to provide efficient and effective laundry care. To ensure safe and optimal performance, please read this manual carefully before installation and use. Keep this manual for future reference.



Figure 1.1: Front view of the Hoover H-CARE 300 Washing Machine.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Do not operate the appliance if it is damaged or malfunctioning.
- Unplug the appliance before performing any maintenance or cleaning.
- Do not wash items that have been cleaned in, washed with, soaked in, or spotted with combustible or explosive substances.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Check for any damage during transit. The package includes the power cable, fill hose, and drain hose.

3.2 Placement

Place the washing machine on a firm, level floor. Ensure there is adequate space around the appliance for ventilation and maintenance. This is a free-standing unit.

- **Dimensions (Depth x Width x Height):** 55.8P x 59.5I x 85H cm



Figure 3.1: Example placement of the washing machine in a bathroom setting.

3.3 Connections

1. **Water Supply:** Connect the fill hose to a cold water tap and to the appliance's water inlet. Ensure connections are tight to prevent leaks.
2. **Drainage:** Securely attach the drain hose to a suitable drain pipe or sink. Ensure the hose is not kinked or blocked.
3. **Electrical Connection:** Plug the power cable into a grounded 230 Volt electrical outlet. Do not use extension cords.

3.4 Leveling

Adjust the appliance's feet to ensure it is perfectly level. A level machine reduces vibration and noise during operation.

4. OPERATING INSTRUCTIONS

4.1 Control Panel

The washing machine features a touch control panel and touchscreen interface for easy program selection and setting adjustments.



Figure 4.1: The touch control panel and display.

4.2 Loading Laundry

Open the front-loading door and load laundry into the drum. Do not overload the machine; the maximum capacity is 10 kg. The Ultra Wide XL CareDrum is designed to protect fabrics and improve washing results.



Figure 4.2: The washing machine drum with the door open.

4.3 Detergent Dispenser

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent and fabric softener to the designated compartments. The ProCare Wash technology uses a water injection method for rapid and uniform detergent distribution.



Figure 4.3: The detergent dispenser drawer.

4.4 Selecting a Program

Turn the program selector knob or use the touchscreen to choose one of the 16 standard washing programs. Specialized Care cycles include:

- **Auto Care:** Automatically detects load and sets optimal washing parameters.
- **Allergy Care Pro:** Combines steam action and intensive 60°C rinse for deep sanitization.
- **All in One 49':** A quick program for mixed loads.
- **Rapid 14/30 minutes:** Fast wash cycles for lightly soiled items.

Available cycle options include Spin, Cotton, Eco, Drum Clean, and Rinse.

4.5 Starting a Cycle

Press the Start/Pause button to begin the selected washing program. The display will show the remaining time.

4.6 End of Cycle

Once the cycle is complete, the machine will signal. Open the door and remove your laundry promptly.

5. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your washing machine.

5.1 Cleaning the Drum

Utilize the dedicated 60°C drum cleaning cycle periodically to maintain hygiene and prevent odors.

5.2 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any residue. Clean the housing of the dispenser with a brush.

5.3 Cleaning the Door Seal

The Clean Shield™ antimicrobial treatment helps protect the door seal from mold. Wipe the door seal regularly with a damp cloth to remove lint and residue.

5.4 Cleaning the Porthole Glass

The Smart Spray system with double water injection helps clean the porthole glass. For manual cleaning, wipe the glass with a soft, damp cloth after each wash.

5.5 Filter Cleaning

Consult the full manual for instructions on how to access and clean the drain pump filter, typically located at the bottom front of the machine. This should be done regularly to prevent blockages.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

- **Machine does not start:** Ensure the power cable is plugged in, the door is closed properly, and the Start/Pause button has been pressed. Check the circuit breaker.
- **Excessive vibration or noise:** Verify the machine is level and that all transit bolts have been removed during installation. Ensure the load is balanced. The AI CareDrive system helps manage vibrations for quiet operation (72 dB during spin).
- **Water not draining:** Check the drain hose for kinks or blockages. Clean the drain pump filter.
- **Detergent residue in dispenser:** Ensure the dispenser is clean and not blocked. Use the correct amount and type of detergent.
- **Unsatisfactory washing results:** Check load size, detergent dosage, and program selection. Ensure water supply is adequate.

For more detailed troubleshooting, please refer to the complete user manual or contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Hoover
Model Name	Hoover H-CARE 300 Lavatrice 10 kg
Model Number	H3W 410BL10H-S

Feature	Specification
Capacity	10 kg
Maximum Spin Speed	1400 Revolutions per minute
Energy Efficiency Class	A-40% (40% more efficient than traditional Class A)
Noise Level (Spin)	72 Decibels
Dimensions (D x W x H)	55.8P x 59.5I x 85H cm
Loading Position	Front-load
Color	White
Material	Metal
Controls Type	Touch
User Interface Input	Touchscreen
Voltage	230 Volts
Number of Standard Cycles	16
Included Components	Power cable, Fill hose, Drain hose

8. WARRANTY INFORMATION

This Hoover H-CARE 300 Washing Machine comes with a product warranty of **2 years** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal household use. For full terms and conditions, refer to the warranty card included with your appliance or contact Hoover customer service.

9. SUPPORT

For technical assistance, spare parts, or further information regarding your Hoover H-CARE 300 Washing Machine, please contact Hoover customer support. Contact details can typically be found on the Hoover official website or in the documentation provided with your appliance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question