

[Manuals.plus](#) /

› [Relaxdays](#) /

› Relaxdays Wooden Upholstered Footstool - Model 10053718_93 User Manual

Relaxdays 10053718_93

Relaxdays Wooden Upholstered Footstool

Model: 10053718_93

INTRODUCTION

This manual provides instructions for the assembly, use, and maintenance of your Relaxdays Wooden Upholstered Footstool. This versatile piece of furniture is designed to offer comfort and functionality in various settings within your home.

The footstool features a solid beech wood frame and a comfortable linen upholstered top. It can serve as a leg rest, an additional seat, or a compact stool. Please read these instructions carefully to ensure safe and proper use.

SAFETY INSTRUCTIONS

- Ensure all parts are securely fastened before using the footstool.
- Do not exceed the maximum weight capacity of **100 kg (220 lbs)** to prevent damage or injury.
- Keep the footstool away from open flames, heat sources, and excessive moisture.
- Do not stand on the footstool. It is designed for sitting or resting feet only.
- Regularly check all connections for tightness and re-tighten if necessary.

PACKAGE CONTENTS

Before assembly, please verify that all components are present:

- 1x Footstool (in parts)
- Assembly materials (screws, washers, etc.)
- Instruction manual

If any parts are missing or damaged, please contact Relaxdays customer support.

SETUP AND ASSEMBLY

The Relaxdays Wooden Upholstered Footstool requires quick and straightforward assembly. Follow these steps carefully:

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify the wooden frame pieces and the upholstered top.
3. Attach the legs to the main frame using the provided screws and assembly materials. Ensure the legs are oriented correctly.

4. Securely fasten all screws. Do not overtighten, but ensure a firm connection.
5. Place the upholstered top onto the assembled frame and secure it if necessary (some models may have pre-attached tops or require simple placement).
6. Once assembled, gently test the stability of the footstool before full use.



Image: Underside view of the footstool, illustrating the points where the wooden frame components are joined with screws during assembly.

OPERATING INSTRUCTIONS (USAGE)

Your Relaxdays footstool is designed for versatile use:

- **Footrest:** Position the footstool in front of your sofa or armchair to comfortably elevate your feet and legs, promoting relaxation.
- **Additional Seating:** Use it as an extra seat for guests in your living room or bedroom.
- **Entryway Stool:** Place it in your hallway as a convenient stool for changing shoes.



Image: A person using the footstool as a comfortable leg rest while seated on a sofa.



Image: The footstool being used as a practical seat in an entryway for putting on shoes.

MAINTENANCE

Proper care will extend the life and appearance of your footstool:

- **Upholstered Cover:** The linen cover is removable for easy cleaning. Gently unzip or unfasten the cover.
- **Washing Instructions:** Wash the cover according to the fabric care label, typically a gentle cycle with cold water. Air dry or tumble dry on low heat to prevent shrinkage. Do not bleach.
- **Wooden Frame:** Wipe the wooden frame with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the wood finish.
- **Spills:** Blot spills immediately with a clean, dry cloth. Do not rub, as this can spread the stain.



Image: Detail showing the removable upholstered cover, highlighting its ease of removal for cleaning.

TROUBLESHOOTING

- **Footstool feels wobbly:** Check all assembly screws and connections. Re-tighten any loose fasteners. Ensure the footstool is placed on a flat, even surface.
- **Stains on upholstery:** Refer to the maintenance section for cleaning instructions. For stubborn stains, professional upholstery cleaning may be required.
- **Damaged parts:** If any part of the footstool is damaged, discontinue use and contact customer support for assistance.

SPECIFICATIONS

Model Number:	10053718_93
---------------	-------------

ASIN:	B0H75RT4YN
Dimensions (D x W x H):	25 cm x 40 cm x 29 cm (9.8 in x 15.7 in x 11.4 in)
Weight Capacity:	Approx. 100 kg (220 lbs)
Product Weight:	Approx. 1.69 kg (3.7 lbs)
Materials:	Beech Wood (frame), Foam, Linen (upholstery)
Color:	Brown
Assembly Required:	Yes
Care Instructions:	Removable cover for washing



Image: Visual representation of the footstool's dimensions and maximum weight capacity.

WARRANTY AND SUPPORT

For detailed warranty information, product support, or to purchase replacement parts, please visit the official Relaxdays website or

contact your retailer directly.
[Visit the Relaxdays Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question