

[Manuals.plus](#) /

> [KRUPS](#) /

> KRUPS Coffee Crush SA404BE1 Automatic Bean-to-Cup Coffee Machine Instruction Manual

KRUPS SA404BE1

KRUPS Coffee Crush SA404BE1 Automatic Bean-to-Cup Coffee Machine Instruction Manual

Model: SA404BE1

1. INTRODUCTION AND OVERVIEW

The KRUPS Coffee Crush SA404BE1 is a compact automatic bean-to-cup coffee machine designed to deliver freshly ground coffee with ease. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Enjoy a variety of coffee beverages, from espresso to milk-based drinks, prepared with 15 bars of pressure and customizable grind settings.



Image 1.1: The KRUPS Coffee Crush SA404BE1, highlighting its compact design and fresh bean intensity.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Always unplug the appliance from the power outlet before cleaning, maintenance, or if it is not in use.
- Keep the appliance out of reach of children.

- Avoid contact with hot surfaces, especially the coffee spout and steam nozzle, to prevent burns.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only original KRUPS accessories and spare parts.

3. COMPONENTS OVERVIEW

Familiarize yourself with the main parts of your KRUPS Coffee Crush machine:

- **A. Bean Hopper:** For whole coffee beans (capacity: 150g).
- **B. Water Tank:** Removable, with a capacity of 1.8 liters.
- **C. Control Panel:** Intuitive touch interface for selecting drinks and settings.
- **D. Coffee Spout:** Adjustable height for various cup sizes.
- **E. Drip Tray:** Collects excess liquid and coffee grounds.
- **F. Coffee Grounds Container:** Located within the drip tray, collects used coffee pucks.
- **G. Steam Nozzle:** For frothing milk and dispensing hot water.
- **H. Pre-ground Coffee Funnel:** For using pre-ground coffee.

JUSQU'À 50 % PLUS COMPACTE
par rapport à une machine à café à grains classique

Bac à grains : 150 g



Image 3.1: Front view of the KRUPS Coffee Crush SA404BE1, illustrating key components.

4. SETUP AND FIRST USE

Follow these steps for initial setup:

1. **Unpacking:** Carefully remove the machine from its packaging. Remove all protective films and packaging materials.
2. **Positioning:** Place the machine on a stable, flat, heat-resistant surface, away from water splashes and heat sources. Note its compact dimensions: 29.5 cm (depth) x 15 cm (width) x 36 cm (height).
3. **Initial Cleaning:** Wash the water tank, drip tray, and coffee grounds container with warm water and mild detergent. Rinse thoroughly and dry.
4. **Fill Water Tank:** Fill the water tank with fresh, cold drinking water up to the MAX level. Place it back into the machine.
5. **Fill Bean Hopper:** Open the bean hopper lid and pour whole coffee beans into the hopper. Close the lid securely.



Image 4.1: The compact design of the KRUPS Coffee Crush, measuring 15 cm in width.

6. **Power On:** Plug the power cord into a grounded electrical outlet. Press the power button to turn on the machine.
7. **First Rinse Cycle:** The machine will automatically perform a rinse cycle. Place a container under the coffee spout and steam nozzle. This process cleans the internal circuits and prepares the machine for use.



CAFÉ FRAÎCHEMENT MOULU

Pression de 15 bars

3 degrés de mouture

Image 4.2: Filling the bean hopper with fresh coffee beans.

5. OPERATING INSTRUCTIONS

5.1 Making Coffee from Whole Beans

1. **Select Grind Level:** Adjust the grind setting knob inside the bean hopper. There are 3 grind levels available. A finer grind produces a stronger espresso, while a coarser grind is suitable for filter coffee.
2. **Place Cup:** Position your cup(s) under the coffee spout. Adjust the spout height if necessary.
3. **Select Drink:** On the intuitive touch control panel, select your desired drink (Espresso, Lungo, Filter Coffee).
4. **Customize (Optional):** You can adjust the intensity, volume, and temperature of your coffee using the dedicated icons on the control panel.
5. **Start Brewing:** Press the 'Start/Stop' button to begin brewing. The machine will grind the beans and dispense your coffee.

INTERFACE SUPER INTUITIVE

Votre boisson en un seul geste.
Contrôlez intensité, volume & température en
toute simplicité



Image 5.1: The intuitive control panel for easy drink selection and customization.

5.2 Using Pre-ground Coffee

The machine allows for the use of pre-ground coffee, ideal for decaffeinated options or different blends.

1. **Open Funnel:** Open the pre-ground coffee funnel.
2. **Add Coffee:** Add one level scoop of pre-ground coffee into the funnel. Do not overfill.
3. **Select Drink:** Choose your desired drink from the control panel. The machine will automatically use the pre-ground coffee.

MÊME AVEC DU CAFÉ MOULU

Idéal pour les amateurs de décaféiné



Image 5.2: Adding pre-ground coffee for a single serving.

5.3 Hot Water and Milk Frothing

Use the steam nozzle for hot water or to create frothed milk for cappuccinos and lattes.

- **Hot Water:** Place a cup under the steam nozzle and select the 'Hot Water' function on the control panel.
- **Milk Frothing:** Fill a pitcher with cold milk. Submerge the steam nozzle tip just below the surface of the milk. Select the 'Steam' function. Move the pitcher up and down to create foam. Turn off steam when desired texture is achieved.

GRANDE VARIÉTÉ DE CAFÉS

Espresso, lungo, café filtre,
boissons lactées et eau chaude



Image 5.3: A variety of coffee and hot beverages that can be prepared with the machine.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee machine.

6.1 Daily Cleaning

- **Drip Tray and Coffee Grounds Container:** Empty and clean the drip tray and coffee grounds container daily or when prompted by the machine. Simply pull out the tray, remove the container, discard the coffee pucks, and rinse both parts with warm water.

NETTOYAGE FACILE



1. Tirez



2. Un clic, c'est fait !

Image 6.1: Easy cleaning of the coffee grounds container.

- **Steam Nozzle:** After each use, wipe the steam nozzle with a damp cloth to remove any milk residue. Periodically, remove the nozzle and rinse it thoroughly.
- **Water Tank:** Rinse the water tank regularly and refill with fresh water.

6.2 Descaling

The machine will indicate when descaling is required. Use a KRUPS descaling solution and follow the instructions provided with the descaler or in the machine's display prompts. Descaling removes mineral buildup and maintains machine efficiency.

NETTOYAGE FACILE



Image 6.2: Visual steps for easy cleaning of the coffee grounds container.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty; coffee beans empty; coffee spout blocked.	Refill water tank; refill bean hopper; clean coffee spout.
Coffee is too weak or watery.	Grind setting too coarse; insufficient coffee dose; descaling needed.	Adjust grind to a finer setting; check coffee dose; perform descaling.
Machine is leaking.	Drip tray full or incorrectly positioned; water tank not properly seated.	Empty and correctly position drip tray; ensure water tank is securely in place.
Steam nozzle not producing steam.	Nozzle blocked; machine not heated to steam temperature.	Clean the steam nozzle; wait for the machine to reach operating temperature.

8. SPECIFICATIONS

Feature	Detail
Model Number	SA404BE1
Dimensions (L x W x H)	29.5 x 15 x 36 cm
Weight	4.76 Kilograms
Water Tank Capacity	1.8 Liters

Feature	Detail
Bean Hopper Capacity	150g
Pump Pressure	15 Bars
Power	1150 Watts
Interface	Touch Screen
Coffee Type Compatibility	Whole Bean, Ground Coffee
Manufacturer	Groupe SEB
Country of Origin	China

9. WARRANTY AND SUPPORT

Your KRUPS Coffee Crush SA404BE1 coffee machine comes with a manufacturer's warranty.

- **Warranty Period:** 2 years manufacturer's warranty.
- **Spare Parts Availability:** Spare parts are available for 15 years from the date of purchase.

For technical assistance, repairs, or to inquire about spare parts, please contact KRUPS customer service or visit the official KRUPS website for support information specific to your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0H764L8SQ>

More documents and user manuals: <https://manuals.plus/>