

665.75

# OEM Genuine Range Front Leveling Leg Instruction Manual

Model: 665.75 | Brand: Generic

## 1. INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your OEM Genuine Range Front Leveling Leg. This component is designed to ensure your kitchen range is stable and level, which is crucial for safe and efficient cooking. Please read these instructions carefully before proceeding with installation or any adjustments.



This image displays the OEM Genuine Range Front Leveling Leg, a crucial component for stabilizing your kitchen range.

## 2. COMPATIBILITY

This OEM Genuine Range Front Leveling Leg (Model 665.75) is compatible with a wide range of kitchen appliances. Please verify your appliance's model number against the lists below to ensure proper fit.

### Compatible Brands and Models:

#### MagicChef:

- CER3311XAW0

#### Amana:

- AEP200VAW0, AEP200VAW1, AEP222VAW1, AEP222VAW2, AEP222VAW3, AEP222VAW4, AEP222VAW5
- AER3311WAQ0, AER5523XAB0, AER5523XAQ0, AER5523XAW0, AER5524XAD0, AER5823XCB0, AER5823XCS0, AER5823XCW0
- AGG200AAW0, AGG222VDB0, AGG222VDB1, AGG222VDW1, AGG222VDW2, AGG222VDW3, AGG222VDW4, AGG222VDW6
- AGP200VDW1, AGR3311WDQ0, AGR3311WDW1, AGR3311WDW2, AGR3311WDW3, AGR3530AAW0
- AGR4433XDB0, AGR4433XDB1, AGR4433XDB2, AGR4433XDS0, AGR4433XDS1, AGR4433XDS2, AGR4433XDW0, AGR4433XDW1, AGR4433XDW2

#### Maytag:

- AEP222VAW0, AER3311WAW0, AER5522VAS0, AER5522VAW0, AER5522VCS0, AER5522VCW0
- AER5821VAS0, AER5821VAW0, AER5822VAB0, AER5822VAD0, AER5822VAS0, AER5822VAW0
- AER5823XAB0, AER5823XAS0, AER5823XAW0, AER5830VAB0, AER5830VAD0, AER5830VAS0, AER5830VAW0
- AER5844VAB0, AER5844VAD0, AER5844VAS0, AER5844VAW0, AER5844VCB0, AER5844VCS0, AER5844VCW0
- AGG222VDW0, AGR3311WDW0, AGR4422VDB0, AGR4422VDD0, AGR4422VDS0, AGR4422VDW0
- AGR5844VDB0, AGR5844VDB1, AGR5844VDD0, AGR5844VDD1, AGR5844VDS0, AGR5844VDS1, AGR5844VDW0, AGR5844VDW1
- AGR6011VDB0, AGR6011VDB1, AGR6011VDS0, AGR6011VDS1, AGR6011VDW0, AGR6011VDW1
- CERS858TCD0, CERS858TCW0, CGR3300XDW0, CGRP305TDW0
- MER5605WB0, MER5605WW0, MER7662WB0, MER7662WB1, MER7662WQ1, MER7662WS0, MER7662WS1, MER7662WT0, MER7662WW0,

MER7662WW1

- MER7765WB0, MER7765WB1, MER7765WS0, MER7765WS1, MER7765WW0, MER7765WW1
- MER7775WB0, MER7775WB1, MER7775WS0, MER7775WS1, MER7775WW0, MER7775WW1
- MGR5605WB0, MGR5605WW0, MGR7661WB0, MGR7661WB1, MGR7661WB2, MGR7661WS0, MGR7661WS1, MGR7661WS2, MGR7661WW0, MGR7661WW1, MGR7661WW2
- MGR7662WB0, MGR7662WB1, MGR7662WB2, MGR7662WQ0, MGR7662WQ1, MGR7662WQ2, MGR7662WS0, MGR7662WS1, MGR7662WS2, MGR7662WW0, MGR7662WW1, MGR7662WW2
- MGR7665WB0, MGR7665WB1, MGR7665WB2, MGR7665WS0, MGR7665WS1, MGR7665WS2, MGR7665WW0, MGR7665WW1, MGR7665WW2
- MGR7775WB0, MGR7775WB1, MGR7775WB2, MGR7775WS0, MGR7775WS1, MGR7775WS2, MGR7775WW0, MGR7775WW1, MGR7775WW2
- YMER7651WB0, YMER7651WB1, YMER7651WS0, YMER7651WS1, YMER7651WW0, YMER7651WW1
- YMER7660WB0, YMER7660WS0, YMER7660WW0, YMER7662WB0, YMER7662WB1, YMER7662WS1, YMER7662WW0, YMER7662WW1
- YMER7765WB0, YMER7765WB1, YMER7765WS0, YMER7765WS1, YMER7765WW0, YMER7765WW1

**Estate:**

- TEP315RW2, TES325MQ1, TES325MQ0, TES325KQ0, TES355KQ0, TGP305TQ0, TES325EW0, TGS325KQ0, TES356RD2, TES325MQ3, TGP305RW2, TGS325MQ6, TGS326MS0, TEP315TV0, TEP315TW0, TES325MQ4, TES355MQ2, TGS326MS1, TEP315KW0, TEP315KW1, TES326RD0, TES326RD2, TES356RD1, TGP325KQ0, TGP325KW0, TGP325LQ0, TGS325EW0, TGS325GW5, TGS325MQ0, TGS325MQ1, TGS325MQ2, TGS325MQ4, TGS326MS2, TGS326TD0, TEP315RV2, TEP315RW0, TES325GW0, TES325MQ5, TES355KT0, TES355MQ0, TES355MQ1, TES356RD0, TGP302KW0, TGP325LQ1, TGP325LW1, TGS325GW0, TGS325GW7, TGS325KT0, TGS326RD0, TGS326RD2, AGP200VDW0, AGR3300XDW0, TEP200VAQ0, TEP222VAB0, TEP222VAQ0, TEP315RV0, TEP315RV1, TEP315RW1, TEP315TV1, TEP315TW1, TEP315VQ0, TEP315VT0, TEP325EW0, TEP325GW0, TEP325KW0, TEP325MW0, TEP340TQ0, TEP340TQ1, TEP340VQ0, TES325GW1,

TES325MQ2, TES325MT4, TES325MT5, TES325VQ0,  
TES325VT0, TES326RD1, TES326RD3, TES326RD4,  
TES326VD0, TES355MB4, TES355MB5, TES355MQ3,  
TES355MQ4, TES355MQ5, TES355MT0,  
TES355MT1, TES355MT2, TES355TB0, TES355TQ0,  
TES355VB0, TES355VQ0, TES356MS0, TES356MS1,  
TES356TD0, TES356TD1, TES356VD0,  
TGG222VDB0, TGG222VDQ0, TGP200VDQ0,  
TGP300TQ0, TGP300TQ1, TGP302LW0,  
TGP302LW1, TGP305RV0, TGP305RV1,  
TGP305RV2, TGP305RV3, TGP305RW0,  
TGP305RW1, TGP305RW3, TGP305TQ1,  
TGP305TQ2, TGP305TT0, TGP305TT1, TGP305TT2,  
TGP310KW0, TGP310LW0, TGP310LW1,  
TGP310LW2, TGP310LW3, TGP310LW4,  
TGP310TQ0, TGP310TQ1, TGP314TQ0, TGP314TT0,  
TGP325LW0, TGS325GW1, TGS325GW6,  
TGS325MB5, TGS325MB6, TGS325MQ3,  
TGS325MQ5, TGS325MT0, TGS325MT1,  
TGS325MT2, TGS325MT3, TGS325MT5,  
TGS325MT6, TGS325VB0, TGS325VB1, TGS325VB2,  
TGS325VQ0, TGS325VQ1, TGS325VQ2, TGS325VT0,  
TGS325VT1, TGS325VT2, TGS326RD1, TGS326TD1,  
TGS326VD0, TGS326VD1, TGS326VD2, TME30100,  
TME30101

#### **Roper:**

- FGP305KW3, FEP310KW2, FEP320KW0,  
FEP310KW4, FEP310KW1, FES330KQ1,  
FGP305KW0, FES330KQ0, FEP310KW0,  
FES330KW1, FEP320KW1, FGP305KW5,  
FGP325KW0, FGS335EW0, FES330EW0,  
FGP305KW4, FEP310GW1, FEP310KW5,  
FEP320GW0, FEP320GW1, FGP300KN1,  
FGP300KW0, FGP305KW2, FES330KN1,  
FGP305KN0, FEP310GN0, FGP305KW6,  
FGP337KW0, FEP310GW0, FES330EQ0,  
FGP305KW1, FGS337GQ7, FEP310EN0,  
FEP310EW0, FEP310EW1, FEP310KN1, FEP320EN0,  
FEP320KN1, FEP330KQ1, FES330GQ0, FGP305KV3,  
FGP335EW0, FGS337GW1, FGS337KQ0,  
FEP320EN1, FEP330EN0, FEP330EW1, FES330EN0,  
FES330GQ1, FES330GW0, FES330KW0,  
FES355RQ2, FGP300KV2, FGP300KW1,  
FGP300KW2, FGP315EW0, FGP335GW0,  
FGP337GW0, FGP337GW5, FGP337KN0,  
FGS335EN0, FGS337GN0, FGS337GW0,  
FEP310EN1, FEP310GN1, FEP310KN0, FEP310KV1,  
FEP310KV2, FEP310KV3, FEP310KV4, FEP310KW3,  
FEP310KW6, FEP310VQ0, FEP320EW0,  
FEP320EW1, FEP320GN0, FEP320GN1,

FEP320KN0, FEP330EN1, FEP330EQ0, FEP330EQ1,  
FEP330EW0, FEP330GN0, FEP330GN1,  
FEP330GQ0, FEP330GQ1, FEP330GW0,  
FEP330GW1, FEP330KN0, FEP330KN1, FEP330KQ0,  
FEP330KW0, FEP330KW1, FES325RQ0,  
FES325RQ1, FES325RQ2, FES326RD0, FES330GN0,  
FES330GN1, FES330GW1, FES330KN0,  
FES355RQ0, FES355RQ1, FES355TB0, FES355TB1,  
FES355TQ0, FES355TQ1, FES356RD0, FES356RD1,  
FES356RD2, FES356RD3, FES356RD4, FGP300KN0,  
FGP300KN2, FGP305KN1, FGP305KN2, FGP305KV4,  
FGP305KW7, FGP310EN0, FGP310EW0,  
FGP314TQ0, FGP315EN0, FGP325EN0,  
FGP325EW0, FGP325GN0, FGP325GN1,  
FGP325GW0, FGP325GW1, FGP325HN0,  
FGP325HW0, FGP325KN0, FGP325KN1,  
FGP325KW1, FGP335EN0, FGP335EQ0,  
FGP335GN0, FGP335GN1, FGP335GQ0,  
FGP335GQ1, FGP335GW1, FGP335HN0,  
FGP335HQ0, FGP335HW0, FGP337GN0,  
FGP337GN1, FGP337GN5, FGP337GQ0,  
FGP337GQ1, FGP337GQ5, FGP337GW1,  
FGP337HN0, FGP337HQ0, FGP337HW0,  
FGP337KQ0, FGP337KW1, FGS325RQ0,  
FGS325RQ1, FGS325RQ2, FGS326RD0,  
FGS326RD1, FGS326RD2, FGS326RD3,  
FGS335EQ0, FGS337GN1, FGS337GN5,  
FGS337GQ0, FGS337GQ1, FGS337GQ5,  
FGS337GQ6, FGS337GW5, FGS337GW6,  
FGS337GW7, FGS337KN0, FGS337KN1,  
FGS337KQ1, FGS337KQ2, FGS337KW0,  
FGS337KW1, FGS337KW2, RME30000, RME30001,  
RME30002, RME30003, RME30100, RME30101,  
RME32300, RME32301, RME32302, RME32303

#### **KitchenAid:**

- KGSA906PSS00, KGRA806PSS00, KGRA806PSS02,  
KGRA806PSS01, KGRS807SSS00, KGSS907SSS00,  
KESA907PSS00, KGSA906PSS02, KDSS907SSS01,  
KESS907SSS00, KGRI801PWH00, KERA807PSS01,  
KESA907PSS01, KGRA806PBL00, KERA205PSS4,  
KGRI801PBS00, KGSA906PBL00, KDSS907SSS00,  
KERA205PBL0, KERI201PBL4, KERS807SSS00,  
KDRS807SSS00, KERA205PWH0, KERA807PSS02,  
KERK807PSS02, KESA907PSS02, KESK901SSS00,  
KGRK806PSS00, KGSK901SSS00, KERA807PSS00,  
KERI201PBS0, KESI901PBS00, KGRK806PSS02,  
KGSA906PBL01, KGSi901PWH02, KDRS807SSS01,  
KERA205PWH4, KERI203PBS0, KESA907PBL00,  
KESA907PBL02, KESA907PWW00, KESS907SBL00,  
KGRK806PBT00, KGRS807SWH00, KGSA906PSS01,

KGSA906PWH00, KGSS907SBL00, KGSS907SWH00,  
KERA205PBT3, KERA205PSS0, KERA205PSS2,  
KERA205PSS3, KERA205PWH3, KERA807PWW00,  
KERI201PBS4, KERI203PBS4, KERK807PSS01,  
KERS807SBL00, KESA907PBB00, KESI901PBS01,  
KESI901PWH00, KESK901SBL00, KESS907SBB00,  
KESS908SPS00, KESS908SPW00, KGRA806PBT01,  
KGRI801PBL00, KGRI801PBS01, KGRK806PSS01,  
KGRS807SBT00, KGSA906PBT00, KGSA906PWH01,  
KGSS907SBT00, KDRS807SSS02, KDRS807SSS03,  
KDRS807SSS04, KDRS807SSS05, KDRS807XSP00,  
KDRS807XSP01, KDSS907SSS02, KDSS907SSS03,  
KDSS907SSS04, KDSS907SSS05, KDSS907XSP00,  
KDSS907XSP01, KERA205PBL1, KERA205PBL2,  
KERA205PBL3, KERA205PBL4, KERA205PBL5,  
KERA205PBT0, KERA205PBT1, KERA205PBT2,  
KERA205PBT4, KERA205PBT5, KERA205PSS1,  
KERA205PSS5, KERA205PWH1, KERA205PWH2,  
KERA205PWH5, KERA807PBB00, KERA807PBB01,  
KERA807PBB02, KERA807PBL00, KERA807PBL01,  
KERA807PBL02, KERA807PWW01,  
KERA807PWW02, KERI201PBL0, KERI201PBL1,  
KERI201PBL2, KERI201PBL3, KERI201PBS1,  
KERI201PBS2, KERI201PBS3, KERI201PWH0,  
KERI201PWH1, KERI201PWH2, KERI201PWH3,  
KERI201PWH4, KERI203PBL0, KERI203PBL2,  
KERI203PBL3, KERI203PBS2, KERI203PBS3,  
KERI203PWH0, KERI203PWH2, KERI203PWH3,  
KERK807PBB00, KERK807PBB01, KERK807PBB02,  
KERK807PBL00, KERK807PBL01, KERK807PBL02,  
KERK807PSS00, KERK807PWW00,  
KERK807PWW01, KERK807PWW02,  
KERS807SBB00, KERS807SBB01, KERS807SBB02,  
KERS807SBL01, KERS807SBL02, KERS807SBL03,  
KERS807SBL04, KERS807SBS03, KERS807SSS01,  
KERS807SSS02, KERS807SSS03, KERS807SSS04,  
KERS807SSS05, KERS807SWW00,  
KERS807SWW01, KERS807SWW02,  
KERS807SWW03, KERS807SWW04,  
KERS807XSP00, KERS807XSP01, KERS807XSP02,  
KESA907PBB01, KESA907PBB02, KESA907PBL01,  
KESA907PWW01, KESA907PWW02, KESI901PBL00,  
KESI901PBL01, KESI901PWH01, KESK901SBL01,  
KESK901SBL02, KESK901SBL04, KESK901SBL05,  
KESK901SBL06, KESK901SSS01, KESK901SSS02,  
KESK901SSS04, KESK901SSS05, KESK901SSS06,  
KESK901SSS07, KESK901SSS08, KESK901SWH00,  
KESK901SWH01, KESK901SWH02,  
KESK901SWH04, KESK901SWH05,  
KESK901SWH06, KESS907SBB01, KESS907SBB02,  
KESS907SBL01, KESS907SBL02, KESS907SBL04,  
KESS907SBL05, KESS907SBL06, KESS907SSS0

**Kenmore:**

- 665.75775890, 665.75022100, 665.75134300, 665.95776890, 665.72004101, 665.72004103, 665.72014104, 665.75023100, 665.75024100, 665.92012102, 665.92022101, 665.95004102, 665.72014101, 665.72022102, 665.72023100, 665.72132300, 665.75002101, 665.75012102, 665.75012104, 665.75014101, 665.75029100, 665.75033200, 665.92002102, 665.92012101, 665.92022100, 665.92023101, 665.92024101, 665.95002102, 665.95012102, 665.95014100, 665.95014102, 665.95022101, 665.95775891, 664.75272502, 664.75273502, 664.75274502, 664.75279502, 664.95272502, 664.95273502, 664.95274502, 664.95279502, 665.65025101, 665.72002100, 665.72002101, 665.72002102, 665.72002103, 665.72002104, 665.72004100, 665.72004104, 665.72012100, 665.72012101, 665.72012102, 665.72012103, 665.72012104, 665.72014100, 665.72014103, 665.72022100, 665.72022101, 665.72023102, 665.72024100, 665.72024102, 665.72029100, 665.72029102, 665.72132301, 665.72133300, 665.72133301, 665.72134300, 665.72134301, 665.72152300, 665.72153300, 665.72154300, 665.72162300, 665.72162301, 665.72162302, 665.72163300, 665.72163301, 665.72163302, 665.72164300, 665.72164301, 665.72164302, 665.72169300, 665.72169301, 665.72169302

**Whirlpool:**

- SF385PEEQ0, SF315PEKW0, RF111PXSQ0, SF368LEPS0, SF368LEPS1, RF3020XKQ1, SF368LEPB0, RF362LXSS0, RF3020XKQ0, SF310PEKW0, RF365PXMW0, SF368LEPB1, RF386PXEQ0, SF315PEKQ0, RF365PXMW0, SF362LXSB0, RF111PXSQ1, RF386PXGQ0, RF302BXGW0, RF365PXKQ0, RF367LXKQ0, SF395LEEQ0, RF365PXMW1, GS465LEKS0, SF385PEEW0, SF385PEGQ1, RF361PXKQ0, SF315PEPW1, SF362LXSQ0, RF315PXKQ0, RF367LXKB0, RF377PXGQ0, RF385PXEN0, RF262LXSB0, GS563LXSS0, RF368LXPS0, SF315PEMW1, RF365PXKW0, RF378LXKQ1, RF378LXKS1, GS395LEGQ5, RF262LXSQ0, RF368LXKQ1, RF377PXGB0, SF315PEEW0, SF325PEEQ0, SF379LEKQ0, SF385PEEN0, RF110AXSQ0, RF262LXST0, RF362LXSQ0, SF315PEGQ0

### 3. WHAT'S IN THE BOX

---

Your package should contain the following item:

- Front Leveling Leg

### 4. SETUP AND INSTALLATION

---

Proper installation of the leveling leg is essential for the stability and safe operation of your range. If you are unsure about any step, it is recommended to consult a qualified appliance technician.

#### Safety Precautions:

- **Always disconnect power to the range** by unplugging it or turning off the circuit breaker before attempting any installation or repair.
- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- Ensure the range is stable and supported before removing any existing leveling legs.

#### Installation Steps:

1. **Prepare the Range:** Carefully pull the range away from the wall to access the leveling legs. If necessary, tilt the range slightly backward and support it securely to access the front legs. Use a sturdy block or another person to help stabilize the range.
2. **Remove Old Leg (if applicable):** If replacing an existing leg, unscrew the old leveling leg by turning it counter-clockwise until it detaches.
3. **Install New Leg:** Screw the new OEM Genuine Range Front Leveling Leg into the threaded opening on the bottom of the range. Turn it clockwise until it is finger-tight.
4. **Adjust for Leveling:** Once all legs are installed, carefully lower the range. Adjust the height of the leveling leg by turning it clockwise to raise the corner or counter-clockwise to lower it. Repeat for all legs until the range is perfectly level and stable on all four corners. Use a spirit level to confirm.
5. **Test Stability:** Gently push on the corners of the range to ensure there is no rocking or instability. Make further adjustments if needed.
6. **Reconnect Power:** Once the range is level and stable, push it back into its position, ensuring not to pinch any wires or gas lines. Reconnect the power supply.

### 5. OPERATING (FUNCTION)

---

The range front leveling leg serves a critical function in maintaining the stability and proper alignment of your kitchen range. Its primary purpose is to:

- **Level the Appliance:** Compensate for uneven flooring, ensuring the cooking surface is perfectly horizontal. This is important for even cooking and preventing liquids from pooling on one side of pans.
- **Provide Stability:** Prevent the range from rocking or tipping, which is a safety hazard, especially when opening oven doors or placing heavy pots on burners.
- **Align with Countertops:** Allow for minor height adjustments to align the range seamlessly with surrounding countertops.

Once installed and adjusted, the leveling leg operates passively, continuously supporting the range. No further user interaction is typically required unless the range is moved or floor conditions change.

## 6. MAINTENANCE

Regular, simple maintenance can help ensure the longevity and effectiveness of your leveling leg and the overall stability of your range.

- **Periodic Inspection:** Every 6-12 months, or if you notice the range becoming wobbly, check the leveling legs. Ensure they are securely screwed in and have not loosened over time.
- **Cleanliness:** Keep the area around the leveling legs clean from food debris, grease, or other obstructions that could interfere with their function or cause corrosion.
- **Re-leveling:** If the range is moved for cleaning or any other reason, always re-check and adjust the leveling legs to ensure the appliance is stable and level before use.

## 7. TROUBLESHOOTING

If you encounter issues related to your range's stability, consider the following troubleshooting steps:

**Problem: Range is wobbly or unstable.**

**Solution:**

- Ensure all leveling legs are making firm contact with the floor.
- Adjust each leveling leg individually until the range is stable. Use a spirit level to verify.
- Check if the floor itself is uneven. If so, the leveling legs are designed to compensate for this.
- Verify that the leveling legs are not damaged or bent. Replace if necessary.

**Problem: Difficulty screwing in or removing a leveling leg.**

**Solution:**

- Ensure the threads on the leg and the range are clean and free of debris.
- Do not force the leg. If it's cross-threading, unscrew it and try again, ensuring it's aligned properly.
- If the threads are damaged, professional repair or replacement of the range's base might be required.

## 8. SPECIFICATIONS

**Brand:**

Generic

**Model Number:**

665.75

**Manufacturer Part Number:**

665.75

**Product Dimensions (D x W x H):**

1"D x 1"W x 1"H

**Included Components:**

Front Leveling Leg

**Heating Elements:**

1 (This specification likely refers to the range it's compatible with, not the leg itself)

## 9. WARRANTY AND SUPPORT

This leveling leg is a replacement part. For specific warranty information regarding your appliance, please refer to the original manufacturer's documentation that came with your range. For support concerning the installation or function of this replacement part, please contact the seller or a qualified appliance repair professional.

This manual is for informational purposes only. Always prioritize safety and consult a professional if unsure.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question