

[Manuals.plus](#) /

› [Arkaia](#) /

› Arkaia Replacement Remote Control User Manual for Digihome 65US172, 65UW172, 75UW181 TVs

Arkaia 65US172, 65UW172, 75UW181

Arkaia Replacement Remote Control User Manual

FOR DIGIHOME 65US172, 65UW172, 75UW181 TVs

Introduction

This manual provides instructions for the Arkaia Replacement Remote Control, designed for use with Digihome TV models 65US172, 65UW172, and 75UW181. This remote control offers full functionality as a direct replacement for your original remote, ensuring reliable operation without complex setup.



Figure 1: Front view of the Arkaia Replacement Remote Control.

Setup and First Use

The Arkaia Replacement Remote Control is designed for immediate use with compatible Digihome TV models. No programming, pairing, or complex installation is required.

1. **Install Batteries:** Locate the battery compartment on the back of the remote control. Insert two (2) AAA batteries, ensuring correct polarity (+/-). Batteries are not included with the remote control.
2. **Ready for Use:** Once batteries are installed, the remote control is ready to operate your Digihome TV. Point the remote control towards your TV and begin using its functions.





Figure 2: Illustrates the remote control being held, indicating the general location for battery compartment access.

Operating Instructions

This replacement remote control supports all essential functions of your original Digihome TV remote. The buttons are clearly arranged for intuitive operation.



WICHTIGE HINWEISE

DIESE FERNBEDIENUNG IST AUSSCHLIESSLICH KOMPATIBEL MIT DEN IN DER
PRODUKTBESCHREIBUNG AUFGEFÜHRTEN MODELLEN.
BEI FRAGEN ODER UNSICHERHEITEN STEHEN WIR IHNEN GERNE ZUR VERFÜGUNG.



DIE PERFEKTE ERSATZFERNBEDIENUNG

FÜR IHRE FERNSEHGERÄTE



SOFORT EINSATZBEREIT

Kein lästiges Programmieren oder Einrichten notwendig. Batterien einlegen – einschalten – fertig.



VOLLSTÄNDIGE FUNKTIONALITÄT

Alle Tasten und Funktionen Ihrer Original-Fernbedienung sind vorhanden.



BENUTZERFREUNDLICHES DESIGN

Die Tasten sind übersichtlich angeordnet und leicht zu bedienen. Das sorgt für eine intuitive Nutzung – ideal für alle Altersgruppen.



HOCHWERTIGE VERARBEITUNG

Trotz eines attraktiven Preises bietet die Fernbedienung langlebige Qualität und zuverlässige Funktion.



KOMPATIBILITÄT GARANTIRT

Funktioniert exakt wie Ihre Original-Fernbedienung – keine Fehlfunktionen oder Einschränkungen.



INDIVIDUELLER TASTENBELEGUNGSPLAN

Im Lieferumfang enthalten ist ein detaillierter Tastenplan, der alle Funktionen erklärt und die Umstellung so einfach wie möglich macht.

WARUM SOLLTEN SIE SICH FÜR DIESE FERNBEDIENUNG ENTSCHEIDEN?



EINFACHE BEDIENBARKEIT
Ohne kompliziertes Programmieren – ideal auch für Technik-Anfänger.



SCHNELLER ZUGRIFF
auf alle TV-Funktionen – alles per Tastendruck.



LANGLEBIGKEIT
durch hochwertige Materialien – für eine lange Nutzungsdauer.



KEINE FEHLFUNKTIONEN
durch falsche Codes – garantiert kompatibel mit Ihrem Gerät.

Figure 3: Overview of the remote control's design and key features.

Key Functions:

- **Power:** Turns the TV on or off.
- **Volume Control:** Adjusts the sound level (VOL+ / VOL-).
- **Channel Selection:** Changes TV channels (P+ / P-).
- **Numeric Keypad:** Direct channel input.
- **Menu/Home:** Accesses the TV's main menu or home screen.
- **Navigation (Arrow Keys & OK):** Moves through menus and confirms selections.
- **Input:** Selects input sources (HDMI, AV, etc.).
- **Guide:** Displays the electronic program guide.
- **Color Buttons:** (Red, Green, Yellow, Blue) Perform specific functions depending on the TV menu or application.
- **Playback Controls:** (Play, Pause, Stop, Fast Forward, Rewind) For media playback.

Detailed Button Functions:

Refer to the table below for a comprehensive list of button functions.

Button	Function (English)
Ⓜ	Standby
1	1, .@/...
2	2, abc
3	3, def
4	4, ghi
5	5, jkl
6	6, mno
7	7, pqrs
8	8, tuv
9	9, wxyz
-/-	No Function
0	0
←	Previous Program
VOL+	Volume +
INPUT	Sources, AV
P↑	Program +
VOL-	Volume -
INFO	Info
MENU	Program -
⬆	Menu

Button GUIDE ≡	Function (English) EPG
▲	Cursor Up
◀	Cursor <
OK	OK, Select
▶	Cursor >
▼	Cursor Down
RETURN ↵	Back, Return
EXIT	Exit
TV RADIO	TV, List
FAV	Favourites
LIST	My Button1, Disp., Audio
MODE	My Button2, DVB-T/C/S, Still
F1	Red, DVD Zoom
F2	Green, DVD Repeat
F3	Yellow, DVD Root
F4	Blue, DVD Title
Format	Format
Text	Text
TOOLS OPTIONS	Quick Menu, Option
No Function	No Function
No Function	No Function
LINK	Web Browser
MEDIA	Media Browser
◀◀	Backward
▶	Play
	Pause
▶▶	Forward
AD SUBT	Audio, Language, Sound
■	Stop
●	Record
PIP PC	NETFLIX
F	Shift Key
F +	Sleep Timer

Button	Function (English)
F + ⏮	Skip Backward
F + ⏭	Skip Forward
F + SUBT	Subtitle
PICTURE	Preset Picture Mode
SOUND	Sound Mode, Sports
DIGITAL ANALOG	No Function

Figure 4: Detailed button function mapping for the remote control.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place away from direct sunlight.

Troubleshooting

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Make sure you are within the effective range of the TV's IR receiver.
- **Specific buttons not working:**
 - Verify that the button is intended for your TV model's functions. Some buttons may be specific to certain TV features or menus.
 - Clean the remote control, especially around the problematic button, to ensure no debris is interfering.

Specifications

- **Brand:** Arkaia
- **Compatible Devices:** Digihome TV models 65US172, 65UW172, 75UW181
- **Connectivity Technology:** Infrared
- **Controller Type:** Remote Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Manufacturer:** ARKAIA
- **Part Number:** CLC1-IRC87201-65US172
- **ASIN:** B0H7J7NF9D

Warranty and Support

This Arkaia replacement remote control comes with a**2-year warranty**, ensuring reliable quality and performance. For any questions, uncertainties, or support needs regarding your remote control, please contact Arkaia customer service through your retailer or the official Arkaia support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question