

[Manuals.plus](#) /

› [YESHOMY](#) /

› YESHOMY Dresser Model YH-WD1346 Instruction Manual

YESHOMY YH-WD1346

YESHOMY Dresser Model YH-WD1346 Instruction Manual

47.2-inch Modern Wood Chest with 6 Drawers

INTRODUCTION

Thank you for choosing the YESHOMY Dresser Model YH-WD1346. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new dresser. Please read these instructions carefully before beginning assembly and retain them for future reference.

SAFETY INFORMATION

To prevent serious or fatal crushing injuries, this product must be permanently attached to the wall using the anti-tip kit provided. Always ensure the dresser is placed on a level, stable surface. Do not allow children to climb on or play with the dresser or its drawers. Overloading drawers can cause instability.



Image: Illustration of the anti-tip installation process for securing the dresser to a wall, and a close-up of the easy-grip recessed handles. This feature enhances stability and user convenience.

SETUP AND ASSEMBLY

Unpacking and Parts Check

Carefully unpack all components and hardware from the packaging. Lay out all parts on a clean, soft surface to prevent scratches. Verify that all parts listed in the included assembly manual are present before proceeding.

Tools Required (Not Included)

- Phillips Head Screwdriver
- Hammer (for dowels, if applicable)
- Drill (for wall anchors, if applicable)

Assembly Steps

Follow the step-by-step instructions provided in the separate assembly manual included with your product. Ensure all screws and fasteners are tightened securely, but do not overtighten. If you encounter any difficulties, refer to the troubleshooting section or contact customer support.

Anti-Tip Kit Installation

After assembling the dresser, it is mandatory to install the anti-tip kit. Secure the strap or bracket to the back of the dresser and then to a wall stud using the provided hardware. This step is critical for safety, especially in households with children or pets.

OPERATING INSTRUCTIONS

Drawer Usage

The dresser features six drawers with premium metal slides for smooth and quiet operation. To open a drawer, gently pull the recessed handle. To close, push the drawer firmly until it is fully seated. Avoid forcing drawers open or closed.


Storage Capacity

This dresser is designed with two shallow top drawers and four deep bottom drawers to accommodate various items. The tabletop supports up to 300 lbs. Each shallow upper drawer can hold up to 20 lbs, and each deep lower drawer can hold up to 30 lbs. Distribute weight evenly to maintain stability.

FAMILY-FIRST SAFETY DESIGN




✓ Anti-Tip Installation

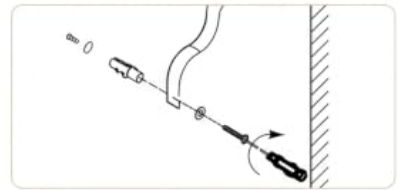

✓ Essential for Child Safety

Our Products

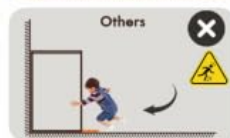

Risk of tripping
over
metal plates

Image: Visual representation of the dresser's two shallow top drawers suitable for accessories and books, and four deeper bottom drawers for clothing storage.

SPACIOUS BY DESIGN



Small Drawer X 2

12-18
Shirt

5-7
Pants

40-60
Socks

8-12
Underwear



Large Drawer X 4

22-30
Shirt

10-14
Pants

70-100
Socks

15-22
Underwear

Image: Detailed breakdown of storage capacity per drawer type, showing estimated quantities of shirts, pants, socks, and underwear that can be stored in small and large drawers.

MAINTENANCE AND CARE

Cleaning

Wipe the dresser surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the engineered wood finish. Dry immediately with a clean cloth.

General Care

- Avoid placing hot items directly on the surface. Use coasters or protective pads.
- Keep the dresser away from direct sunlight and heat sources to prevent warping or discoloration.
- Periodically check all fasteners and tighten them if necessary to ensure structural integrity.
- Ensure the dresser is not exposed to excessive moisture or humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned slides, debris in tracks, or overtightened screws.	Check alignment of drawer slides. Clean tracks of any dust or obstructions. Loosen or tighten screws on slides as needed.
Dresser feels unstable or wobbly.	Uneven floor, loose fasteners, or anti-tip kit not installed.	Ensure dresser is on a level surface. Tighten all assembly fasteners. Install the anti-tip kit securely to the wall.
Parts do not align during assembly.	Incorrect orientation of parts, manufacturing defect.	Double-check the assembly manual for correct part orientation. If parts are genuinely defective, contact customer support for replacement.
Damaged or missing hardware.	Packaging error or damage during transit.	Refer to the parts list in the assembly manual. Contact customer support for replacement parts.

SPECIFICATIONS

Feature	Detail
Model Number	YH-WD1346
Brand	YESHOMY
Material	Engineered Wood
Color	White
Overall Dimensions (D x W x H)	15.1" x 47.2" x 26.5"
Number of Drawers	6 (2 shallow, 4 deep)
Tabletop Weight Capacity	Up to 300 lbs
Upper Drawer Weight Capacity	Up to 20 lbs each
Lower Drawer Weight Capacity	Up to 30 lbs each

Feature	Detail
Item Weight	73.2 pounds



Image: Detailed product dimensions including depth, width, height, and individual drawer dimensions, along with weight capacities for the tabletop and each drawer type.

WARRANTY INFORMATION

This product comes with a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in your product packaging or visit the official YESHOMY website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report damaged or missing parts, please contact YESHOMY customer support. Contact information can typically be found on the product packaging, the included assembly manual, or the official YESHOMY website. For online resources, you may visit the [YESHOMY Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question