

DEVOAC VM6

DEVOAC VM6 Scrubbing Steam Mop User Manual

Model: VM6

INTRODUCTION

Thank you for choosing the DEVOAC VM6 Scrubbing Steam Mop. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new steam mop. Please read it thoroughly before operation and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is for household use only.

- Do not leave the steam mop unattended while powered on.
- Keep the appliance away from children and pets.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup.
- Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the appliance and void the warranty.
- Ensure the power cord is not damaged and avoid kinking or stretching it.
- Always unplug the appliance before filling, emptying, or cleaning.
- Do not use on unsealed hardwood floors or surfaces that are sensitive to heat and moisture. Test on an inconspicuous area first.
- Steam is hot. Avoid direct contact with skin or eyes.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x DEVOAC VM6 Scrubbing Steam Mop
- 1 x Curved Nozzle

- 1 x Crevice Brush
- 1 x Small Round Brush
- 1 x Scraper Head
- 1 x Window Scraper
- 1 x Big Round Brush
- 2 x Washable Mop Pads

SETUP INSTRUCTIONS

1. **Assemble the Mop Handle:** Insert the handle into the main body of the steam mop until it clicks securely into place.
2. **Attach Mop Pads:** Align the washable mop pads with the rotating discs on the bottom of the mop head. Press firmly to secure them via the hook-and-loop fasteners.
3. **Fill the Water Tank:** Remove the water tank from the main unit. Open the cap and fill with clean distilled or demineralized water. Do not overfill. Close the cap securely and reinsert the tank into the unit. The removable water tank simplifies this process, requiring no measuring cup.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: Steps for preparing the DEVOAC VM6 steam mop, including filling the water tank and powering on.

OPERATING INSTRUCTIONS

The DEVOAC VM6 steam mop is designed for efficient and versatile cleaning of sealed hard floors.

1. **Power On and Heat Up:** Once plugged in, press the power button. The mop heats up rapidly, typically within 15 seconds, indicated by a light.
2. **Select Steam Mode:** Use the steam control button to cycle through the three available steam modes:
 - **Less Steam Mode:** Ideal for speedy cleanups and delicate surfaces.
 - **Medium Steam Mode:** Suitable for daily cleaning and general messes.
 - **Large Steam Mode:** Provides maximum steam for tackling tough messes and stubborn stains.
3. **Activate Rotating Pads:** Press the 'Rotating On/Off' button to engage the scrubbing action of the mop pads. The pads rotate at over 230 scrubs per minute for effective cleaning.

4. **Begin Cleaning:** Glide the steam mop across the floor surface. The swivel head allows for easy maneuverability around and under furniture, reaching tight spaces.
5. **Using Attachments (Handheld Steamer):** For targeted cleaning, detach the main mop body to use it as a handheld steamer. Attach the desired accessory (Curved Nozzle, Crevice Brush, Small/Big Round Brush, Scraper Head, Window Scraper) for specific tasks like cleaning grout, sinks, stovetops, or upholstery.



Crevice Brush

Targeted steam and sturdy bristles remove stubborn grime from grout lines and tight spaces.

Image: Illustration of the three steam modes (Low, Medium, High) for various cleaning needs.



Window Tool

Delivers concentrated steam to cut through grease and grime on stovetops, edges, and hard surfaces with precision.

Image: Detailed view of the control panel for steam and rotating mop pad settings.



Image: The mop's 180-degree swivel head allows for easy cleaning under furniture.

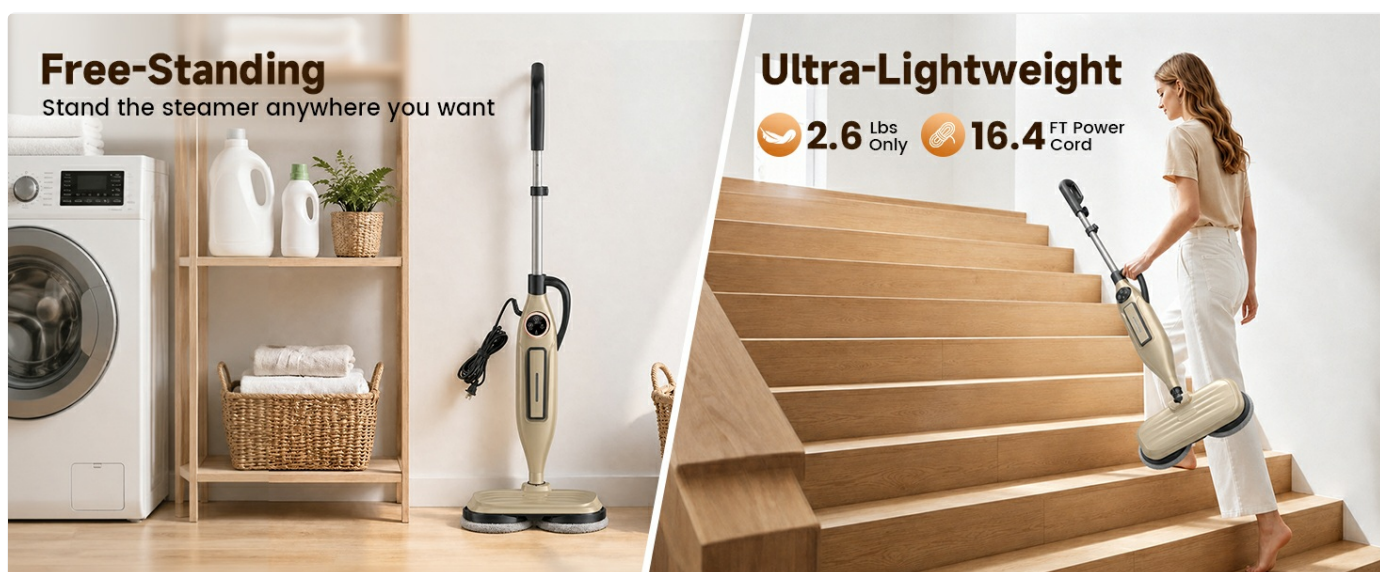


Image: The steam mop with various attachments for comprehensive cleaning tasks.

Your browser does not support the video tag.

Video: Demonstration of the DEVOAC VM6 Scrubbing Steam Mop in action, showcasing its features and cleaning capabilities.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam mop.

- **Cleaning Mop Pads:** After each use, remove the washable mop pads. They can be machine-washed with similar colors and air-dried. Do not use bleach or fabric softeners.
- **Emptying Water Tank:** Always empty any remaining water from the tank after use.
- **Storage:** Store the steam mop in a cool, dry place. Utilize the cord wrapper for neat storage of the power cord. The mop is designed to be free-standing.
- **Descaling:** If you notice reduced steam output, descaling may be necessary. Consult the full user manual for detailed descaling instructions.



Window Scraper

Window scraper and microfiber cloth—ideal for sofas, upholstery, and hard-to-reach areas.

Image: The steam mop dries floors quickly, leaving no water marks.



Ready to Steam in Just 15 Seconds

1 Select Accessories

2 Fill Up Water Tank

3 Turn it On

4 Enjoy Cleaning

Image: The integrated cord wrapper for convenient storage.

TROUBLESHOOTING

If you encounter issues with your DEVOAC VM6 steam mop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam produced	Water tank empty; appliance not plugged in; heating element malfunction.	Refill water tank; ensure power cord is securely plugged in; contact customer support if issue persists.
Mop pads not rotating	Rotating function not activated; obstruction under pads.	Press the 'Rotating On/Off' button; check for and remove any debris.
Poor cleaning performance	Incorrect steam mode selected; dirty mop pads; excessive mineral buildup.	Select a higher steam mode; clean or replace mop pads; perform descaling.
Water leaking	Water tank cap not secured; tank not properly inserted.	Ensure water tank cap is tightly closed; reinsert water tank correctly.

SPECIFICATIONS

- **Brand:** DEVOAC
- **Model Name:** DEVOAC VM6
- **Model Number:** VM6
- **Special Features:** 10-in-1 Steam Mop, Lightweight, Rotating Mop Pads, Adjustable Steam Control
- **Surface Recommendation:** Sealed Hard Floors (Laminate, Marble, Tile, Hardwood, Vinyl, Stone)
- **Item Dimensions (D x W x H):** 6.93" x 9.13" x 19.8"
- **Color:** Champagne
- **Included Components:** Steam Mop, Curved Nozzle, Crevice Brush, Small Round Brush, Scraper Head, Window Scraper, Big Round Brush, 2 Washable Mop Pads
- **Cord Length:** 16.4 FT

WARRANTY INFORMATION

The DEVOAC VM6 Scrubbing Steam Mop comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, neglect, accident, alteration, or improper maintenance. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your DEVOAC VM6 Scrubbing Steam Mop, please contact our customer support team. Refer to the contact information provided in your product packaging or visit the official DEVOAC website for support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question