

My Derma Dream Pro Guasha

My Derma Dream Pro Guasha Instruction Manual

Model: Pro Guasha

1. INTRODUCTION

This manual provides instructions for the safe and effective use of the My Derma Dream Pro Guasha device. The Pro Guasha is designed to integrate traditional Gua Sha techniques with modern skincare technologies, including sonic vibration, thermal treatment, and red light therapy, to support skin health and appearance. Please read this manual thoroughly before operating the device and retain it for future reference.

2. SAFETY INFORMATION

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons, read all instructions before using this product.

- Do not use this device on broken, irritated, or infected skin.
- Consult a physician before use if you have any pre-existing medical conditions, are pregnant, or have electronic implants.
- Keep the device away from water and do not immerse it in any liquid.
- Do not use if the device or charging cable is damaged. Contact customer support for assistance.
- Keep out of reach of children.
- Use only the provided charging cable.
- Discontinue use immediately if you experience any discomfort or adverse reactions.

3. PRODUCT OVERVIEW

The My Derma Dream Pro Guasha combines several technologies to enhance your skincare routine:

- **Sonic Vibration:** Gentle vibrations to aid in product absorption and stimulate circulation.
- **Thermal Treatment:** Controlled warmth to relax facial muscles and open pores.

- **Red Light Therapy:** Specific wavelengths of red light to support skin rejuvenation.

The device is ergonomically designed for comfortable handling and effective application across various facial contours.

4. SETUP

4.1. Charging the Device

1. Ensure the device is turned off.
2. Connect the provided USB charging cable to the charging port on the device.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The indicator light will illuminate to show charging status. Refer to the device's specific indicator light behavior for full charge notification (e.g., solid light, light turning off).
5. A full charge typically takes approximately 2-3 hours.

4.2. Preparing Your Skin

Before each use, ensure your skin is clean and free of makeup. Apply a thin layer of your preferred serum or moisturizer to the area you intend to treat. This helps the device glide smoothly and enhances product absorption.

5. OPERATING INSTRUCTIONS

5.1. Powering On/Off

- To power on, press and hold the power button for 2 seconds. The device will activate with a default mode.
- To power off, press and hold the power button for 2 seconds.

5.2. Mode Selection

Press the power button briefly to cycle through the available modes. Each press will switch to the next mode, indicated by a change in light or vibration pattern. Common modes may include:

- **Gentle Vibration Mode:** For sensitive skin or initial use.
- **Warm & Vibration Mode:** Combines heat with sonic vibration.
- **Red Light & Vibration Mode:** Integrates red light therapy with sonic vibration.
- **All-in-One Mode:** Combines heat, red light, and sonic vibration.

5.3. Application Technique

Hold the device firmly and apply gentle pressure. Glide the device upwards and outwards across your face and neck. Avoid dragging or pulling the skin. Repeat each stroke 5-10 times per area.

- **Neck:** Start at the base of the neck and glide upwards towards the jawline.
- **Jawline:** Glide from the center of the chin along the jawline towards the earlobe.
- **Cheeks:** Move from the nose outwards towards the temples.
- **Forehead:** Glide upwards from the eyebrows to the hairline, and outwards from the center of the forehead.

Recommended usage is 5-10 minutes per session, 3-5 times per week.

6. MAINTENANCE

6.1. Cleaning the Device

After each use, wipe the device head with a soft, damp cloth. For deeper cleaning, use a cloth lightly dampened with rubbing alcohol. Do not use abrasive cleaners or immerse the device in water.

6.2. Storage

Store the device in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it in its original packaging or a protective pouch to prevent damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully.
Device not charging.	Charging cable or adapter is faulty; improper connection.	Ensure the cable is securely connected. Try a different USB port or adapter.
No vibration or heat.	Incorrect mode selected; device malfunction.	Cycle through modes to ensure the desired function is active. If problem persists, contact support.
Skin irritation after use.	Excessive pressure; allergic reaction to product used with device; sensitive skin.	Reduce pressure. Discontinue use if irritation persists and consult a dermatologist. Ensure skin is properly moisturized.

8. SPECIFICATIONS

- **Model:** Pro Guasha
- **Brand:** My Derma Dream
- **ASIN:** B0H9FG1522
- **Power Source:** Rechargeable Lithium-ion Battery
- **Charging Time:** Approximately 2-3 hours
- **Operating Time:** Varies by mode, typically 60-90 minutes on a full charge
- **Materials:** ABS, Stainless Steel

9. WARRANTY AND SUPPORT

9.1. Warranty Information

My Derma Dream products are covered by a limited warranty against defects in materials and workmanship from the original date of purchase. This warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.
Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For technical assistance, warranty claims, or product inquiries, please contact My Derma Dream customer support:

- **Website:** [Visit the My Derma Dream Store on Amazon](#)

© 2026 My Derma Dream. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question