

[Manuals.plus](#) /

› [YITAHOME](#) /

› YITAHOME Mid-Century Modern Fluted TV Stand (Model MAYIHUjyZ7) User Manual

YITAHOME MAYIHUjyZ7

YITAHOME Mid-Century Modern Fluted TV Stand (Model MAYIHUjyZ7) User Manual

Walnut Oak, 70 Inch

INTRODUCTION

Thank you for choosing the YITAHOME Mid-Century Modern Fluted TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand. Please read these instructions carefully before beginning assembly and retain them for future reference.

This TV stand is designed to accommodate televisions up to 75-80 inches and features integrated power outlets, ample storage, and a stylish fluted design. Proper assembly and care will ensure the longevity and stability of your furniture.

SAFETY INFORMATION

- **Read all instructions:** Ensure you understand all assembly steps and safety warnings before proceeding.
- **Two-person assembly recommended:** For safety and ease, assemble this unit with at least two people.
- **Use on a level surface:** Place the TV stand on a flat, stable surface to prevent tipping.
- **Do not overload:** Adhere to the maximum weight capacity for the top surface and shelves. Overloading can cause instability and damage.
- **Secure to wall:** Utilize the included anti-tip kit to secure the TV stand to a wall. This is crucial to prevent serious injury from tipping furniture, especially in homes with children.
- **Keep children away:** During assembly, keep small parts and packaging materials away from children.
- **Power strip safety:** Do not exceed the electrical rating of the built-in power strip. Avoid liquid spills near outlets.

PACKAGE CONTENTS

Before assembly, verify that all components and hardware are present. Refer to the parts list provided in your packaging. If any parts are missing or damaged, contact YITAHOME customer service for assistance.

Typical components include:

- Top panel, bottom panel, side panels
- Back panel(s)
- Shelf boards (adjustable and fixed)
- Cabinet doors with fluted panels
- Legs and adjustable leveling feet
- Built-in power strip (with 2 AC outlets, 1 USB port, 1 Type-C port)
- Hardware pack (screws, dowels, cam locks, hinges, handles, anti-tip kit)

SETUP AND ASSEMBLY INSTRUCTIONS

Follow the step-by-step instructions provided in the separate assembly guide included with your product. Ensure you have a Phillips head screwdriver and a hammer (not included) readily available.

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface (e.g., a blanket or carpet) to prevent scratches. Identify each part using the labels and diagrams in the assembly guide.
2. **Assemble the Main Frame:** Connect the side panels to the bottom panel, then attach the top panel. Use the provided cam locks and dowels for secure connections.
3. **Install Shelves:** Insert the fixed and adjustable shelves into their designated slots. The adjustable shelves allow for customized storage space.
4. **Attach Back Panels:** Secure the back panels to the rear of the unit. Ensure the cable management holes align correctly.
5. **Install Doors:** Attach the soft-close metal hinges to the cabinet doors and then to the main frame. Adjust hinges as needed for proper door alignment.
6. **Attach Handles:** Secure the metal handles to the cabinet doors.
7. **Install Legs:** Attach the elevated wooden legs to the bottom of the TV stand. Adjust the leveling feet to ensure stability on uneven floors.
8. **Integrate Power Strip:** Carefully insert the built-in power strip into its designated cutout on the top surface or inside a compartment, as indicated in the assembly guide.
9. **Secure to Wall (Anti-Tip Kit):** Attach the anti-tip mounting bracket to the back of the TV stand and to a wall stud using the provided hardware. This step is critical for safety.

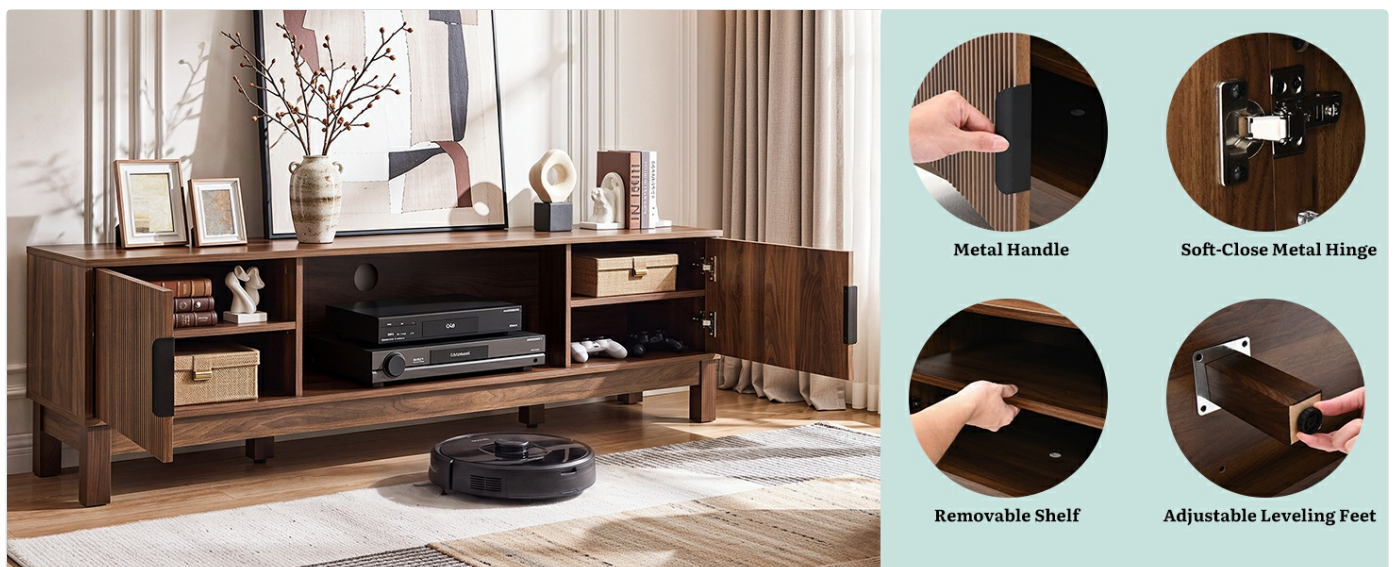 


Image: Product dimensions and internal compartment measurements.



 
BUILT-IN POWER OUTLETS

2 AC outlets & 1 USB port & 1 type-C port




FLUTED PANELS

Meticulously crafted with embossed design techniques

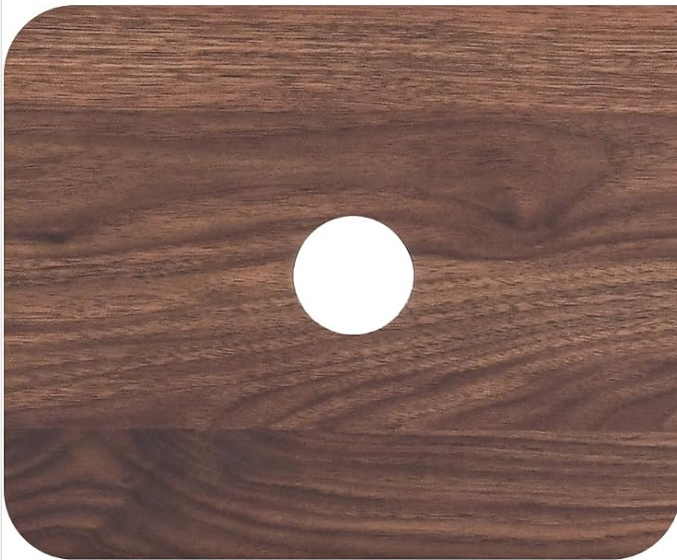

CABLE HOLE

 Thread various wires and cables for easy organization

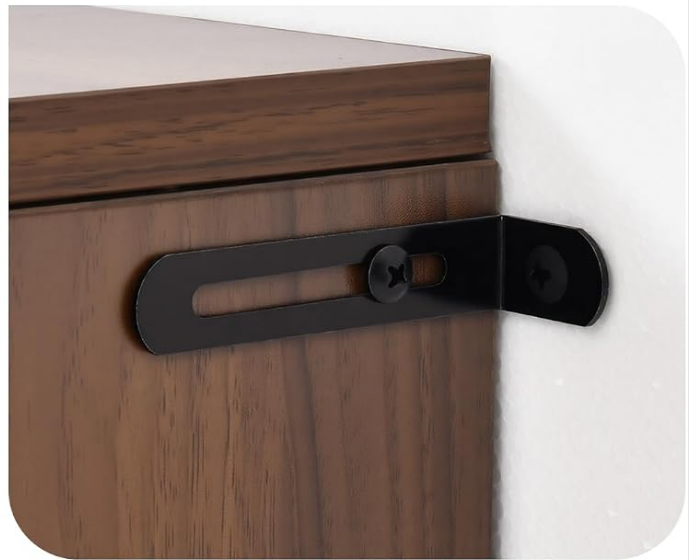

MOUNTING BRACKET SECURES

Wall Anchor Secures Unit, Prevents Forward Lean

Image: Detailed view of built-in power outlets, fluted panels, cable hole, and mounting bracket.



Image: TV stand with open doors, showcasing internal storage and cable management.

OPERATING INSTRUCTIONS

- **Power Outlets:** Use the integrated power strip to connect your TV, gaming consoles, streaming devices, and other electronics. The strip includes 2 AC outlets, 1 USB port, and 1 Type-C port. Ensure devices are properly plugged in and do not exceed the power strip's maximum load.
- **Cable Management:** Utilize the cable management hole located on the back panel to route and organize wires, keeping your entertainment area tidy and safe.
- **Adjustable Shelves:** The shelves within the cabinet doors can be adjusted to different heights to accommodate various items. To adjust, remove the shelf, reposition the shelf pins to the desired height, and reinsert the shelf.
- **Soft-Close Doors:** The cabinet doors are equipped with soft-close hinges for quiet and gentle closing.

MAINTENANCE

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the engineered wood finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage to the wood.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the finish.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
TV stand is wobbly	Uneven floor; loose connections	Adjust the leveling feet on the bottom of the legs. Check and tighten all screws and cam locks.
Cabinet doors do not align or close properly	Hinges are not adjusted correctly; loose hinge screws	Adjust the screws on the soft-close hinges to align the doors. Ensure hinge screws are tight.
Power outlets are not working	Power strip not fully plugged in; circuit overload	Ensure the power strip's main plug is securely connected to a wall outlet. Check if the power strip has a reset button. Reduce the number of devices connected if overloaded.
Missing parts during assembly	Packaging error	Contact YITAHOME customer service with your product model number and a list of missing parts.

SPECIFICATIONS

- **Model Number:** MAYIHUjyZ7
- **Brand:** YITAHOME
- **Color:** Walnut Oak
- **Style:** Mid-Century Modern
- **Material Type:** Engineered Wood
- **Overall Dimensions (W x D x H):** 70 x 15 x 17.7 inches (178 x 38 x 45 cm)
- **Item Weight:** Approximately 65 pounds (29.5 kg)
- **TV Size Compatibility:** Up to 75-80 inches
- **Power Strip:** 2 AC outlets, 1 USB port, 1 Type-C port
- **Included Components:** TV Stand, Assembly Hardware, Anti-Tip Kit
- **UPC:** 199449612193

WARRANTY AND SUPPORT

YITAHOME products are manufactured with quality and care. For specific warranty details, please refer to the warranty card included with your purchase or visit the official YITAHOME website. If you encounter any issues, require replacement parts, or have questions regarding assembly or use, please contact YITAHOME customer support.

Customer Support:

- Refer to the contact information provided in your product packaging.
- Visit the [YITAHOME Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question