

[Manuals.plus](#) /

› [YESHOMY](#) /

› YESHOMY 70" Modern TV Stand (Model YH-TS26-1377-7WA) Instruction Manual

YESHOMY YH-TS26-1377-7WA

YESHOMY 70" Modern TV Stand Instruction Manual

Model: YH-TS26-1377-7WA

1. PRODUCT OVERVIEW

The YESHOMY 70" Modern TV Stand is a media console designed to accommodate televisions up to 80 inches. It features a durable wooden construction with a walnut finish, offering both aesthetic appeal and practical storage solutions for your living space. This unit includes two side cabinets with adjustable shelves and a spacious open storage area.



Image 1.1: Front view of the YESHOMY 70-inch Modern TV Stand in Walnut.

2. SAFETY INFORMATION

- **Two-Person Assembly:** Assembly of this TV stand requires at least two adults to ensure safety and proper handling of components.
- **Weight Limits:** Do not exceed the specified weight limits for the tabletop and shelves. Overloading can cause instability and damage.
- **Anti-Tipping Device:** An anti-tipping device is included. It is crucial to install this device and secure the TV stand to a wall to prevent accidental tipping, especially in households with children or pets.
- **Small Parts:** Keep all small parts and hardware out of reach of children during assembly.
- **Secure Connections:** Ensure all screws and connections are fully tightened before placing any items on the TV stand or moving it.

3. SETUP AND ASSEMBLY

This TV stand is designed for straightforward assembly. Please follow the detailed step-by-step instructions provided in the separate assembly guide included in your package. The following general steps and tips will assist you:

1. **Unpack and Verify:** Carefully unpack all components and hardware. Compare them against the parts list in your assembly guide to ensure all items are present and undamaged.
2. **Prepare Workspace:** Lay out all parts on a soft, clean surface (e.g., a blanket or carpet) to prevent scratches during assembly.
3. **Follow Instructions:** Adhere strictly to the numbered steps in the assembly guide. Do not skip steps.
4. **Tools:** A screwdriver is typically sufficient. A power drill with appropriate bits may speed up the process but use with caution to avoid overtightening.
5. **Anti-Tipping Device Installation:** Once the unit is fully assembled and in its final position, install the anti-tipping device as instructed in the assembly guide. This is a critical safety step.




○ Durable Wood Board

Waterproof & scratch-resistant, effectively prevent tabletop wear.



Hidden Side Cabinets

Two side cabinets with adjustable shelves, provide flexible storage for your needs.

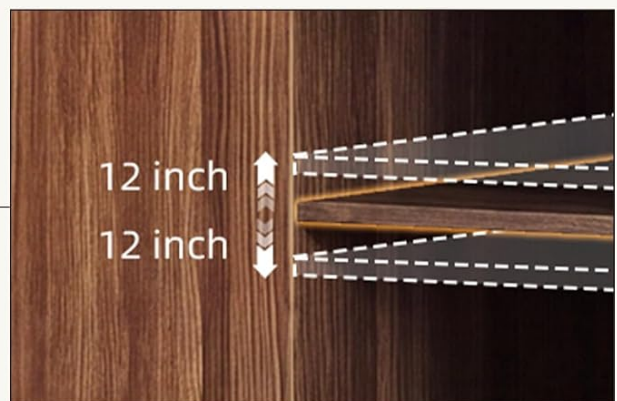

○ Thickened Sturdy Base

Special design provide sturdy load-bearing support.

Image 3.1: Key structural features including durable wood and adjustable shelves.

4. OPERATING INSTRUCTIONS

The YESHOMY TV Stand is designed for versatile use as a media console and storage unit.

- **Television Placement:** Place your television centrally on the tabletop. The stand is designed to accommodate TVs up to 80 inches. Ensure the TV's base fits within the tabletop dimensions and its weight does not exceed 300 lbs.
- **Hidden Side Cabinets:** Utilize the two side cabinets for concealed storage. These are ideal for remote controls, game controllers, DVDs, or other items you wish to keep out of sight. The shelves within these cabinets are adjustable to three different height levels, allowing you to customize the storage space.
- **Open Storage Space:** The central open shelves provide convenient access for media devices such as soundbars, gaming consoles, or streaming boxes. They are also suitable for displaying books or decorative items. These shelves are also adjustable to three levels.
- **Cable Management:** The middle shelving area includes a cutout in the back panel for routing cables, helping to keep your entertainment setup tidy.

AMPLE STORAGE SPACE

Keep Your Room Well Organized

- ☒ Open Storage Space ☒ Two Hidden Storage Cabinets



Image 4.1: Ample storage space with open and hidden compartments.

OPEN STORAGE SPACE

Large capacity open storage space with adjustable shelf, fits all your storage needs, from height to quantity.



Image 4.2: TV stand with a television and media devices.

5. MAINTENANCE

- **Cleaning:** To clean the surface, use a soft, slightly damp cloth. Avoid using abrasive cleaners, harsh chemicals, or polishes that may damage the finish.
- **Surface Protection:** Although the tabletop is waterproof and scratch-resistant, it is recommended to use coasters under drinks and avoid dragging sharp or heavy objects across the surface to maintain its appearance.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the wood finish.

6. TROUBLESHOOTING

- **Missing or Damaged Parts:** If you find any parts missing or damaged upon opening the package, do not proceed with assembly. Contact YESHOMY customer support immediately for assistance.
- **Instability After Assembly:** Ensure all screws and fasteners are fully tightened. Verify that the TV stand is placed on a flat, level surface. Confirm the anti-tipping device is correctly installed and secured to the wall.
- **Difficulty During Assembly:** Review the assembly guide carefully. Ensure you are using the correct hardware for each step. If issues persist, consider having a second person assist with the assembly.

7. SPECIFICATIONS



Image 7.1: Product dimensions and load capacities.

Feature	Detail
Model Number	YH-TS26-1377-7WA

Feature	Detail
Overall Dimensions (W x D x H)	70 x 15.74 x 32.59 inches
Material	Wood
Item Weight	99.2 pounds
Tabletop Load Capacity	300 lbs
Bottom Panel Load Capacity	115 lbs
Side Cabinet Shelf Load Capacity	39 lbs
Open Storage Shelf Load Capacity	96 lbs
Number of Shelves	3 (adjustable)
Color	Walnut

8. WARRANTY AND CUSTOMER SUPPORT

For specific warranty details regarding your YESHOMY 70" Modern TV Stand, please refer to the warranty card or documentation included with your purchase. If you have any questions, require replacement parts, or need further assistance, please contact YESHOMY customer support through the channels provided in your product packaging or on the official YESHOMY website.

You can also visit the [YESHOMY Store on Amazon](#) for additional product information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question