

Asingleer
**TC01 One Touch
Electric Can
Openers**



Asingleer TC01 One Touch Electric Can Openers User Manual

[Home](#) » [Support](#) » Asingleer TC01 One Touch Electric Can Openers User Manual 

Contents

- [1 Asingleer TC01 One Touch Electric Can Openers](#)
- [2 Introduction](#)
- [3 Specifications](#)
- [4 Package Includes](#)
- [5 Features](#)
- [6 Usage](#)
- [7 Troubleshooting](#)
- [8 Pros and Cons](#)
- [9 Contact Information](#)
- [10 Warranty](#)
- [11 FAQs](#)
- [12 Video-Asingleer TC01 One Touch Electric Can Openers](#)
- [13 References](#)
- [14 Related Posts](#)

Asingleer

Asingleer TC01 One Touch Electric Can Openers



Launch Date: March 8, 2024

Price: \$39.99

Introduction

The BeginningEasy and quick can opening is made possible by the Asingleer TC01 One Touch Electric Can Opener, a useful cooking tool. This electric can opener is great for people who want an easy way to open cans without having to use heavy hand tools. It only needs one touch to work. It's great for people of all ages, including adults and people who have trouble moving their hands. Its small size, ergonomic design, and easy-to-use interface make it a great choice. The Asingleer TC01 saves time and effort, which makes preparing meals easier and more fun.

Specifications

- **Model:** TC01
- **Brand:** Asingleer
- **Dimensions:** 7.5 x 2.5 x 1.5 inches
- **Weight:** 0.6 pounds
- **Power Source:** 4 AA batteries (not included)
- **Material:** Stainless steel blade, BPA-free plastic casing
- **Operation:** One-touch button
- **Certifications:** CE, FCC, RoHS compliant

Package Includes

- Asingleer TC01 One Touch Electric Can Opener
- Instruction manual
- Warranty card (1-year limited warranty)

Features

1. **One-Touch Operation:** The Asingleer TC01 Electric Can Opener allows you to open cans effortlessly with a single button press. This feature is perfect for users who want a quick, hassle-free way to open cans, eliminating the need for manual twisting or turning.
2. **Hands-Free Use:** Once activated, the can opener automatically moves around the can, cutting smoothly along the edge. This hands-free operation makes it ideal for individuals with limited hand strength or dexterity.
3. **Smooth Edge Technology:** The can opener is equipped with a side-cutting mechanism that leaves a smooth, safe edge on the can. This reduces the risk of injury from sharp edges, making the can safe to handle.
4. **Compact Design:** The small, lightweight design of the Asingleer TC01 makes it easy to store in your kitchen drawer or cabinet, ensuring that it doesn't take up too much space. It's also ideal for use in small kitchens, apartments, or while traveling.



5. **Stainless Steel Blade:** The stainless steel blade ensures durable and efficient cutting performance, allowing the opener to effortlessly handle a wide variety of can sizes and shapes.
6. **Ergonomic Grip:** Designed with comfort in mind, the ergonomic grip makes the can opener easy to hold and

operate, even for extended periods. This is especially beneficial for seniors or those with arthritis.

7. **BPA-Free Materials:** The casing is made from BPA-free plastic, ensuring that all materials in contact with food are safe for food preparation. This feature provides peace of mind for health-conscious users.
8. **Battery Operated:** The can opener is powered by 4 AA batteries, which means it is cordless and highly portable. You can use it anywhere in the kitchen without worrying about finding an outlet or dealing with tangled cords.
9. **Quiet Operation:** The low noise level during use ensures a more pleasant kitchen experience, allowing you to open cans without disturbing others in the household.
10. **Versatile Usage:** The Asingleer TC01 is suitable for different can sizes and types, making it versatile enough for various kitchen tasks. Whether it's a small can of vegetables or a large can of soup, this can opener has you covered.
11. **Safety Certification:** The product is CE, FCC, and RoHS certified, ensuring that it meets all necessary safety and quality standards, providing added reliability and peace of mind.

Usage

Operation Method:

1. Place the electric can opener on the top of the can with its edge in the groove between the cutter and the drive wheel.
2. Press the one-touch button to start the electric can opener. After the metal gear guides the edge of the can mouth, it rotates 360° by itself and cuts the side of the can.



3. After waiting for the cutting to be completed, the can opener stops automatically.
4. Make sure the cutter returns to the starting position and then remove the electric can opener from the can. At this time, the magnet on the automatic can opener will also attract the can lid.

How to Open the Battery Back Cover:

1. Turn the battery can opener to the side of the blade, with the end of the opener facing you.
2. Hold the electric can opener horizontally, place both thumbs on the back of the can opener, and slide the thumbs down firmly.
3. Open the battery cover and put in 2 AA batteries. (Pay attention to the positive and negative poles of the battery)

Notice:

1. It is recommended that you check whether the blade is exposed before using the can opener.
2. If the blade is exposed, the can opener will not work even if the battery is inserted.
3. There are two solutions to the problem of blade exposure and canister jamming:
 - There is a metal iron piece on the left side of the blade and a black reverse button at the end of the can opener. Press and hold the two buttons for 15-30 seconds at the same time, and the blade can be used again after retracting.
 - Insert a four-head screwdriver into the groove on the right side of the metal blade, turn to the left until the can is loose, and the can opener can be removed.

Care and Maintenance

- **Cleaning:** Always disconnect the can opener before cleaning. Use a damp cloth to wipe the exterior, and avoid immersing the device in water.
- **Blade Maintenance:** Regularly check the blade for any food residue. Clean it gently with a soft brush to keep it functioning efficiently.
- **Storage:** Store the can opener in a dry area, away from moisture or water sources, to prevent damage.
- **Battery Replacement:** If the can opener begins to slow down, replace the batteries to maintain optimal performance.

Troubleshooting

Issue	Possible Cause	Solution
Opener does not start	Batteries are dead or inserted incorrectly	Replace or reposition batteries
Can opener stops midway	Can misaligned or motor stuck	Reposition the can and ensure proper alignment
Blade exposed	Blade mechanism jammed	Press both the metal and reverse buttons to reset blade
Lid not fully cut	Opener not rotating fully around the can	Restart and ensure can is securely placed
Can is stuck in the opener	Blade is jammed after cutting	Use a four-head screwdriver to manually loosen the can
Magnet not picking up the lid	Magnetic component not aligned	Adjust the opener and make sure it's centered on the lid

Pros and Cons

Pros	Cons
Effortless one-touch operation	Requires batteries (not included)
Safe cutting mechanism	May struggle with larger cans
Compact and portable	Limited power duration on low-quality batteries
Ideal for users with limited hand strength	Can be sensitive to battery quality

Contact Information

For customer support, you can reach out via:

- **Email:** support@asingleer.com
- **Phone Number:** 1-[800-555-0199](tel:800-555-0199)

Warranty

The Asingleer TC01 One Touch Electric Can Opener comes with a one-year warranty covering manufacturing defects. For warranty claims, please retain your purchase receipt and contact customer service with details of your issue.

FAQs

What is the Asingleer TC01 One Touch Electric Can Opener?

The Asingleer TC01 is a hands-free electric can opener that opens cans automatically with just one touch, making it ideal for people with limited hand strength.

How does the Asingleer TC01 operate?

The Asingleer TC01 operates by placing it on the can, pressing the button, and letting it rotate around the can until the lid is fully cut off.

What type of cans can the Asingleer TC01 open?

The Asingleer TC01 can open cans of various sizes, ranging from 53mm to 153mm in diameter.

What kind of power source does the Asingleer TC01 use?

The Asingleer TC01 is powered by 2 AA batteries, which makes it portable and easy to use anywhere.

How do I install batteries in the Asingleer TC01?

To install batteries in the Asingleer TC01, slide open the back cover and insert 2 AA batteries, ensuring correct polarity.

What should I do if the Asingleer TC01 doesn't start?

If the Asingleer TC01 doesn't start, check if the batteries are correctly inserted or need to be replaced.

How does the Asingleer TC01 remove the can lid?

The Asingleer TC01 has a magnet that automatically lifts the can lid after cutting, making it easier to dispose of the lid safely.


What should I do if the Asingleer TC01 blade gets jammed?

If the blade of the Asingleer TC01 gets jammed, press the reverse button and adjust the blade position to fix the issue.

What should I do if the Asingleer TC01 stops cutting halfway through?

If the Asingleer TC01 stops midway, make sure the can is properly aligned and that the batteries have sufficient power.

Video-Asingleer TC01 One Touch Electric Can Openers

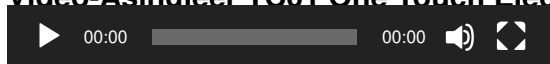

[Referencesals.plus/wp-content/uploads/2024/10/Asingleer-TC01-One-Touch-Electric-Can-Openers.mp4](#)
• [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.