



## aspes ASE17D Front Load Dryer User Manual

[Home](#) » [aspes](#) » [aspes ASE17D Front Load Dryer User Manual](#) 



### Contents

- 1 [aspes ASE17D Front Load Dryer](#)
- 2 [Safety information](#)
- 3 [Installation before use](#)
  - 3.1 [Part name](#)
- 4 [Simple installation](#)
- 5 [Control panel](#)
- 6 [Programmed Table](#)
- 7 [Operation explanation](#)
- 8 [Cleaning and routine maintenance](#)
  - 8.1 [Filter clean](#)
  - 8.2 [Cleaning cabinet and inner tube](#)
- 9 [Safety reset](#)
- 10 [Other functions description & Technical specifications](#)
- 11 [Product fiche](#)
- 12 [Documents / Resources](#)
  - 12.1 [References](#)
- 13 [Related Posts](#)

**aspes ASE17D Front Load Dryer**



## Safety information

1. Unique and lunacy design: Design is according to rant loading washing machine wish unique appearance.
2. Micro Control: Simple and convenient operation with the help of PCB board, and twifoil the temperature when drying automatic.
3. Big size dor endow. See he procedure of dying leant through this window
4. Open the door with 180": tis very convenient to put in and autochefs with 180'angle opening range.
5. Compact nstructon: Suiab'e capacity and unique outcook wih anti-dust, anti-humidity, anti shake, Ong life and low noise design.
6. The tumble dryeris motto be used f industrial chemicals have been used tor cleaning.
7. The int rap has to be cleaned requenly.
8. lint must not to be allowed to acaumulale around the tumble dryer.
9. Adequate ventilation has to be provided to avoid the back fow of gases into the room from appliance burning oher tuels, Including open fres.
10. Do not dry unwashed tems in the tumble dryer
11. Items that have been soiled with substance such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with a extra amount of detergent before being dried in the tumble dryer.
12. Ihems such as foam rubber (atex form), shower caps, waterproof textles, rubber backed articles and clothes or pilws fited with foam nubber pads should not be dried in the tumble dryer.
13. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
14. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature the ensures that the items will not be damaged. |
15. WARNING: never stop a tumble dryer before the end of the drying cycle unless alitames are quickly removed and spread out so that the heat is dissipated.
16. The exhaust air must not be discharged into a flue which is used for exhausting fumes from anolianoa burning other fuels
17. The appliance must not be install behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer. In such a way that a full opening of the tumble dryer door is restricted.
18. Oil-affected items can ignite spontaneously, especially when exposed lo heal sources such as in a tumble

dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.


19. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent-this will reduce, but not eliminate, the hazard.
20. The appliance should not be overturned during normal use or maintenance.
21. Remove all objects from pockets such as lighters and matches.
22. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
23. For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.
24. If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
25. This appliance is for indoor use only.
26. The openings must not be obstructed by a carpet.
27. Children of less than 3 years should be kept away unless continuously supervised.

Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## Installation before use

### Part name

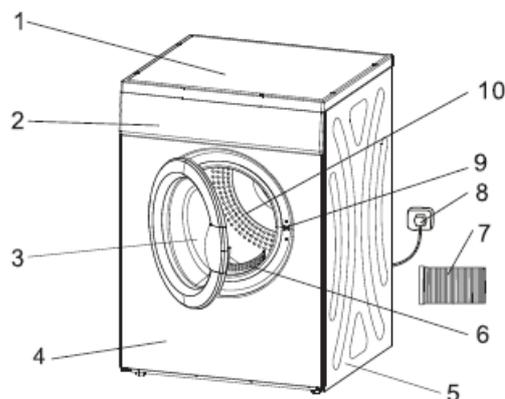


1. Top board
2. Control panel
3. Door
4. Front panel
5. Side panel

6. Filter
7. Flex tube a.Power plug
8. Switch
9. Tumbling box

**Notice before use**

The first step: Power source and grounding.

The dryer employs alternative current with the rated voltage and frequency. When the voltage fluctuates between 6% of rated voltage, the dryer can work normally. A special power socket for the dryer had better be set beside the dryer for convenience and safety. The method of connection of the socket is as the figure below.

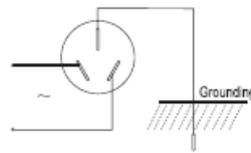

To be safe, please make improvements as soon as possible according to the rules and suggestions mentioned above.

**Notices:**


The socket and the grounding wire must be installed by an electrician to prevent incorrect installation or use of the socket and to guarantee the safety of use of electricity. The power wire of the dryer employs Y connection, if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. No connection of the grounding wire the neutral wire, otherwise the cabinet will be charged, which is likely to cause the danger of electric shock.

**Step 2: Precautions**

- Install or store where it will not be exposed to temperatures below freezing or exposed to water or weather, which could cause permanent damage and invalidate the warranty.



- Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust and dirt. An obstructed port might reduce the airflow.

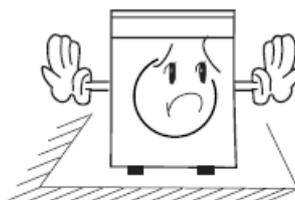


- Thoroughly spin the laundry in washing machine. High spin speed can reduce the drying lime and save energy consumption.



- Make sure combustible sprayer will not be close to dryer when it is working, and once the gas leaks, do not touch plug or start/pause on it.




- Do not wash or dry articles that have been cleaned in, washed in, soaked in or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.).

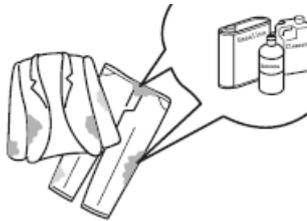


- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.



- Do not allow children on or in the appliance. Close supervision of children is necessary when the appliance is used near children.

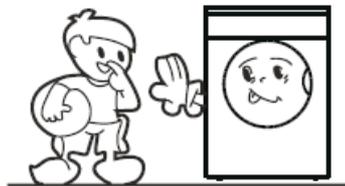


- Please do not use the machine when your foot or hand with water.

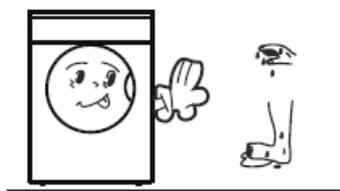

- Do not store plastic, paper or clothing that may burn or melt on top of the dryer during operation.




- The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliance burning gas or other fuels.

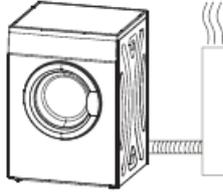

- Do not dry articles containing rubber, plastic or similar materials such as padded bras, tennis shoes, galoshes, bath mats, rugs, bibs, baby pants, raincoat plastic bags or pillows that may melt or burn. Some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion.



- The door can be opened only after the programme of the drying machine is completed. Do not open the door before the programme finished to avoid the human skin from being scalded by hot steam or over heated drying machine.

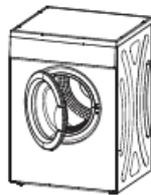

This product belongs to type I electronic products and please take note of safety problem accordingly:

1. The is rule to use power which is buried in the earth and will not touch any social equipment's such as gas pipe or water pipe etc. Make sure the difference of different lines and they are not connected.
2. Please use special socket which is according to National Standard and will endure 10A current.


To be safe, please make improvements as soon as possible according to the rules and suggestions mentioned above.

Please pay attention to use the drying machine if the materials of your clothes can not be dried by ii or contain the symbols as follows:


 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

## Simple installation

Step less 1 :Dryer than 10cm should be distance placed from in a the wall. ventilated If area placed with in room obstacles such as within bathe 1.5m in room, front it is of dryer suggested and there keep are ventilated.

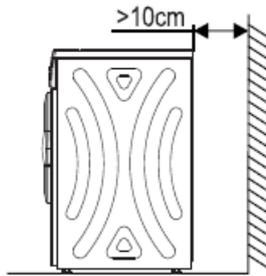


Step a 2:The heavy subject horizontal on the adjustment: string on the front and two sides of the dryer. Please refer this to below figure, and if A=A, B=B, this means the is the placed grounding. horizontally. While the opposite, you could place something dryer.

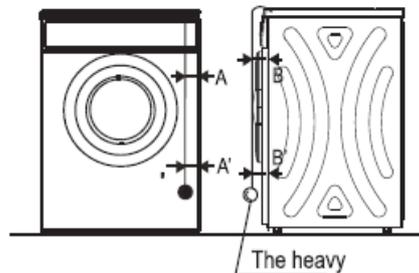


Notice: dryer could not be placed horizontally (the lean angle is no more than 2), the dryer will work unbalanced or stop working sometimes.

- Do Do otice not not when place install the the installing: back dryer of in the dryer open near air or curtain place or easily something in damaged the by wind; rain;
- Do not place the dryer near gas or flammable area.

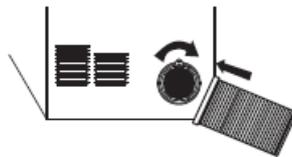

Step 3:Regarding the fixing of flex tube:

- Connect one side of flex tube with whorl to the back
- The vent, other then end fix it of flex deasilly tube till will tight. be extended to outdoor, please refer the right assemble way to the below pictures.

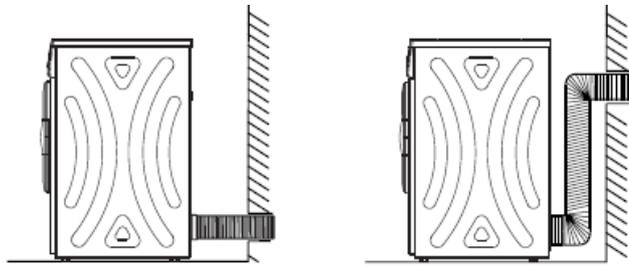


## Control panel

Following are instructions for starting and using your new dryer. Please refer to specific sections of this manual for more detailed information.

**Important Warning:** To reduce the risk of fire, electric shock, or injury to person, read this entire manual, including the Important Safety Instructions, before operating this dryer.

- On/Off
- Start/Pause
- Signal
- Intensity
- Delay
- Anti-Crease
- Program Knob

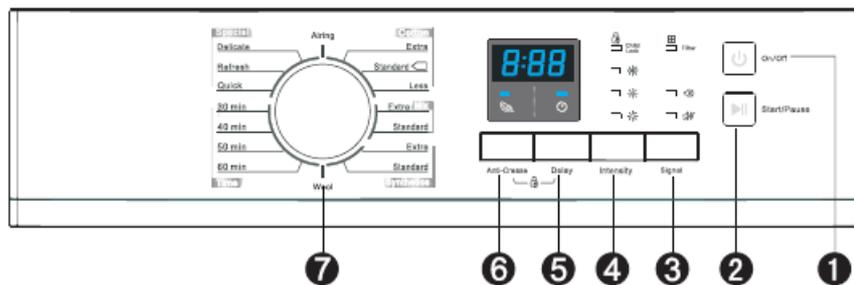

1. Press the [Signal] button to select the on or off signal function. The buzzer will prompt from the dryer when finishing the cycle.
2. Press the [ On/Off] button and pull out the power cable. Press the [ Intensity I button to select adjust the dryness level of the laundry. The level has three grades :+ : \* -:c • The drying time increases 3 minutes in every grade. start.
3. Press ).The the intensity [ Intensity function I can be button activated repeatedly only to before select the the drying programme  
Press the [ Delay I button to select delay clothes drying within 24 lime. hours. You can press this key continuously; it can be selected within 1-24 hours .
4. Press the [Anti-Crease] button to select the fuction, at the end of the drying cycle, the anti-crease operation illuminate time when is the 30 minutes anti-crease (defaultfunction ) or is 120 selected. minutes This function (selected).The prevents the [Anti-Crease] laundry from light creases.
5. If users need child lock function, pressing the [Anti-Crease] and [Delay] buttons simultaneously for Clean over the 3 filter, seconds cabinet to start and child inner lock tube.
6. which This is most symbol suitable means to the dry energy normal cotton efficiency load test at rated

programme load capacity. "standard cotton programme",

7. Please clean the filter when the "Filter" light is flashing, after the dryer stop.

## Programmed Table

Programme	weight (max)	Application/Properties	Delay	Time
Cotton	For cottons and coloureds made of cotton or linen.			
	Extra	7.0kg	To dry cotton pieces of clothing. Drying level: extra dry.	
	Standard		To dry cotton pieces of clothing. Drying level: standard dry.	
	Less		To dry cotton pieces of clothing. Drying level: less dry.	
Mix	If you can not determine what the clothing's material is, please choose Mix.			
	Extra	7.0kg	To dry mix pieces of clothing. Drying level: extra dry.	
	Standard		To dry mix pieces of clothing. Drying level: standard dry.	
Synthetics	For non-iron washing made of synthetic and blended fabrics,cotton.			
	Extra	3.5kg	To dry synthetics pieces of clothing. Drying level: extra dry.	
	Standard		To dry synthetics pieces of clothing. Drying level: standard dry.	
Time	30 min	—	Time 30 min.	
	40 min		Time 40 min.	
	50 min		Time 50 min.	
	60 min		Time 60 min.	
Special	Delicate	—	To dry delicate laundry that is suitable for drying or laundry which is advised to be hand-washed at a lower temperature.	
	Refresh		Remove the smell for the long-laid clothes.	
	Quick		Rapid warm for the long-laid clothes.	
Airing	Airing	—	To air clothes without blowing hot air .	
Wool	Wool	—	For a fluffy and fresh wool clothing(Can not be used for drying wool clothing), When the cycle is done, take out the clothes at once, let them dry in the air.	

**Note:** The programmed above are only recommended for using, users can choose the appropriate programmed according to the personal habits. Thick and multi-layered fabrics,e.g.bedlinen, jeans, jackets etc., are not easy to dry. you'd better choose Jeans programmed and maximum driving intensity.

### Programme table

Note:

- The Cotton Extra programmes above are only recommended for using, users can choose the appropriate Cotton Extra programme according to the personal habits. Thick and multi-layered fabrics,e.g. bedlinen, jeans, jackets etc, are not easy to dry, you'd better choose Mix Extra programme and maximum drying intensity level.
  - Cold wind function means there is only cold wind for circulating before finishing heating 3 minutes.
  - If Anti-Crease option is selected, the anti-crease process will enlarge to 2 hour, otherwise it keeps 30min without this option.
  - The inside temperature and humidity will affect drying time.
  - Check the label attached on clothes and choose the right temperature and time according to the explanation.
- Suggestion: When clothes is less than 1kg, please select 60 min program.

## Operation explanation

- Before drying, thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
- For uniform drying result, sort the laundry according to fabric type and drying programme.
- Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
- Do not over dry the clothes, because over dried clothes can easily get creases.


5. Do not dry the articles containing rubber or similar elastic materials.
6. The door can be opened only after the programme of the drying machine is human skin from being scalded by hot steam or over heated drying machine.
7. Clean the lint filter and empty container after each use to avoid extension of drying time and energy use.
8. Do not dry these clothes after dry-clean process.

The reference weight of dry clothes

 Mixed-fabric clothes (about 800g)	 Jacket (about 800g cotton)	 Jeans (about 800g)	 Towel quilt (about 900g cotton)
 Single bedsheet (about 600g cotton)	 Work clothes (about 1120g)	 Sleepwear (about 200g)	 Long sleeve shirt (about 300g cotton)
 Short sleeve shirt (about 180g cotton)	 Short pants (about 70g cotton)	 Socks (about 50g mixed-weave)	

## Cleaning and routine maintenance

### Filter clean

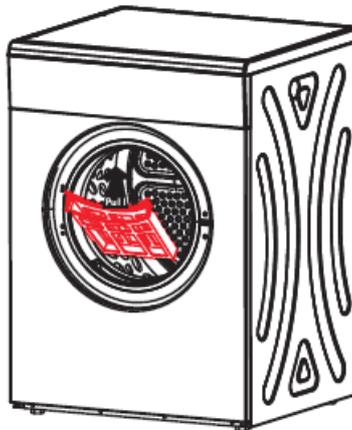

1. Clean the lint filter before each use. Remove by pulling straight up.
2. Cleaning filter  
Use wiping cloth wipe with your hand.
3. Install filter  
If the filter is cleaned by damp cloth or in the water, please install after the sun dry.


### Cleaning cabinet and inner tube

#### Cleaning cabinet and inner tube

Use soft damp cloth wipe when cleaning cabinet and inner tube.

1. Not to rinse by water direct.
2. Not to use neutral scour wipe.

3. Not to use gasoline and alcohol wipe. Make sure open the front door for aeration after cleaning the inner tube.

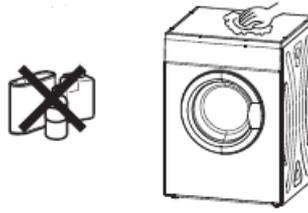

## Safety reset

1. These dryers have a safety cut out switch which is activated by temperature.
2. The safety reset button is on the backboard. If your dryer not heating this button must be reset before the dryer will operate again. You may need to wait 10 minutes for cooling to occur.
3. The most common reason for the dryer to overheat is a blocked filter. Clean the line filter after each load to prevent overheating of the dryer.

It will only be necessary to press the safety reset button if the dryer not heating. Allow the dryer at least 10 minutes to cool down before pressing the button .Press the white button in until you feel the reset click. Cleaning the filter after each load will avoid repetitive operation of the safety cut out switch.

The cut out switch may operate for the following reason:

1. Lint filter is blocked.
2. Exhaust outlets blocked at the back of the dryer.
3. Poor ventilation in the laundry or room-open a window or door
4. Lightweight garment eg. handkerchief, sucked over the filter.

## Safety Reset Button

Use your finger or a pencil to press the button in until you feel it click.



## Precautions

Trouble	Cause	Solution
Will not start	<ul style="list-style-type: none"> <li>Power cut.</li> <li>The power plug is not plugged tight.</li> <li>Dry clothes exceed.</li> <li>The temperature fuse is cut.</li> </ul>	<ul style="list-style-type: none"> <li>Wait for switching on electricity.</li> <li>Check the power socket, make sure plug tight.</li> <li>The clothes in drier must be after spinning, and drying clothes can not exceed 6kg.</li> <li>Please career man restore the temperature fuse.</li> </ul>
External hot or can smell hot	<ul style="list-style-type: none"> <li>The lint filter is dirty.</li> <li>The uptake or exhaust duct is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Make sure clean the lint filter in time.</li> <li>Clean out the stem.</li> </ul>
Clothes too dry	<ul style="list-style-type: none"> <li>The clothes in machine are too full.</li> <li>Not to take out the clothes in time when finish.</li> <li>The clothes don't assort properly.</li> <li>The temperature is enacted too high.</li> </ul>	<ul style="list-style-type: none"> <li>Make sure the clothes are not too full.</li> <li>Take out the clothes immediately when finish.</li> <li>See page 7.</li> <li>Observe the maintenance label on clothes.</li> </ul>
Clothes shrink	<ul style="list-style-type: none"> <li>Too dry</li> </ul>	<ul style="list-style-type: none"> <li>Observe the maintenance label on clothes, if easy to shrink, should examine the clothes when dry. Take out the clothes when tiny damp for too dry. Then hang the clothes until full dry.</li> </ul>
Hairball on clothes	<ul style="list-style-type: none"> <li>It is right for synthetic fibre and permanent press fibre causing hairballs. This is because the right rub causing.</li> </ul>	<ul style="list-style-type: none"> <li>Use fabric softener lubricate fibre, please spray settled gule on cuff and neckline when iron clothes. Turn the sarcenet out for reducing rub.</li> </ul>

The sound of dryer when runs can cause

- Buzzer of vibration: Due to heavy wet clothes' turning and bumping, and this will cause noise accordingly.
- Air bumping: When drying, machine will generate steam which will come out from pipe and this will cost bumping with the bottom of inner tub.

## Other functions description & Technical specifications

### Other functions description

Error code	description	Criteria	Action after fault debounced
E36	Temperature Sensor error	Temperature Sensor is open or short	Stop the program and go to fault state

### Technical specifications

Dimension (LxWxH)	555x595x840(mm)	Weight of product	31.5kg
Rated input power	2000W	Rated volume of dryer	7.0kg (Dry clothes)
Power supply	220-240V~ 50Hz	Ambient temperature	+5c ~ +35c

Note:

1. The rated capacity is the maximum capacity, make sure that the dry clothes which are loaded to the appliance do not exceed the rated capacity each time.
2. Do not install the tumble dryer in a room which the temperature around freezing point, and will have a risk of frost occurring, the tumble dryer may not be able to operate well.

## Product fiche

- Model: ASE17D Rated
- capacity: 7 kg
- Dryer Type: Air-Vented
- Energy efficiency class: C

Energy consumption 519.1 kWh per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

Automatic or non-automatic: Automatic

EU Ecolabel: N/A Energy consumption of the standard cotton programme at full load: 4.49 kWh

Energy consumption of the standard cotton programme at partial load: 2.27kWh

Power consumption of the off-mode (Po):0.46W

Power consumption of the left-on mode (Pl):0.49W

Duration of the left-on mode: 10 min

Cotton+ Standard programmed which is the “standard cotton programmed” used at full and partial load ,is the standard drying programmed to which the information in the label and the fiche relates, that this programmed is suitable for drying normal wet cotton laundry and that it is the most efficient programmed in terms of energy consumption for cotton.

Weighted programme time of the standard cotton programme at full and partial load: 104 min

Programme time of the standard cotton programme at full load: 142 min

Programme time of the standard cotton programme at partial load: 75 min

Sound power level for the standard cotton programme at full load: 69dB

## Documents / Resources

	<p><a href="#">aspes ASE17D Front Load Dryer [pdf] User Manual</a> ASE17D, Front Load Dryer, Dryer, ASE17D Dryer</p>
---	--

## References

-  [Aspes](#)