

ASSET ISKU Number Lock Instructions

Home » ASSET » ASSET ISKU Number Lock Instructions

ASSET ISKU

Contents

- **1 ASSET ISKU Number Lock**
- 2 operating instructions
- 3 Emergency opening without code reset
- 4 Emergency opening with code reset
- 5 QR
- 6 Documents / Resources
- **7 Related Posts**


ASSET ISKU Number Lock



operating instructions


Unlocked position.

- When setting a code, always start with lock in an unlocked position.
- · Locked position.

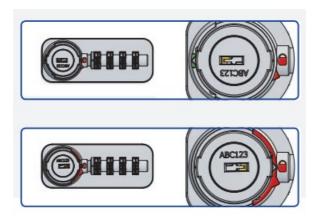


Locking the door

- All digits set to "0", the lock is unlocked.
- Set your personal code.
- Close the lock by turning it 180° to the left.
- Code is automatically scrambled.

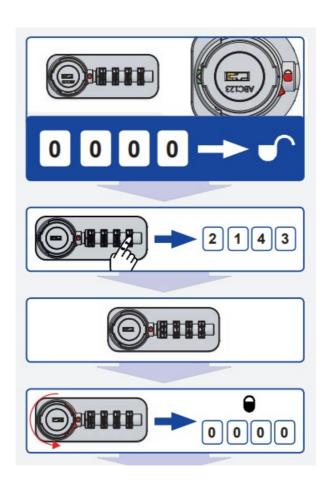


- Set your personal code.
- Open the lock by turning it 180° to the right.
- Code is automatically scrambled.
- A new code can be set by the next user.

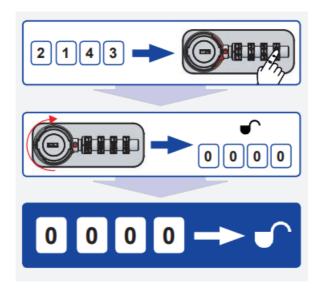


Emergency opening without code reset

- All digits set to "0", the lock is locked.
- Insert the emergency key available from the building management.
- Turn the key to the right until you hear a "click". The lock is still locked.
- Turn the key 180° to the left. The lock is still locked.
- Turn the knob to the right as far as it will go. The lock is now unlocked.
- Turn the knob 180° to the left. The lock is locked again.
- Remove the emergency key.
- All digits set to "0", the lock is locked.

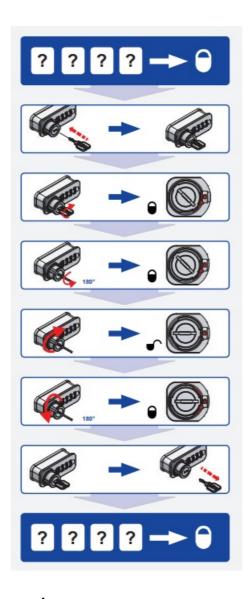

Emergency opening with code reset

- All digits set to "0", the lock is locked.
- Insert the emergency key available from the building management.
- Turn the key to the right until you hear a "click". Lock is still locked.
- Turn the dials 1-4 one after the other 360° starting from the knob.
- Turn the key 180° to the left. Lock is still locked.
- Turn the knob to the right as far as it will go. The lock is now unlocked.
- Remove the emergency key.
- Access code is now erased and the lock can be programmed again.

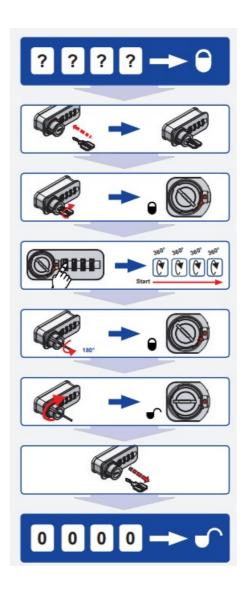

QR



Documents / Resources



ASSET ISKU Number Lock [pdf] Instructions ISKU Number Lock

