
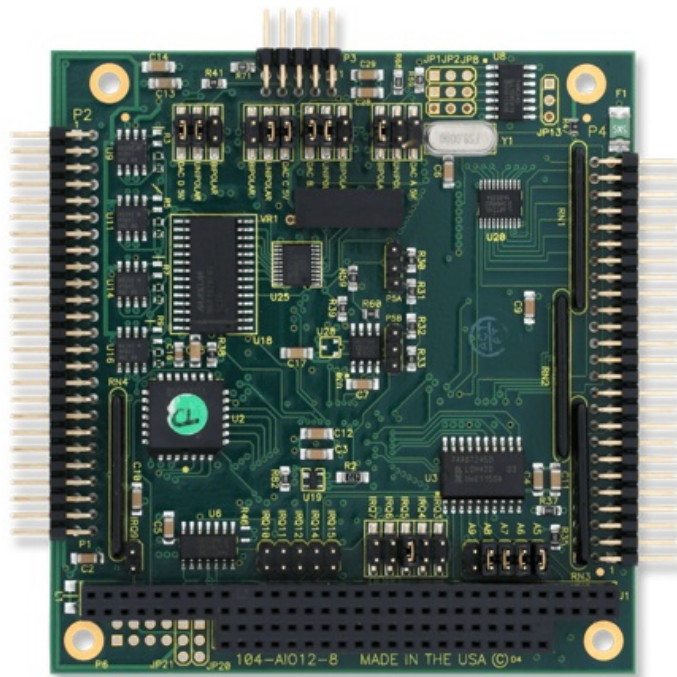


ASSURED SYSTEM 104-AI12-8 Multifunctional Analog IO Board User Guide

[Home](#) » [ASSURED SYSTEM](#) » ASSURED SYSTEM 104-AI12-8 Multifunctional Analog IO Board User Guide 



Contents

- 1 USB to RS-232 CONVERTER
- 2 INSTALLING THE USB-232 CONVERTER
- 3 DRIVER INSTALLATION
- 4 SPECIFICATIONS
- 5 Assured Systems
- 6 Documents / Resources
 - 6.1 References

USB to RS-232 CONVERTER

The USB-232 Converter is an intelligent module which connects to a PC Universal Serial Bus port providing a high-speed asynchronous RS232 serial port. The USB-232 Converter provides easy connectivity between the PC and standard communication ports, not requiring PC reconfiguration, assignment of IRQs or jumper settings.

SYSTEM REQUIREMENTS

A PC with a minimum of a 75M Hz Pentium, or equivalent A minimum of 16M bytes of RAM One available USB type port compliant with USB1.1 Drivers are included on our software master CD that normally ships with ACCES hardware.

Supported Operating Systems: Windows 98/SE, 2000, Me, XP, Linux – built-in to kernel 2.4.0+, MAC OS/8.2 and higher (including X). Driver information is subject to change. Check with ACCES for updated driver information.

CONNECTIONS TO SYSTEM

The USB-232 Converter is equipped with a USB cable and a USB type A connector for connection to a PC USB port and a male DB-9 for connection to a RS232 equipped data or communication terminal.

INDICATOR

A green LED illuminates to indicate transmission or reception of data over the serial port.

INSTALLING THE USB-232 CONVERTER

Note: The RS232 terminal should not be connected to the converter before the converter drivers are installed

1. Power on your computer. Verify the USB port is enabled. Insert the floppy disc or CD containing the software for the USB-232 Converter.
2. Connect the cable of the converter to the USB port of the PC. (The USB-232 Converter is hot-pluggable.)
3. Windows will detect the USB device. Install the driver as described in the next section.

DRIVER INSTALLATION

1. The display "Add New Hardware Wizard" will come up. Click "Next". Click: "Search for the best driver..."
2. Select: "Specify a location" and specify the drive letter for the CDROM or floppy drive where you have inserted the software. Click: "Next" to start search.
3. Click "Next" to continue.
4. Click "Finish". At this point Windows has finished installing the USB-to RS-232 Converter driver.
5. The USB -232 is detected. Click "Next" to continue.
6. Connect the RS232 communication terminal to the USB -232 converter.
7. Click on Start, Settings, and Control Panel. Double click System and click on Device Manager. Verify the USB-232 Converter is listed in the list of COM PORTS as "USB to Serial Adapter"
8. Installation is complete. The PORTS section of Device Manager mentioned in step 7 shows the new COM port

number, following the "USB to Serial Adapter:"

SPECIFICATIONS

Communication speed	300 to 920K baud
Power consumption	50mA @5volt (power provided by the PC's USB port.)
Temperature Range	0°C to 50°C.
Humidity Range	10 to 90% R.H. Non-condensing.
Modes of Operation	RS-232

INTERFACE CONNECTOR: DB-9, Male

PIN ASSIGNMENTS: Standard PC Serial 9-Pin

PIN ASSIGNMENTS:

PIN#	SIGNAL
1	DCD
2	RXDATA
3	TXDATA
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

UNINSTALLING THE USB-232 CONVERTER

1. Unplug the USB-232 Converter.
2. Insert the converter software diskette or CD.
3. Run the FTDIUNIN.EXE program from the diskette and reboot the PC.

Assured Systems

Assured Systems is a leading technology company with over 1,500 regular clients in 80 countries, deploying over 85,000 systems to a diverse customer base in 12 years of business. We offer high-quality and innovative rugged computing, display, networking and data collection solutions to the embedded, industrial, and digital-out-of-home market sectors.

US

sales@assured-systems.com


Sales: +1 347 719 4508

Support: +1 347 719 4508


1309 Coffeen Ave

Ste 1200

Sheridan
WY 82801
USA
EMEA
sales@assured-systems.com
Sales: +44 (0)1785 879 050
Support: +44 (0)1785 879 050
Unit A5 Douglas Park
Stone Business Park
Stone
ST15 0YJ
United Kingdom
VAT Number: 120 9546 28
Business Registration Number: 07699660

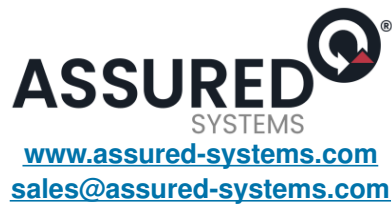

Documents / Resources

	ASSURED SYSTEM 104-AI12-8 Multifunctional Analog IO Board [pdf] User Guide 104-AI12-8 Multifunctional Analog IO Board, 104-AI12-8, Multifunctional Analog IO Board, Analog IO Board, Board
--	--

References

- [Industrial Embedded Computers and Displays - Assured Systems](#)
- [Industrial Embedded Computers and Displays - Assured Systems](#)
- [Industrial Embedded Computers and Displays - Assured Systems](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.