



## astro Fuse 3 USB Reading Light Instruction Manual

[Home](#) » [Astro](#) » astro Fuse 3 USB Reading Light Instruction Manual 



### Contents

- [1 Fuse 3 USB Reading Light](#)
- [2 Documents / Resources](#)
  - [2.1 References](#)

### Fuse 3 USB Reading Light

Products with electronic ballasts / drivers must not be installed on the same electrical circuits as products with inductive loads, for example magnetic fluorescent luminaires, motors or ventilators. Inductive loads can generate excessive voltage surges which can damage electronic ballasts.


This product contains a light source of energy efficiency class E to Regulation (EU) No 2019/2015 (01/09/2021). The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Please read the instructions carefully before commencing assembly


Live: Normally Brown / Red

Neutral: Normally Blue / Black




Earth: Normally Green / Yellow

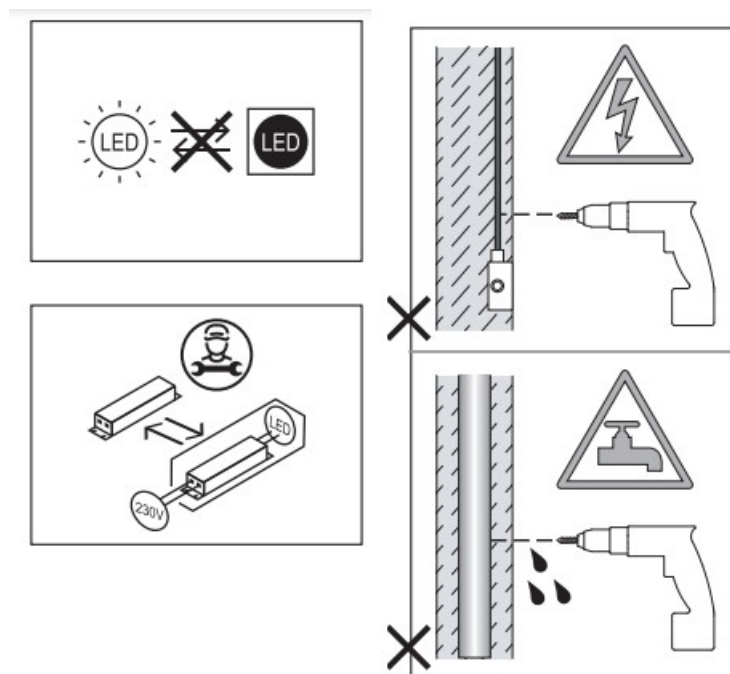

For Wall Use Only

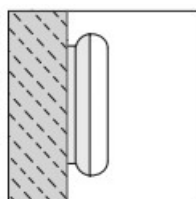

Unsuitable For Dimming

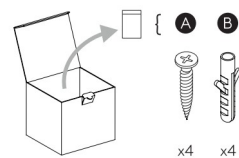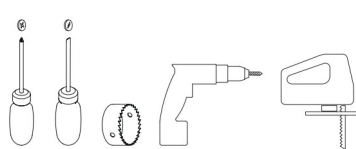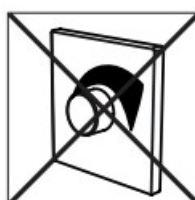


1




Turn Off Power


2

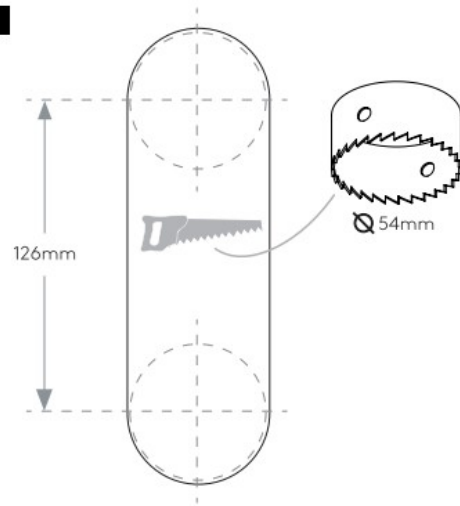


3



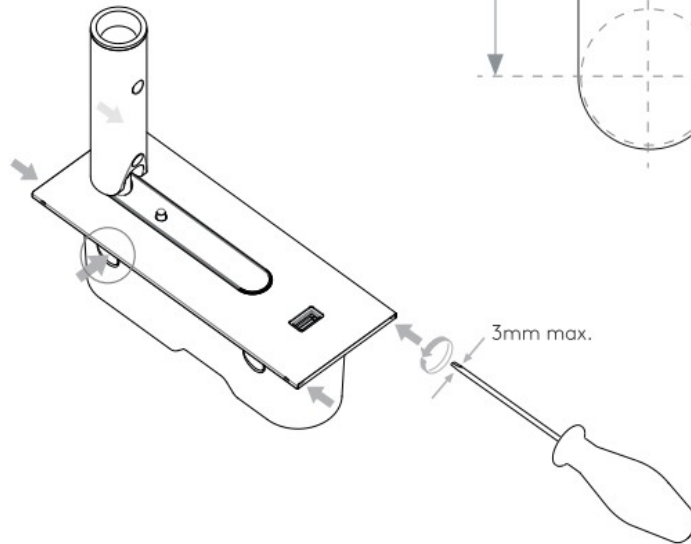


4

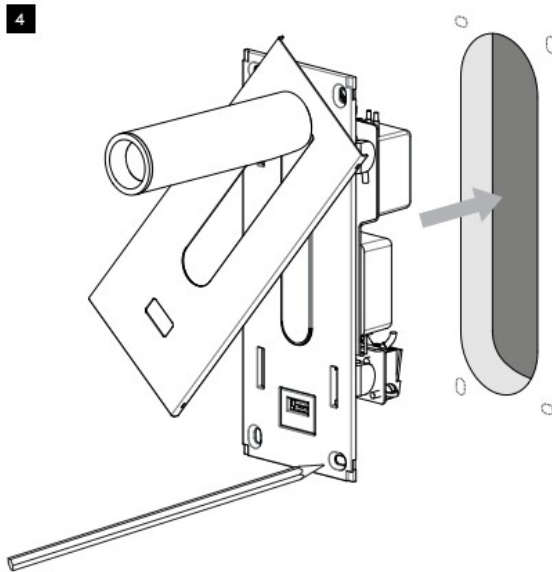

5

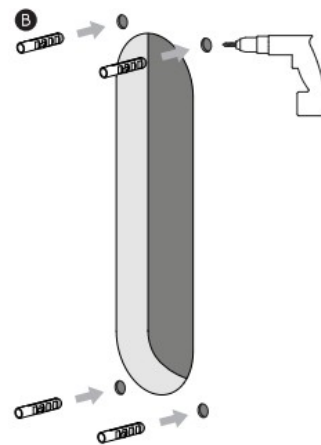

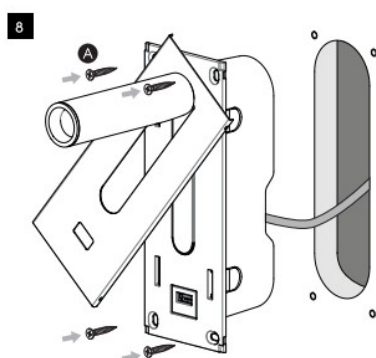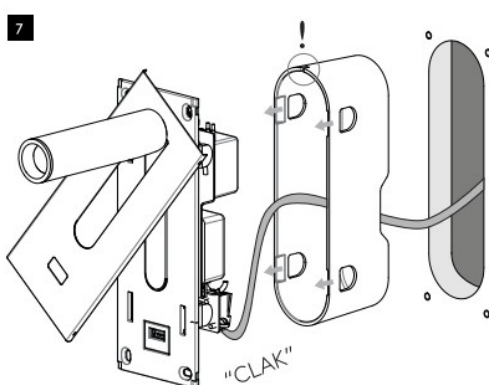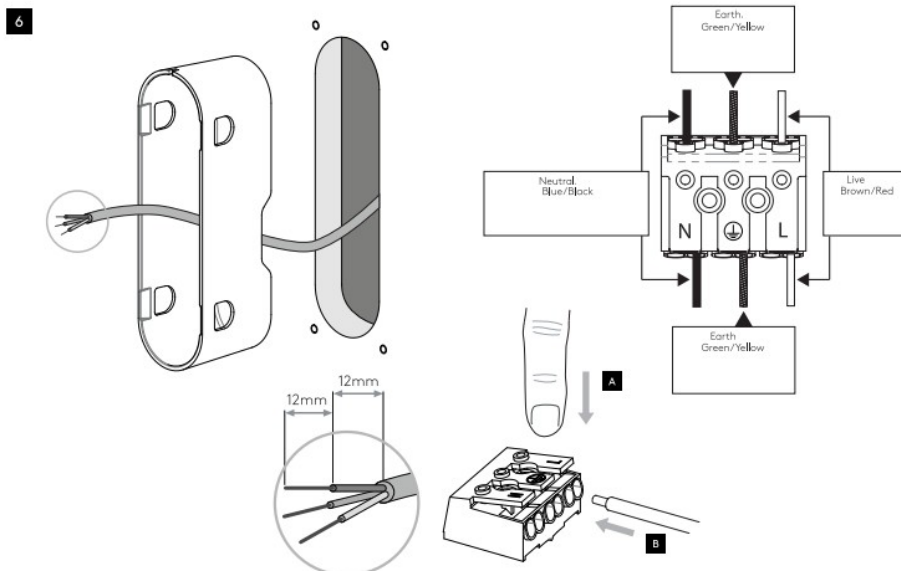


astro

Issue: 4 24.10.2022

P.03/03

	<p><a href="#">astro Fuse 3 USB Reading Light</a> [pdf] Instruction Manual</p> <p>Fuse 3 USB Reading Light, Fuse 3, USB Reading Light, Reading Light, Light</p>
---	---

References

- [User Manual](#)