

AstroAI MF159 Jump Starter and Air Compressor featured



# AstroAI MF159 Jump Starter and Air Compressor User Manual

[Home](#) » [AstroAI](#) » AstroAI MF159 Jump Starter and Air Compressor User Manual 

### Contents

- 1 [AstroAI MF159 Jump Starter and Air Compressor](#)
- 2 [INTRODUCTION](#)
- 3 [PREPARATION](#)
- 4 [INSTRUCTIONS](#)
- 5 [MAINTENANCE](#)
- 6 [SPECIFICATIONS](#)
- 7 [TROUBLESHOOTING/FAQ](#)
- 8 [PACKAGE INCLUDES](#)
- 9 [Documents / Resources](#)
  - 9.1 [References](#)

# AstroAI

## AstroAI MF159 Jump Starter and Air Compressor



## INTRODUCTION

Thank you for purchasing the AstroAI Jump Starter with Air Compressor. This product can be used as both a jump starter and an air compressor, inflating tires, air mattresses and more. It also functions as a power bank and emergency flashlight; it is a must-have tool for the outdoors. We hope this product protects you on your journeys. AstroAI strives to build tools that help you enjoy all of life's adventures.


**Questions or concerns?** You are welcome to contact us via [support@astroai.com](mailto:support@astroai.com).

Please fully read and follow this manual before using this product and keep this manual for future reference.


## WARNING

- Contains small accessories which are a choking hazard for young children. Keep out of reach of children.
- The inflation hose will heat up during use, be mindful of the heat.
- Do not overinflate the tire, high pressure may cause damage.
- Allow a 60-second interval between continuous operations to avoid overheating the product.
- Only use the included jumper clamps. Do not use the jumper clamps if the clamps or cables are damaged.
- Do not use the product in hot temperatures or high humidity. Store the product as instructed.
- Do not modify or disassemble the product.
- Keep the product away from flammable liquids and gases, dust, and corrosive liquids.
- The jump start function is only compatible with 12 V vehicles.
- Ensure the blue plug is fully inserted into the socket, or it may burn.
- Ensure the starter's battery level exceeds 60% before attempting to jumpstart your car.
- Do not drop or toss the product. If the product is hit or damaged, it needs to be tested by a qualified battery technician.
- You may dispose of the lithium battery according to local guidelines when its service life has ended.
- Supervise the product while it is inflating.
- Please check the preset value and unit before use.
- Do not aim the nozzle at people or any part of a human body.
- Extended use is not recommended! Please cool down the product for at least 10 minutes after 10 minutes of continuous use.
- Do not store the product at temperatures above 70 °C/158 °F.
- Only charge this product at room temperatures between 32-113 ° F (0-45 °C).


## DIAGRAM

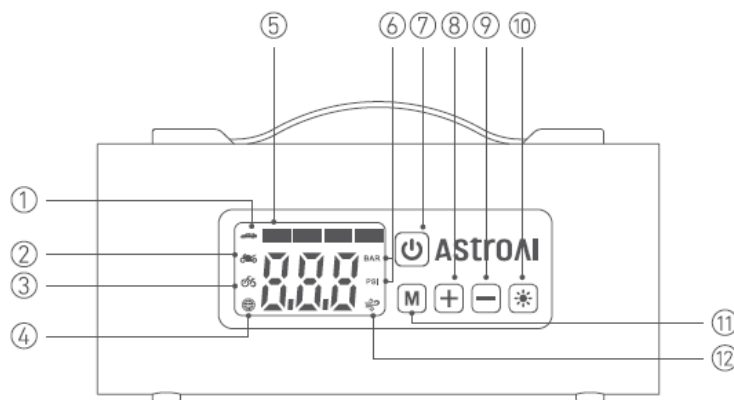

1. Car Mode
2. Motorcycle Mode
3. Bicycle Mode
4. Basketball Mode
5. Battery Level
6. Units
7. Power Button
8. “+” Button
9. “-” Button
10. Light Button
11. Mode Button
12. Air Mattress Mode

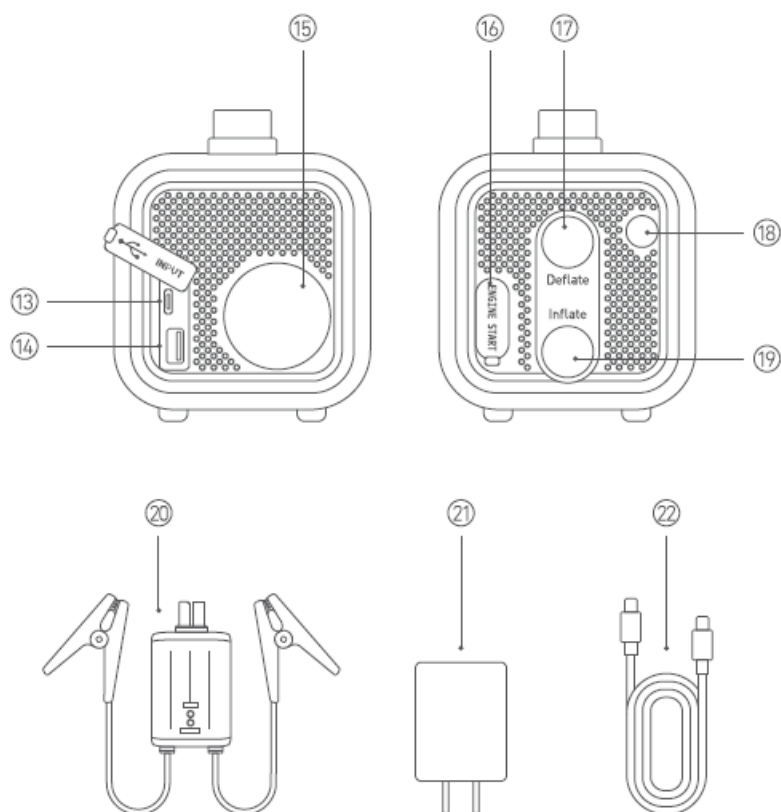

13. Type-C Input Port
14. USB Output Port
15. LEO Light/SOS
16. Battery Clamp Port
17. Air Mattress Mode-Deflation Port
18. Tire Inflation Port
19. Air Mattress Mode-Inflation Port
20. Smart Battery Clamps
21. Charger
22. USB Charging Cable

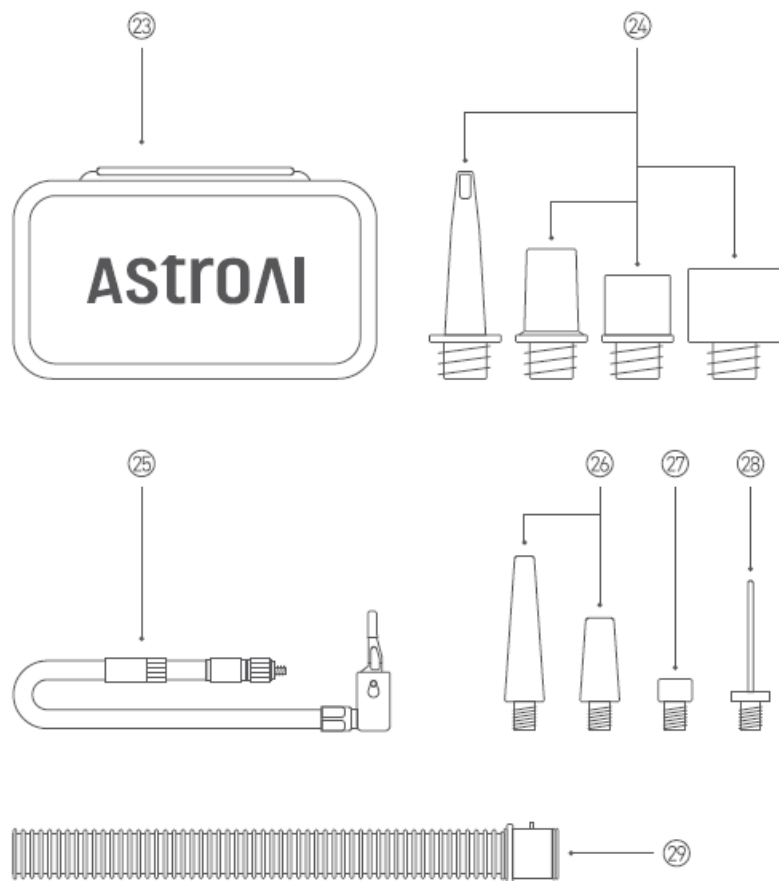


- 23. Storage Box
- 24. 1-4 Air Mattress Nozzle
- 25. Air Hose
- 26. 2x Air Nozzles
- 27. Presta to Schrader Adapter
- 28. Needle Valve Adapter
- 29. Air Mattress Hose


## PREPARATION



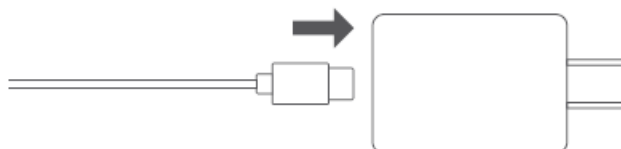

### How to charge the product

1. Connect the USB-C end of the USB charging cable to the charger.

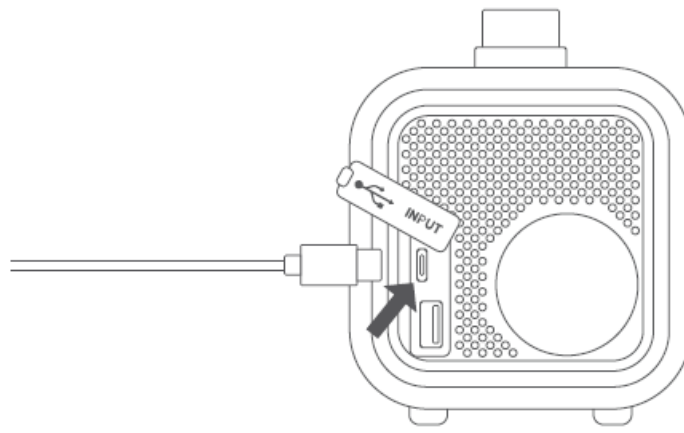

2. Connect the USB-C end of the USB charging cable to the Type-C port of the product.



Indicator	Battery Level
1 Bar 	Under 25%
2 Bars 	Between 25% and 50%
3 Bars 	Between 50% and 75%
4 Bars 	Between 75% and 100%

**Note:** The battery indicators will illuminate circularly while charging; the illuminated indicators represent the current battery level. If all four of the battery indicators are off, it means the charging is complete.

### Ensure the pressure value is correct

To avoid overinflation, please confirm the maximum inflation pressure of the objects being inflated. Overinflating objects may cause damage and personal injuries.

### Tires

The recommended tire pressure is usually noted on the tire's sidewall. Tire pressure recommendations/maximums can also be found on the inside of the driver's door. Check your vehicle's instructions/user manuals for information about the load-bearing capacity and recommended tire pressure.


### Balls

The recommended pressure can be found on the air valve of soccer balls, basketballs, volleyballs and most other balls.

## INSTRUCTIONS

### How to jumpstart

1. Turn on the product and plug in the smart battery clamps.
  - Illuminated red
  - **Cause:** Low voltage
  - **Solution:** Charge it

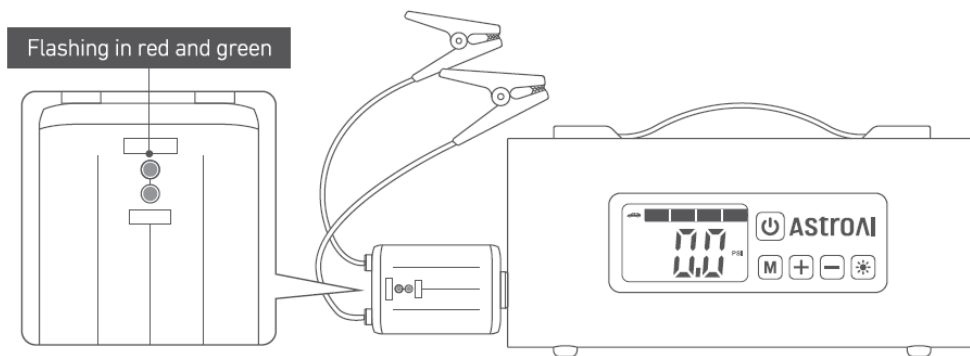

2. Connect the smart battery clamps to the vehicle's battery.

- **Illuminated red, buzzer long beeping**


**Cause:** Short circuit

**Solution:** Check the circuit or try step 1

- **Illuminated red, buzzer emitting a short beep sound**

**Cause:** Reversed polarities


**Solution:** Reverse the clamps

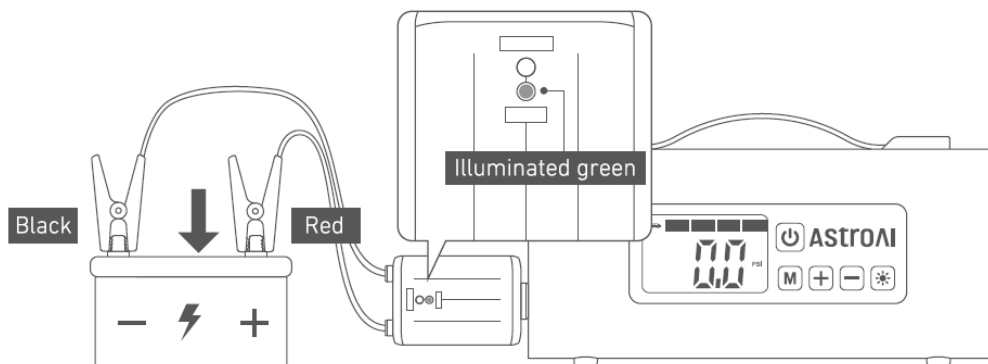


3. Start your engine.

**Flashing red light**

- **Cause:** Failed to jumpstart in 30s
- **Solution:** Remove the clamps, try step 1

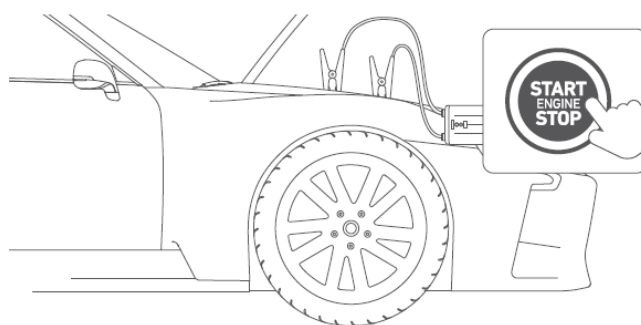

4. Remove the smart battery clamps from the battery.

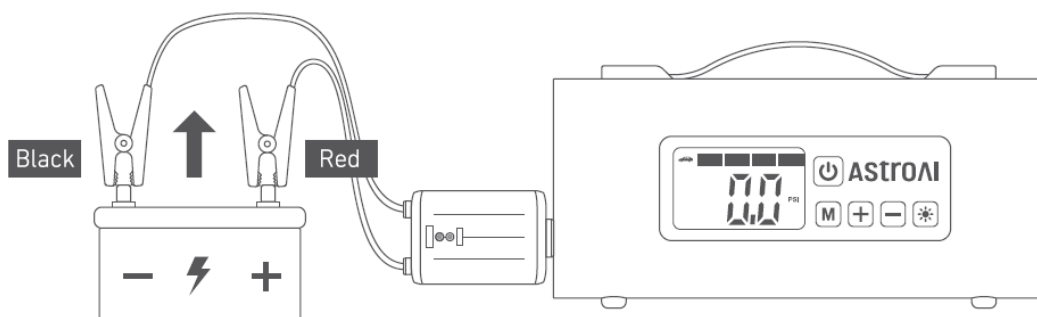


**Note:**

- A red light illuminating on the smart battery clamps indicates the jump starter has a low battery level.
- Connect the red clamp to the battery's positive terminal(+) and the black clamp to the battery's negative terminal(-).


## How to inflate tires

1. Turn on the product and connect the air hose to the product.

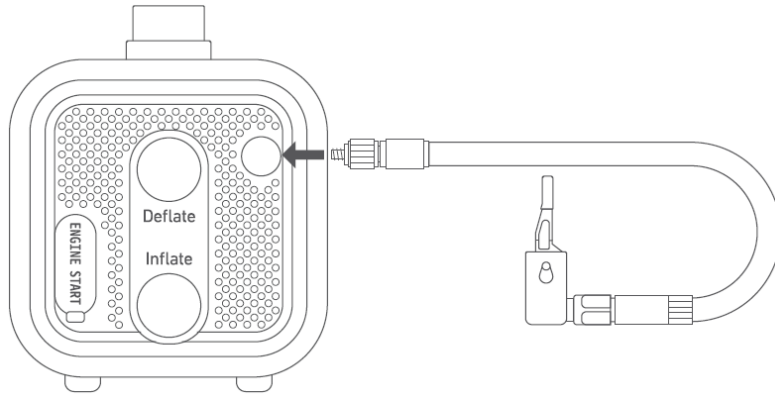


2. Choose the appropriate nozzle for your inflatable.

**Note:** Firmly flip the small lever to ensure a secure connection.

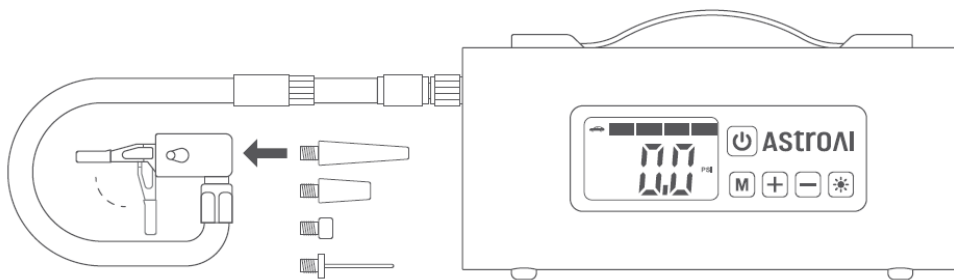


3. Use the "Mode" Button to select inflation mode.


Use the "+" & "-" buttons to adjust the pressure value.

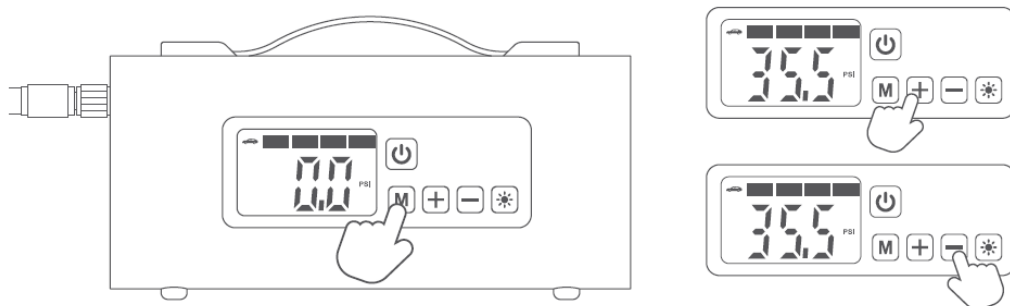


4. Connect the other end of the air hose to the tire valve.

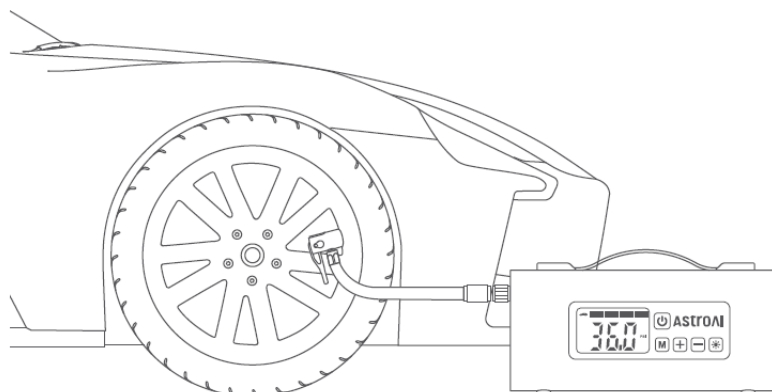

5. Press the Power Button to start inflating.

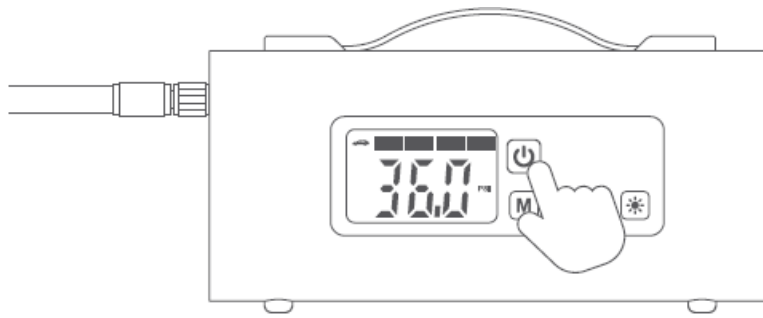

6. Disconnect the hose from the tire.

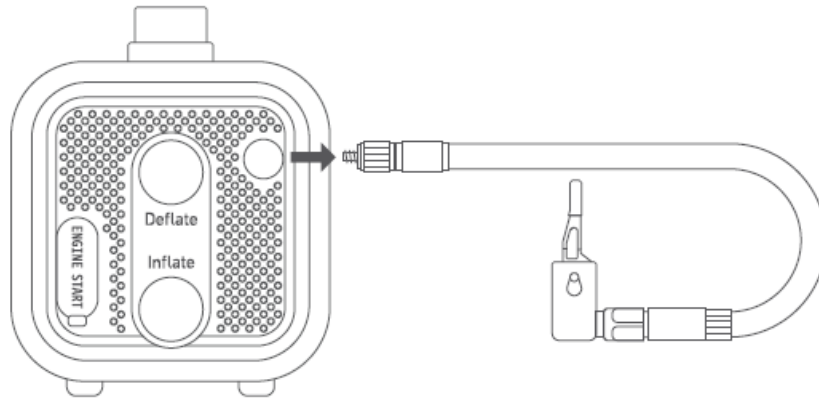

**Tip:**


The maximum pressure of the custom mode is 150 PSI, while the other four modes' values are fixed to avoid damages or safety hazards.

- Car 58 PSI/4 Bar
- Motorcycle 51 PSI/3.5 Bar
- Bicycle 150 PSI/10.3 Bar
- Basketball 14 PSI/1 Bar

**Note:** The air hose will heat up during inflation; do not touch the air hose directly. Doing so may cause burns.


**How to inflate/deflate air mattresses**

1. Turn on the product. Connect the air mattress hose to the air mattress mode inflation/deflation port.

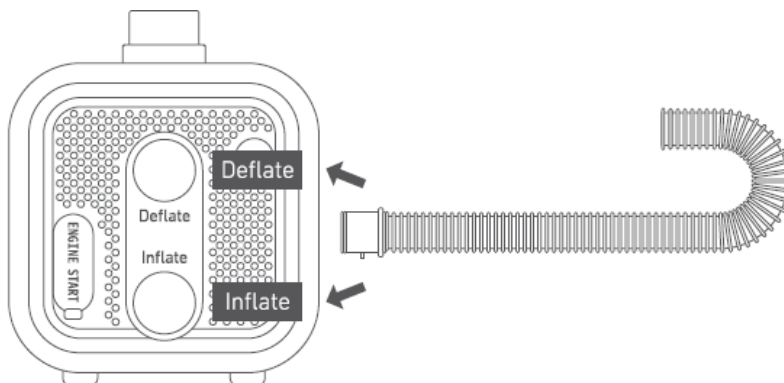


2. Choose a nozzle based on the items being inflated or deflated, horizontally align the hose and accessory nozzle, twist them clockwise along the threads.




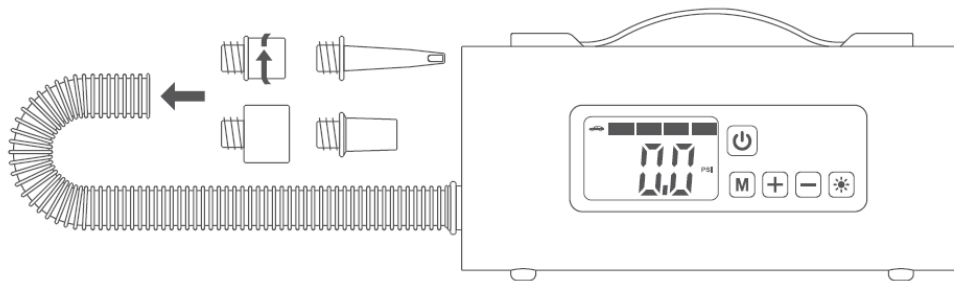


3. Press the "Mode" Button to choose the air mattress mode.

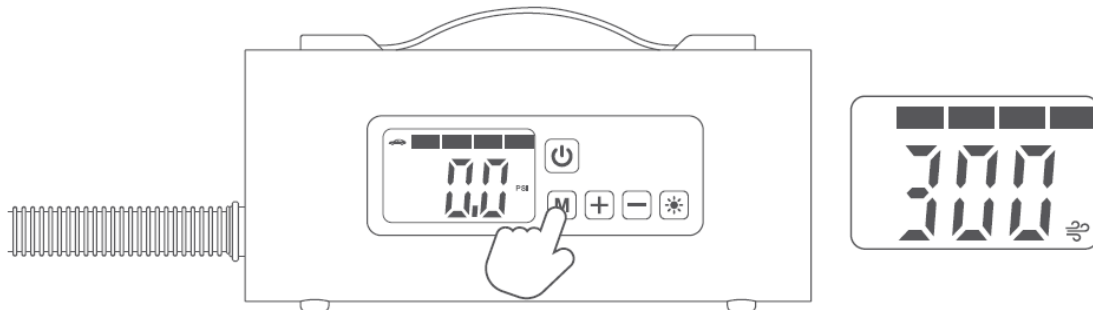


Press the "+" & "-" buttons to adjust inflation/deflation time. The default time is 300 seconds.

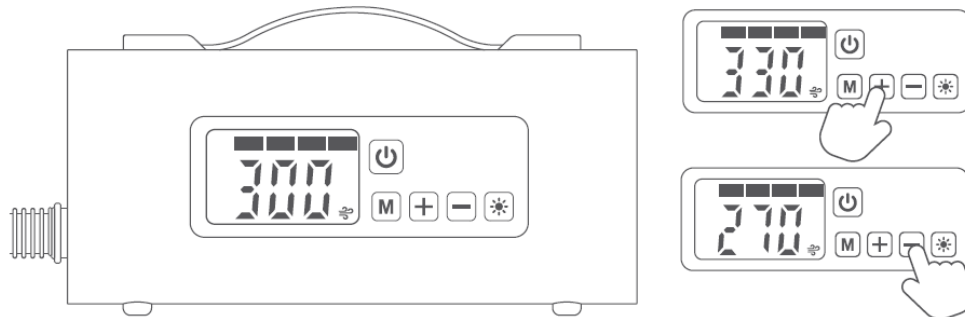


4. Connect the air mattress hose to your air mattress (es).

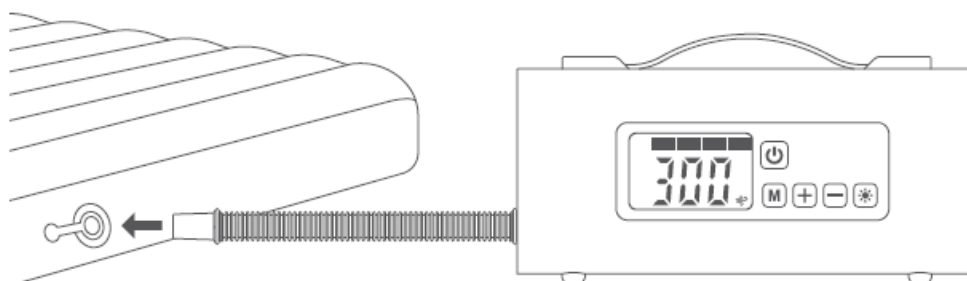

5. Press the Power Button to start inflating/deflating.

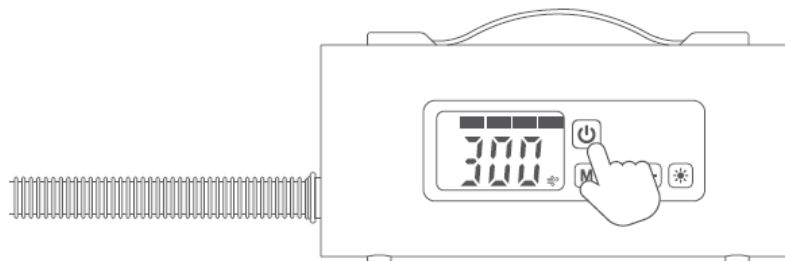

6. Disconnect the hose from the air mattress.

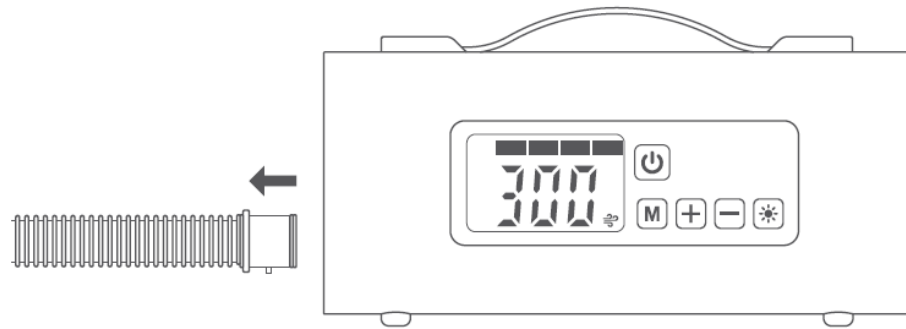**Tip 1:**

Connect the air hose to the air mattress mode inflation port for inflation or the air mattress mode deflation port for deflation.

**Tip 2:**

The default inflation time is 300s, press once to adjust the time by 30 seconds.

**Tip 3:**

Let the product cool down for 15 minutes after 10 minutes of continuous operation.

**Power bank function**

1. Insert the USB charging cable into the USB output port of the product.
2. Connect the other end of the USB charging cable to the device being charged.

**LED illumination function**

Press and hold the Light Button for 2 seconds to turn on the illumination function. Press the Light Button again to choose between Flashlight mode, Strobe mode, SOS mode and OFF.

**MAINTENANCE**

- To maximize the battery' s performance and service life, please charge the product when its battery level is lower than 75%.
- Please fully charge the product if it is going to be idle for a long time. Charge it every three months to extend its service life.

**CODE ANALYSIS**

- **E1**  
Error: Battery overheating  
Solution: Let it cool down
- **E2**  
Error: Low battery temperature, failed to charge it  
Solution: Within the appropriate temperature range, it will work functionally
- **E3**  
Error: Motor overheating  
Solution: Let it cool down
- **E4**  
Error: More than 10 minutes of continuous working activates the protection function  
Solution: Stop the operation and restart it

- **E5**

Error: Insufficient battery level

Solution: Charge it immediately

## **SPECIFICATIONS**

- Model MF159
- Capacity 54760 mWh (54.76 Wh)
- Jumpstart Current 800 A (15) 500 A (35)
- Peak Current 2500 A
- Tire Inflator Pressure 3-150 PSI, 0.2-10.3 Bar
- Tire Inflator Accuracy  $\pm 1$  PSI
- Inflation Speed 220 L/Min
- USB Output USB-A 5 V==2 A
- Type-C Input
- Operation Temperature Maximum PD 20 W
- Charge Temperature
  - -4~122 °F; -20~50 °C
  - 14~113 °F; -10~45 °C
- Time to Fully Charge Approximately 4 hours for 20 W, 3 hours for 30W

## **TROUBLESHOOTING/FAQ**

### **Q: Slow inflation**

- Insufficient battery level.
- Check if the air hose leaks.
- Check if there is a good seal on the air hose's ends.
- Check if the inflating object is intact.

### **Q: If you fail to jumpstart the vehicle, please check the possible causes in order.**

- Insufficient power level; you may need to charge the jump starter more. Please keep the battery level higher than 60% to ensure a successful jumpstart.
- Bad connection caused by rust or dirt on battery terminals; please clean the terminals and try again.
- The jump starter activated its overheating protection due to the battery overheating; please try again after it cools down.
- The battery clamps are connected to the incorrect terminals; please ensure the clamps are connected to the correct terminals.
- Poor connection between the clamps and battery; ensure the connection between the clamps and the battery is secure.
- The vehicle cannot start because of issues unrelated to battery levels. Please use the appropriate equipment to check the battery or error code of the vehicle.

**Q: Failure to power on**

Insufficient power level or the product is charging.

**Q: The inflation function is working, but pressure stays at zero.**

The object's pressure value is too low to detect.

**Q: Failure to charge**

- Check if the charging cable is connected correctly.
- Ensure the outlet is powered.
- The product activated its overheating protection due to the battery overheating; please charge it after allowing it to cool down to room temperature.

**PACKAGE INCLUDES**

- Jump Starter with Air Compressor X 1
- Presta-Schrader Adapter X 1
- 1-4 Air Mattress Nozzle X 1
- Smart Battery Clamps X 1
- Air Mattress Hose X 1
- Needle Valve Adapter X 2
- Air Nozzle X 1
- Air Hose X 1
- USB Charging Cable X 1
- Charger X 1
- Storage Box X 1
- User Manual X 1

**RECYCLING**

You may dispose of the product when its service life has ended, please recycle the recyclable parts according to local guidelines.


**WARRANTY PERIOD****2-Year Limited Warranty from AstroAI**

Each AstroAI Jump Starter with Air Compressor will be free from defects in material and craftsmanship. This warranty does not cover damage from neglect, misuse, contamination, alteration, accident, or abnormal conditions of operation or handling. This warranty covers the original purchaser only and is not transferable.

**Web:** [www.astroai.com](http://www.astroai.com)

**E-Mail:** [support@astroai.com](mailto:support@astroai.com)

---

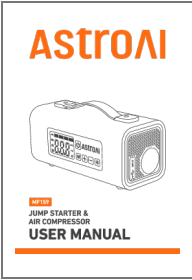 The image shows the cover of the user manual for the AstroAI MF159 Jump Starter and Air Compressor. It features the AstroAI logo in orange at the top left. Below it is a photograph of the white and black device. At the bottom, the text 'MF159 JUMP STARTER & AIR COMPRESSOR USER MANUAL' is printed in black, with 'MF159' highlighted in orange.	<p><a href="#">AstroAI MF159 Jump Starter and Air Compressor</a> [pdf] User Manual</p> <p>MF159 Jump Starter and Air Compressor, MF159, Jump Starter and Air Compressor, Air Compr essor</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.