

AstroAI

**S8 Air Jump
Starter with Air
Compressor**



AstroAI S8 Air Jump Starter with Air Compressor User Manual

[Home](#) » [AstroAI](#) » AstroAI S8 Air Jump Starter with Air Compressor User Manual 

Contents

- 1 [AstroAI S8 Air Jump Starter with Air Compressor](#)
- 2 [Product Usage Instructions](#)
- 3 [INTRODUCTION](#)
- 4 [PACKAGE INCLUDES](#)
- 5 [DIAGRAM](#)
- 6 [PREPARATION](#)
- 7 [INSTRUCTIONS](#)
- 8 [Power Bank Function](#)
- 9 [MAINTENANCE](#)
- 10 [SPECIFICATIONS](#)
- 11 [TROUBLESHOOTING/FAQ](#)
- 12 [Contact](#)
- 13 [Documents / Resources](#)
 - 13.1 [References](#)
- 14 [Related Posts](#)

AstroAI

AstroAI S8 Air Jump Starter with Air Compressor



Specifications

- Product Name: S8 Air Jump Starter with Air Compressor
- Includes: Jump Starter with Air Compressor, Smart Battery Clamps, USB-A to USB-C Charging Cable, Presta to Schrader Adapter, Needle Valve Adapter, Air Hose, Air Nozzle, Storage Bag, User Manual
- Output Ports: 5V 2.4A USB-A, 5V 2A USB-C, 12V Jump Start

Product Usage Instructions

Charging Instructions

To charge the jump starter:

1. Connect the USB-C end of the charging cable to the device's charging port and the USB-A end to a power source.
2. The power bars will flash while charging. When a bar changes from flashing to fully illuminated, it indicates the charge level.
3. The screen will turn off when charging is complete.

Jumpstarting Instructions

To jumpstart your vehicle:

1. Insert the smart battery clamps into the jump starter's 12V port.
2. Connect the red clamp to the battery's positive terminal and the black clamp to the negative terminal.
3. Start your engine and then remove the clamps.

Inflating Tires Instructions

To inflate tires:

1. Choose the appropriate nozzle and connect it securely.
2. Press and hold the Power Button to turn on the unit. Select the inflation mode and adjust the preset pressure value accordingly.
3. Use the Mode Button to switch between different inflation modes (car, motorcycle, bicycle, ball, custom).

FAQ

- **Q: What should I do if the indicator light on the battery clamps is flashing green?**
 - A: If the indicator light is flashing green, it indicates low car battery voltage. Press the Boost Button and wait for the indicator to turn green before starting your car within 30 seconds.
- **Q: How do I know if the vehicle battery terminals are connected correctly?**
 - A: An illuminated green light on the battery clamps indicates the correct connection. You can start your engine directly in this case.
- **Q: Can I use any USB source for charging the jump starter?**
 - A: Yes, you can use any USB source like 5V wall chargers or car chargers for charging the jump starter.

INTRODUCTION

Thank you for purchasing the AstroAI Jump Starter with Air Compressor. This product uses the ultra-powerful discharge technology of a lithium battery to help users jumpstart car batteries that are fully depleted or in a low-temperature environment. It also functions as an air compressor, power bank and emergency flashlight; it is a must-have tool for the outdoors. We hope this product protects you on your journeys. AstroAI strives to build tools that help you enjoy all of life's adventures.

Questions or concerns? You are welcome to contact us via

- support@astroai.com

Please fully read and follow this manual before using this product and keep it for future reference

WARNINGS


- Fully charge the product before use.
- This product contains small accessories which are a choking hazard for young children. Keep out of reach of children.
- Do not aim the nozzle at people or any part of the human body.
- Extended use is not recommended. Please cool down the product for at least 10 minutes after 10 minutes of continuous use.
- Please check the preset value and unit before use. Do not overinflate the tire, high pressure may cause injuries.
- The inflation hose will heat up during use, be mindful of the heat.
- Do not use the product as a car battery and do not use it to start the car while the jump starter is charging.



- Do not connect the red clamp to the black clamp.
- The product is intended only to start 12V vehicles and is prohibited for use on non-12V equipment such as aircraft and 24V vehicles/boats.
- Only use this product with the included battery clamps. Do not use the jumper clamps or cables if they appear damaged.
- Take off any metal accessories, such as rings, bracelets, or necklaces before operating the jump starter.
- Non-professionals should not disassemble, remodel, or repair the product.
- Before starting your car, clean the battery terminals and inspect the jumper clamps for any damage. Dirty terminals and damaged clamps can affect performance.
- Fully insert the battery clamp's blue plug into the socket. Failure to do so may damage the device.
- Repeatedly jumpstarting your vehicle in a short time frame will increase the likelihood of damage. To prevent this, ensure the jump starter has adequate breaks in between each use.
- If you are using the jump starter several times in a row, allow a 60-second break in between each use.
- Promptly remove the jump starter from the vehicle's battery after successfully jumpstarting your car. Failure to do so may cause damage.
- Do not place the product in a high temperature, humid environment, or near flammable materials or strong magnetic fields.
- Be aware of the product's charging, working, and storage temperature range. Do not expose it to direct sunlight or leave it in a high-temperature environment for a long time.
- If any abnormalities occur (e.g. overheating, smoking, or burning) while using the jump starter, please turn it off, remove the clamps, and immediately contact AstroAI customer support.
- Handle the product with care to avoid dropping and other severe impacts.
- You may dispose of the lithium battery according to local guidelines when its service life has ended


PACKAGE INCLUDES

- Jump Starter with Air Compressor × 1
- Smart Battery Clamps × 1
- USB-A to USB-C Charging Cable × 1
- Presta to Schrader Adapter × 1
- Needle Valve Adapter × 1
- Air Hose × 1
- Air Nozzle × 1
- Storage Bag × 1
- User Manual × 1

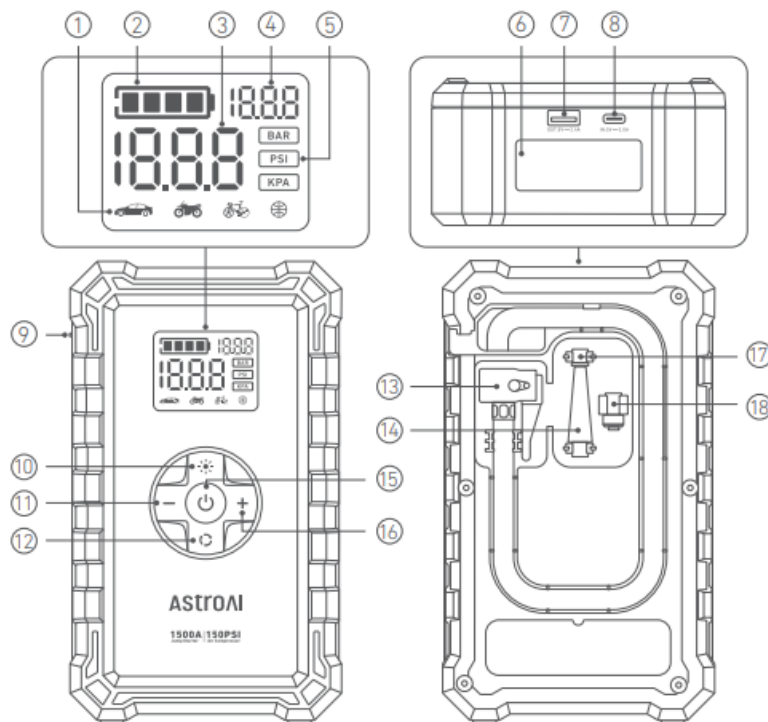DIAGRAM



1. Inflation Mode Display
2. Battery Level
3. Real-Time Pressure Value
4. Preset Pressure Value
5. Units
6. LED Flashlight
7. 5V  2.4A USB-A Output Port
8. 5V  2A USB-C Input Port
9. 12V Jump Start Port
10. Light Button
11. “-” Button
12. Mode Button
13. Inflation Hose
14. Air Nozzle
15. Power Button
16. “+” Button
17. Needle Valve Adapter
18. Presta to Schrader Adapter

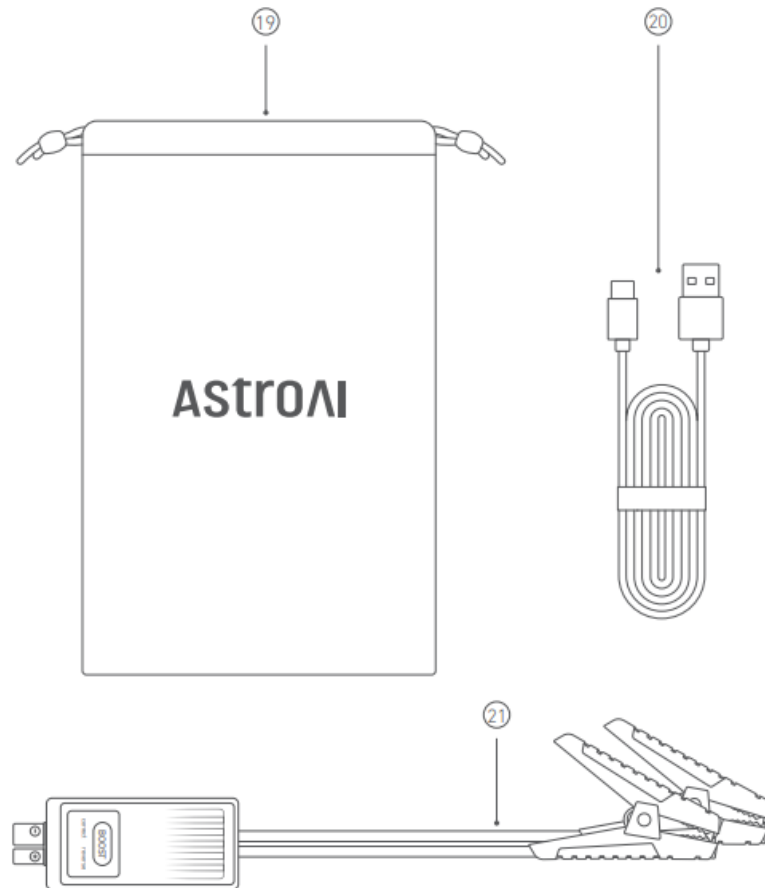

19. Storage Bag

20. USB-A to USB-C Charging Cable

21. Smart Battery Clamps



PREPARATION

How to Charge


To charge the jump starter, connect the included charging cable's USB-C end into the device's charging port and the cable's USB-A end to the power source. The power source can be any USB source like 5V wall chargers, car chargers, etc. (Note: charging block not included)

Indicator Battery Level

- 1 Bar Under 25%
- 2 Bars Between 25% and 50%
- 3 Bars Between 50% and 75%
- 4 Bars Between 75% and 100%

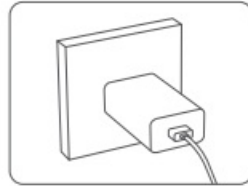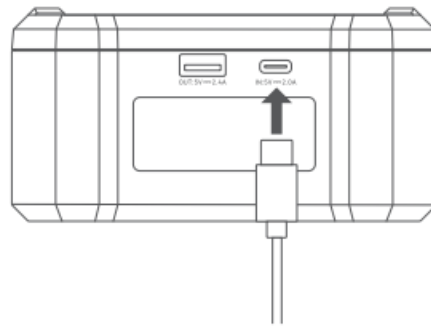

or

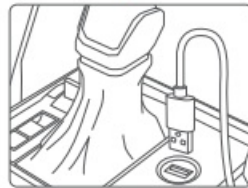

While charging, the power bars will flash from one to another. When a bar changes from flashing to fully illuminated, it is charged to that level. The remaining bars will continue flashing in a cycle until all four bars are illuminated. The screen will turn off when the charging is complete.


INSTRUCTIONS

How to Jumpstart

Note: For best jumping performance, ensure the jump starter's battery level exceeds 75% and turn off any electrical devices inside your vehicle before starting your car.

1. Fully insert the smart battery clamps into the jump starter's 12V port.
2. Connect the red clamp to the battery's positive terminal (+) and the black clamp to the battery's negative terminal (-).

Proceed to the next step when the clamps' indicator remains green. For other indicator statuses, see the indicator light description table below.

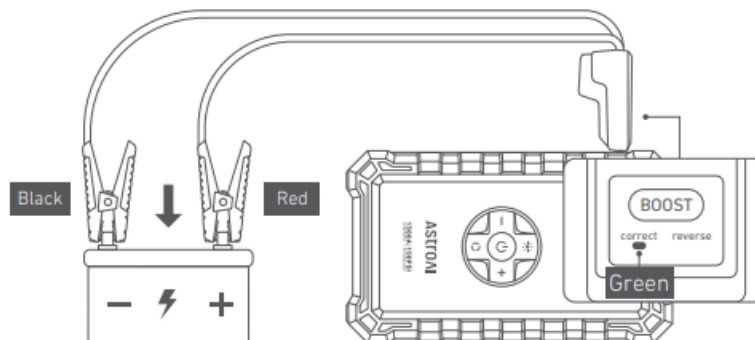

3. Start your engine.
4. Remove the clamps from the battery.

Indicator Light of the Battery Clamps

Illuminated green

- Indication: Clamps connected correctly.
- Operation: Start your engine directly

Flashing green light





- Indication: Low car battery voltage.
- Operation: Press the Boost Button and wait until the indicator turns green. Then, start your car within 30 seconds.

Illuminated red

- Indication: Reversed polarities.
- Operation: Please correctly reconnect the positive and negative terminals of the clamps.


No Light

- Indication: The vehicle battery may be damaged.
- Operation: Retry steps 2 and 3 when the battery clamps are correctly attached, or contact AstroAI for further assistance.

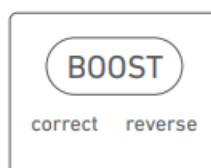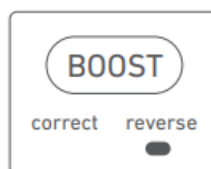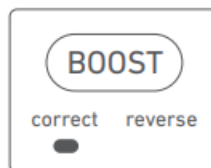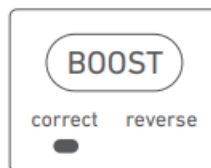


How to Inflate Tires

1. Connection: Choose an appropriate nozzle based on the inflatable and tightly connected to it.

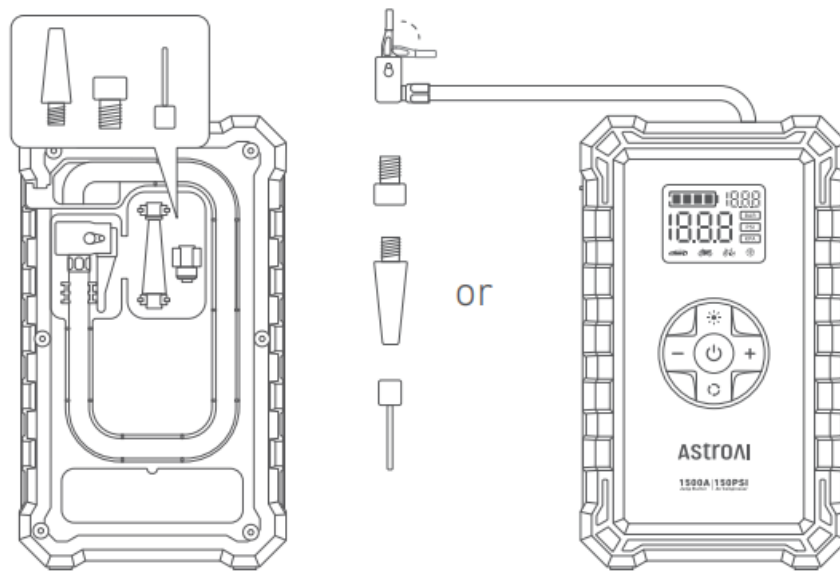


2. Setting: Press and hold the Power Button to turn on the unit. Then, choose the appropriate inflation mode and adjust the preset pressure value according to the required air pressure of the inflatable.

1. Press the Mode Button to switch between car, motorcycle, bicycle, ball, and custom inflation modes

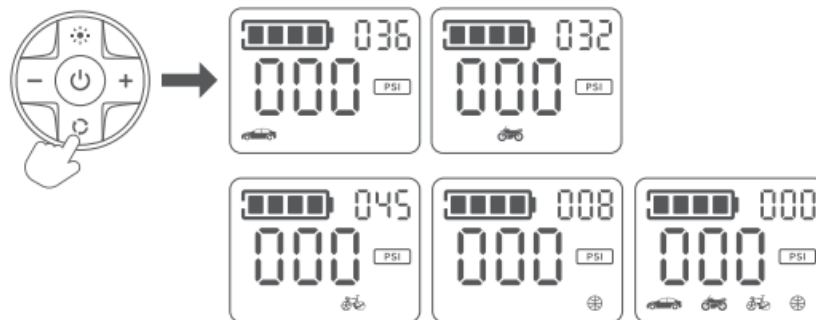


2. Press and hold the Mode Button to switch units between Bar, PSI, and kPa

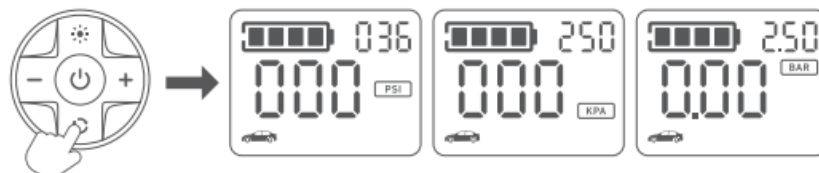

3. Press the “+” and “-” Buttons to adjust the preset value by 0.5PSI (0.01Bar/1kPa) increments.

4. Press and hold the “+” and “-” Buttons to rapidly adjust the preset value.

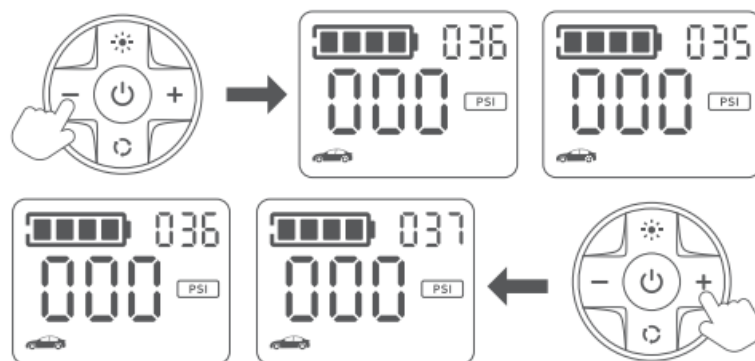

3. Press the Power Button to start inflating. The machine will automatically stop when the inflation is complete.


Tip 1: To avoid overinflation, please confirm the maximum inflation pressure of the objects being inflated.

Overinflating may cause explosions and personal injuries.

Power Bank Function

1. Insert the charging cable into the jump starter's USB output port.
2. Connect the other end of the USB charging cable to the device being charged.
3. Press and hold the Power Button for 2 seconds to turn on the device.

The jump starter will automatically detect the devices' specifications and charge them at the proper voltage.

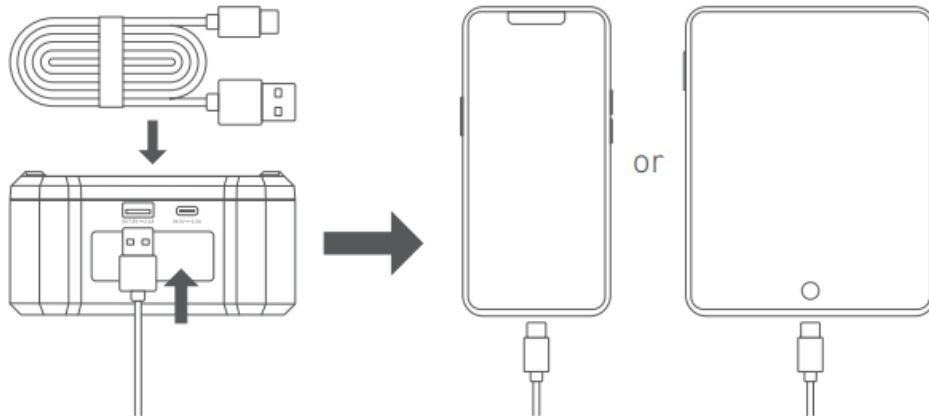

Illumination Function

When the machine is on, press the Light Button to turn on the LED flashlight, press it again to switch between flashing, SOS, and off modes.

How to Turn the Machine On/Off

Press and hold the Power Button for 2 seconds to turn the machine on and off. It also turns off automatically when there is no external load or output over 90 seconds

MAINTENANCE

- To maximize the battery's performance and service life, please charge the jump starter when its battery level is lower than 75%.
- Please fully charge the jump starter if it will not be in use for an extended amount of time. Charge it every three months to extend its service life.

SPECIFICATIONS

Model	S8 Air
Capacity	37Wh
Jumpstart Current	500A (0.8S); 300A (2.6S)
Peak Current	1500A
USB-C Input	5V == 2A
USB-A Output	5V == 2.4A
Inflating Pressure Range	0 ~ 150PSI (0 ~ 10.3Bar)
Air Compressor Accuracy	±1PSI
Operation Temperature	-4 ~ 122°F (-20 ~ 50°C)
Charging Temperature	32 ~ 113°F (0 ~ 45°C)

- This jump starter features four built-in series-connected 3.7V lithium batteries.
- The battery pack capacity is 2500mAh (14.8V), equivalent to 10000mAh (3.7V).

TROUBLESHOOTING/FAQ

Failure to Jumpstart

- Insufficient power level; you may need to charge the jump starter.
- Please charge your device to 75% or higher to successfully jumpstart your car.
- Inspect the battery terminals for any rust or dirt, as it could affect the connection quality. Clean up any residue and try again.
- If the jump starter overheats, it will turn on its overheating protection feature and shut down for a few minutes. Once the unit cools down, try again.
- Check if the battery clamps are connected to the wrong terminals (reversed).
- Poor connection between the clamps and battery; ensure a tight connection.
- The vehicle cannot start because of issues unrelated to battery power levels. Please use the appropriate equipment to check the battery or error code of the vehicle.
- Contact AstroAI for after-sales support

Failure to Power On

- Insufficient power level or the jump starter is still charging.
- Contact AstroAI customer support.

Normal Inflation, but the Pressure Value is Zero

The object's pressure value is too low to detect.

Failure to Charge

- Check if the charging cable is connected correctly.
- Ensure the outlet is powered.
- If the jump starter overheats, it will turn on its overheating protection feature and shut down for a few minutes. Once the unit cools down, try again.
- Contact AstroAI customer support

Slow Inflation

- Insufficient battery level.
- Check if the air hose leaks.
- Check if there is a good seal on the air hose's ends.
- Check if the inflating object is leaking.

ERROR CODE ANALYSIS

E1

- Error: Abnormal inflation- the device has been continuously inflating for 40 seconds, but the air pressure is still under 1.45PSI (10kPa/0.1Bar).
- Solution: Check if the connection is secure or if the inflatable is leaking air. Then press the Power Button to resume inflation

E2

- Error: Overheating battery cell with abnormal discharging.
- Solution: When the cell temperature returns to normal, it will resume normal functionality; keep the device out of direct sunlight

E3

- Error: Battery cell temperature too low; charger inserted but the device is not charging.
- Solution: Resume charging once the cell temperature returns to normal.

E4

- Error: The air compressor temperature is too high; immediately stop using it.
- Solution: When the temperature returns to normal, it will resume its normal functionality

RECYCLING

You may dispose of the jump starter when its service life has ended, please recycle the recyclable parts according to local guidelines.

WARRANTY PERIOD


2-Year Limited Warranty from AstroAI

- Each AstroAI Jump Starter with Air Compressor will be free from defects in material and workmanship.
- This warranty does not cover damage from neglect, misuse, contamination, alteration, accident, or abnormal conditions of operation or handling.
- This warranty covers the original purchaser only and is not transferable

Contact

- Web: www.astroai.com
- E-Mail: support@astroai.com

Documents / Resources

	<p>AstroAI S8 Air Jump Starter with Air Compressor [pdf] User Manual</p> <p>250 PSI Digital Tyre Inflator, S8 Air, S8 Air Jump Starter with Air Compressor, S8, Air Jump Starter with Air Compressor, Jump Starter with Air Compressor, with Air Compressor, Air Compressor, Compressor</p>
--	---

References

- [A AstroAI | For All of Life's Adventures - AstroAI US](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.