



# ATEN CL5708 8 16 Port PS 2-USB VGA Single Rail LCD KVM Switch User Guide

[Home](#) » [Aten](#) » ATEN CL5708 8 16 Port PS 2-USB VGA Single Rail LCD KVM Switch User Guide 



## Contents

- [1 Hardware Overview](#)
- [2 Installation](#)
- [3 Operation](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)
- [5 Related Posts](#)

## Hardware Overview


### Applicable Models

- CL5708N / CL5708M / CL5708FM / CL5708MW
- CL5716N / CL5716M / CL5716FM / CL5716MW

### Front View

- 1 handle
- 2 slide release
- 3 LCD display
- 4 LCD controls
- 5 port LEDs
- 6 keyboard
- 7 touchpad
- 8 station / port switches
- 9 external mouse port

- 10 power LED
- 11 rack mount brackets
- 12 lock LEDs
- 13 reset switch
- 14 firmware upgrade section
- 15 USB port (inapplicable to CL5708MW / CL5716MW)
- 16 LED illumination light

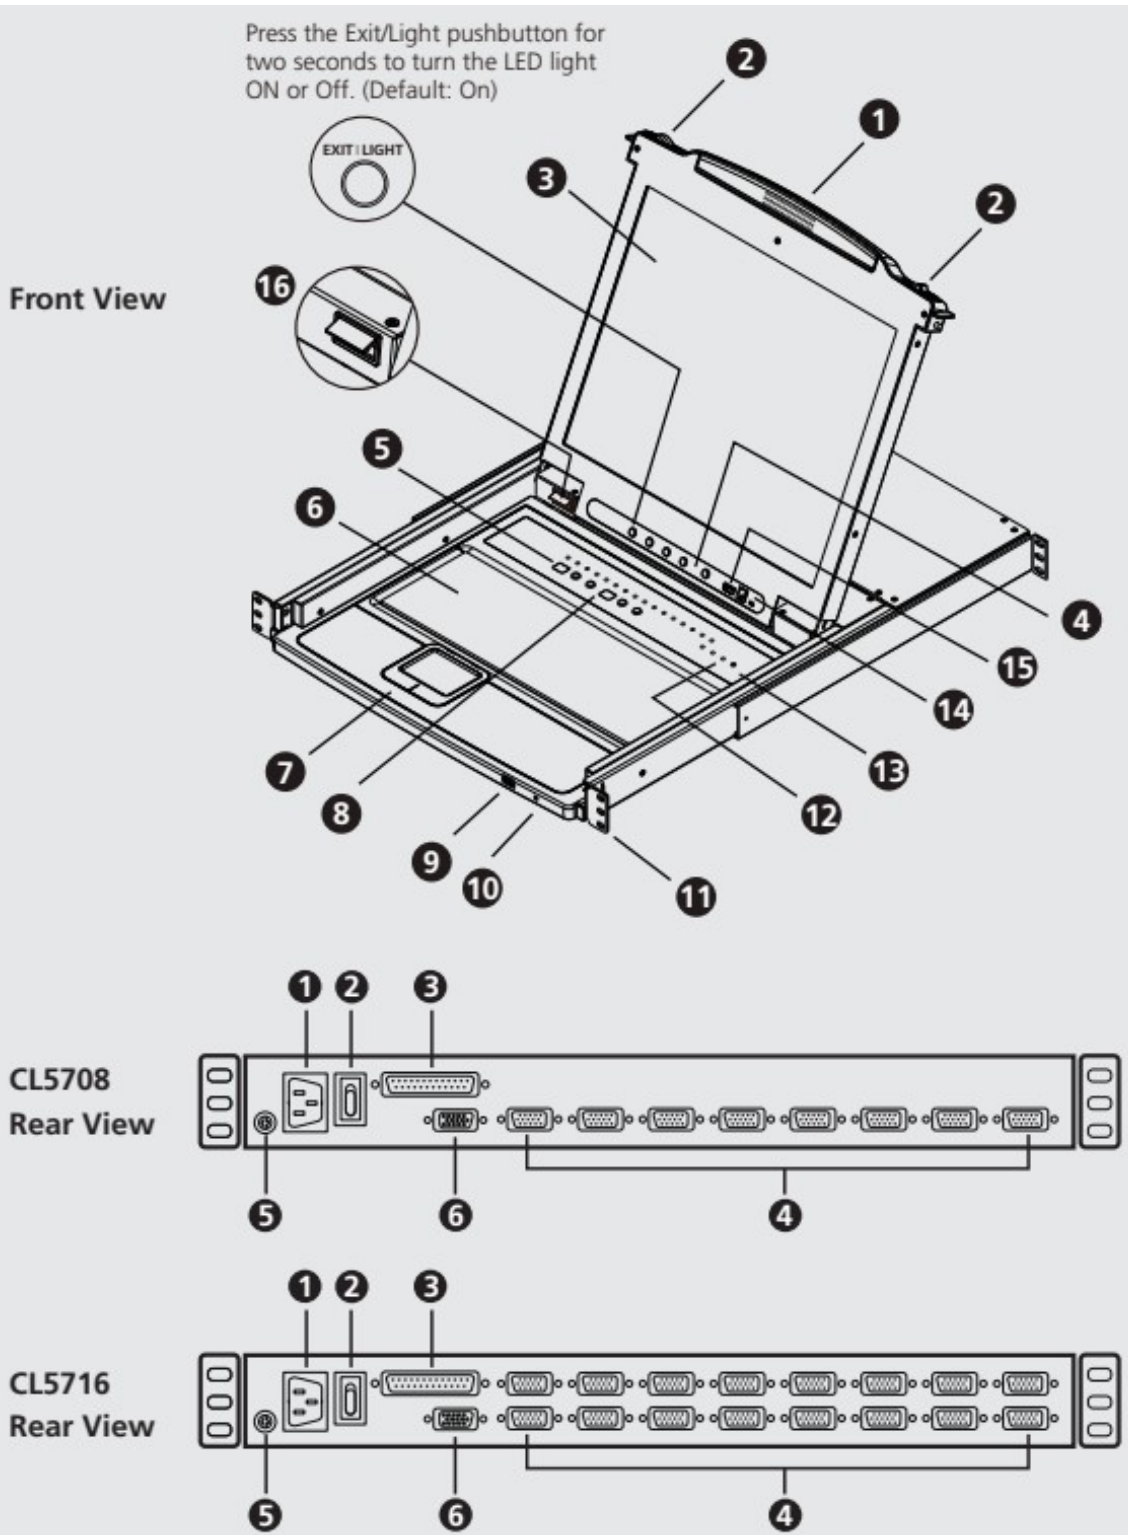


Rear View

1 power socket  
2 power switch  
3 daisy chain port

4 KVM port section  
5 grounding terminal  
6 external console section

## Installation

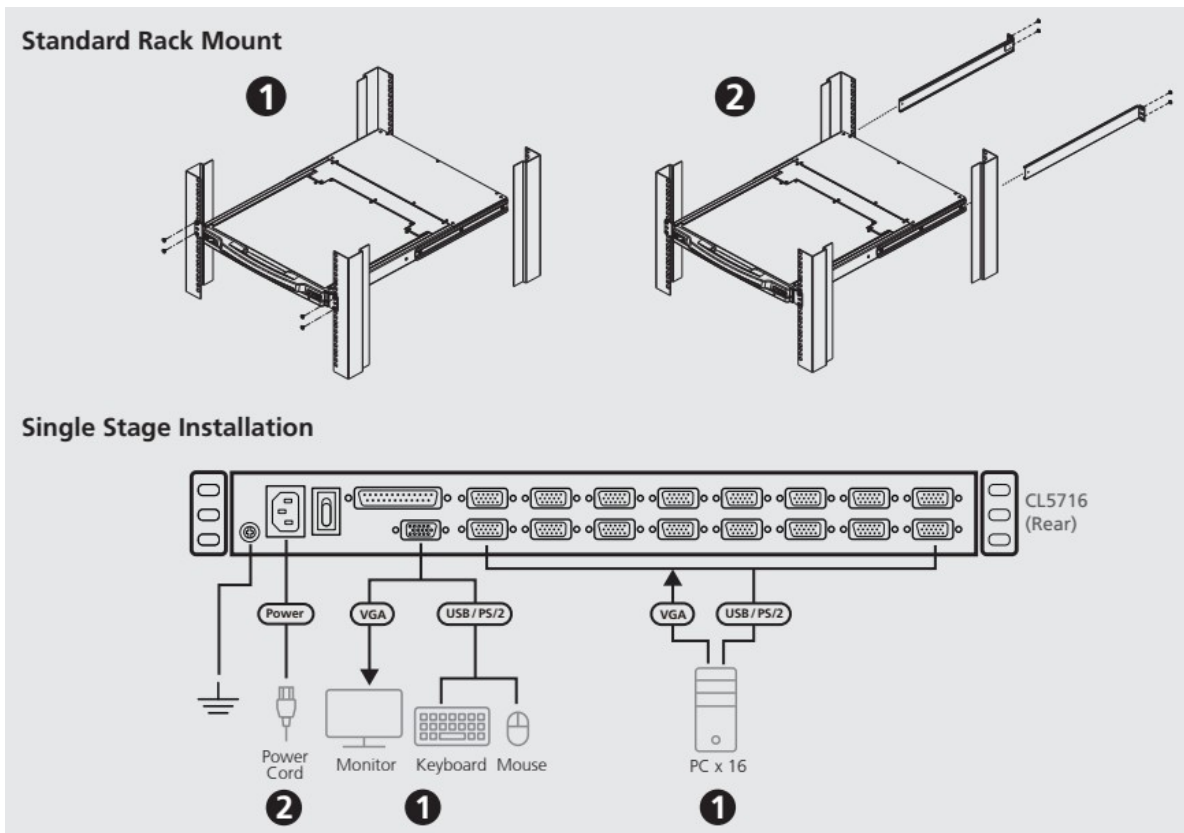


### Standard Rack Mount

1. While one person positions the switch in the rack and holds it in place, the second person loosely screws the front brackets to the rack.
2. While the first person still holds the switch in place, the second person slides the L brackets into the switch's side mounting brackets, from the rear until the bracket flanges contact the rack, then screws the L brackets to the rack.
3. After the L brackets have been secured, tighten the front bracket screws.

### Single Stage Installation

1. Use a KVM cable set to connect any available KVM Port to the computer's keyboard, video and mouse ports.
2. Plug the power cord into the KVM switch power socket and into an AC power source.

## Operation

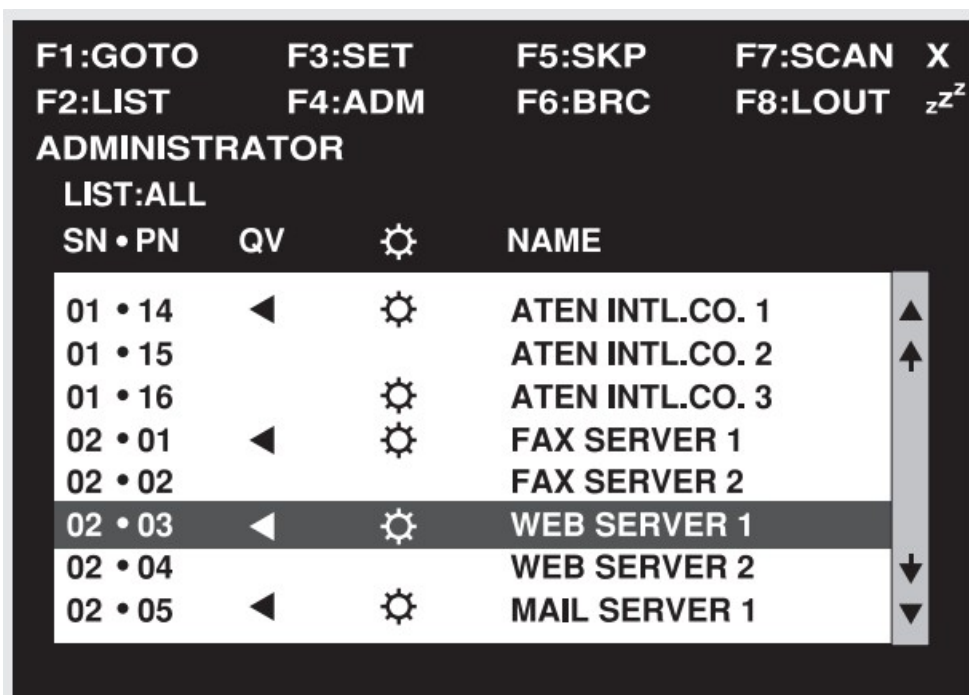

The CL5708 / CL5716 provides three port selection methods to access the computers on the installation: keyboard, an OSD (on-screen display) menu system, and hotkeys.

#### Keyboard Selection Buttons

Use the UP and DOWN Port ID / Station ID selection buttons located on the keyboard module to switch KVM focus to any port on the installation. Continually pressing any button cycles through the list of available ports/stations.

#### OSD

The OSD incorporates a two-level (administrator / user) password system.

Before the OSD main screen displays, a login screen appears requiring a password. If this is the first time that the OSD is used, or if the password function has not been set, simply press [Enter] [Enter]. The OSD main screen displays in administrator mode.

**Note:** Optionally change the OSD hotkey to the [Ctrl] key, in which case you would press [Ctrl] twice. With this method, you must press the same [Ctrl] key.

To bring the KVM focus to a port, double-click it, or move the Highlight Bar to it then press [Enter].

#### Hotkeys

All hotkey operations begin by invoking Hotkey mode. There are two possible keystroke sequences used to invoke Hotkey mode, though only one can be operational at any given time.

- Number Lock and Minus Keys (Default Hotkey)
  1. Hold down the Num Lock key
  2. Press and release the minus key
  3. Release the Num Lock key: [Num Lock] + [-]
- Control and F12 Keys
  1. Hold down the Ctrl key
  2. Press and release the F12 key
  3. Release the Ctrl key: [Ctrl] + [F12]

#### Package Contents

1 CL5708 / CL5716 8/16-Port PS/2-USB  
 VGA Single Rail LCD KVM Switch with Standard Rack Mount Kit  
 2 custom KVM cable sets  
 1 5-in-1 USB / PS/2 console cable  
 1 firmware upgrade cable  
 1 power cord  
 1 user instructions

#### Support and Documentation Notice

All information, documentation, firmware, software utilities, and specifications contained in this package are

subject to change without prior notification by the manufacturer.  
To reduce the environmental impact of our products, ATEN documentation and software can be found online at <http://www.aten.com/download/>  
Technical Support  
[www.aten.com/support](http://www.aten.com/support)  
Scan for more information

<div>ATEN Website</div> <div></div> <div>CL5708</div>	<div></div> <div>CL5716</div>
<a href="https://www.aten.com/global/en/products/modelNo/cl5708/">https://www.aten.com/global/en/products/modelNo/cl5708/</a>	<a href="https://www.aten.com/global/en/products/modelNo/cl5716/">https://www.aten.com/global/en/products/modelNo/cl5716/</a>
<div>User Manual</div> <div></div>	
<a href="http://www.aten.com/ext_libraries/manuals.php?n=cl5708">http://www.aten.com/ext_libraries/manuals.php?n=cl5708</a>	



ATEN INTERNATIONAL CO., LTD.

© Copyright 2023 ATEN® International Co. Ltd.

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd.  
All rights reserved. All other trademarks are the property of their respective owners.

Part No. PAPE-1223-753G

Released: 06/2023



[www.aten.com](http://www.aten.com)

## Documents / Resources



**[ATEN CL5708 8 16 Port PS 2-USB VGA Single Rail LCD KVM Switch](#)** [pdf] User Guide  
CL5708 8 16 Port PS 2-USB VGA Single Rail LCD KVM Switch, CL5708, 8 16 Port PS 2-USB V  
GA Single Rail LCD KVM Switch, Single Rail LCD KVM Switch, LCD KVM Switch, KVM Switch

## References

- [📄 ATEN - Simply Better Connections | ATEN U.S.A.](#)
- [📄 Downloads | ATEN Corporate Headquarters](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.