



ATOLL ELECTRONIQUE DR100 Signature CD Drive Owner's Manual

[Home](#) » [ATOLL ELECTRONIQUE](#) » ATOLL ELECTRONIQUE DR100 Signature CD Drive Owner's Manual 

Contents

- [1 ATOLL ELECTRONIQUE DR100 Signature CD Drive](#)
- [2 INSTRUCTIONS](#)
- [3 CONNECTING](#)
- [4 COMPATIBILITY](#)
- [5 GUARANTEE](#)
- [6 CLEANING](#)
- [7 TECHNICAL DATA](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

ATOLL

ATOLL ELECTRONIQUE DR100 Signature CD Drive



INSTRUCTIONS

CAUTIONS

- Do not make any connections when your device is powered on.

- Put your CD player in a dry and well-ventilated place, far from the source of heat.
- Do not put something on your CD player.
- Do not make any plug in when the CD player is on.
- Avoid any short-cut.
- Respect polarity + & and switch left & right.
- Do not put your CD player too close from a Tuner because of disagreement in HF reception.

ADVISES

- To optimize the performance of your device, you should switch it on at least half an hour before any listening, the time for the electronic stages to reach its ideal working temperature.
- Your device will give you optimal listening quality after this time-lapse.
- Between two uses, it is, therefore, preferable to let the device in the standby position so that it remains at its optimum temperature.
- At night or when you leave your home, it is best to use the main switch to turn off the device.
- To optimize the sound quality of your system, we recommend that you choose good-quality connection cords.
Do not hesitate to ask your specialist dealer for advice.

CONNECTING



1. Coaxial output (to a converter D/A).
2. Optical output (to a converter D/A).
3. AES/EBU output (only for DR200).
4. Power input.
5. Power switch ON/OFF.



- 6. Disc tray.
- 7. Previous track.
- 8. Next track.
- 9. Open/close.
- 10. Pause & Play.
- 11. Stop: stop functions Play & Repeat.
- 12. Stand-by: stand-by cancels all functions.

REMOTE CONTROL

Keys 7 to 12 have the same functions as on the front panel.



- 13. TIME: Displays the running time of each track. With one press, display the remaining time of the track.
- 14. Inactive.
- 15. Rear fast search key.
- 16. Forward fast search key.
- 17. A-B repeat: allows to select a specific reading zone from point A to point B. While playing, press this key to start the beginning of zone A, press a second time to select the end B. Selected zone will be played until you press again the AB key.
- 18. REPEAT Mode (This function is also available while reading the disc) Press on REP to choose the repeat

mode:

- R1: makes a repetition of the same track. Confirm by pressing the ENTER key. The display shows R1 between the number and the time of the track.
- R: makes a repetition of the complete disc. Confirm by pressing the ENTER key. The display shows R between the number and the time of the track.

STOP key (and keys 7) previous track & 8) next track on R1 mode) cancels also all REPEAT modes.

19. PROGRAM (PROG.):

1. Press on PROG. The display shows on the Left the number of selected tracks (Nb 0) and on the Right the choice of tracks (Tr 1).
2. Choose the first track of the program with the selection keys 7 & 8. Confirm by pressing on PROG. Select all tracks needed for the program, using the same procedure.
3. The display shows the number of tracks (on the Left), P symbol. The total time of the program is seen by a press on TIME. Press PLAY to start playing the program.
4. Press 2 times to cancel the program.

20. SHUFFLE: Press on SHUF. The display shows S between the number and the time of the track. The disc goes on the play. All tracks will be played once in random mode. Press STOP to cancel the random play. SHUFFLE and PROG menus are not available while reading the disc.

Combination: it is possible to combine a program with the REPEAT function (display shows RP) and SHUFFLE functions (display shows RS).

21. DISP.: allows to switch off the display.

COMPATIBILITY

This player can play CD and CD-R discs. Type of formats played: MP3-WMA-AAC

E.C. MARKING

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE and national transpositions.

GUARANTEE

The guarantee is two years long from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliances which have been use correctly.

CLEANING

Before any cleaning, switch off your CD player. Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing an abrasive agent. Never try to clean up inside the appliance.

TECHNICAL DATA

	DR100 Sig	DR200 Sig
Power supply:	30 VA	30 VA
Total of capacitors:	14 141 μ F	22 100 μ F
Digital output level:	1V	1V
Outputs:	Coaxial-optical	Coaxial-optical-AES/EBU
Consumption:	Stand-by: 3,8 W Playing: 6 W	Stand-by: 3,8 W Playing: 6 W
Dimensions (mm):	440×280×90	440×280×90
Weight:	6,0 kg	7,0 kg

Documents / Resources



[ATOLL ELECTRONIQUE DR100 Signature CD Drive](#) [pdf] Owner's Manual
DR100, DR200, Signature CD Drive