



ATOLL ELECTRONIQUE DR400SE CD Player Owner's Manual

[Home](#) » [ATOLL ELECTRONIQUE](#) » ATOLL ELECTRONIQUE DR400SE CD Player Owner's Manual 



CD PLAYER DR400SE OWNER'S MANUAL

Contents

- [1 DR400SE CD Player](#)
- [2 CONNECTINGS](#)
- [3 REMOTE CONTROL](#)
- [4 WARRANTY CONDITIONS](#)
- [5 TECHNICAL DATA](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

DR400SE CD Player

You have just bought a Tuner with exceptional audiophile performance. We really thank you for your confidence in our products. To get the best part of your Tuner, please read carefully this manual.



YOU WILL FIND ENCLOSED

- A CD player.
- A remote control with batteries.

- A power lead.
- This manual with the certificate of guarantee.



ATOLL ELECTRONIQUE® is a French Company that designs, manufactures, and commercializes all its products.



CAUTIONS

- Do not make any plug in when the CD player is on.
- Put your CD player in a dry and well ventilated place, far from source of heat.
- Do not put something on your CD player.
- Avoid any short-cut.
- In case of problems, do not attempt to repair, disassemble or reconstruct the unit as this could cause a serious electrical shock.
- Do not put your CD player too close from a Tuner because of disagreement in HF reception.

CD CLAMPER

- This player is equipped with a High performance CD drive with a CD uploader system. Always put the CD magnet clumper on the disc before closing the hatch.



ADVISES

- To optimize the performance of your device, you should switch it on at least half an hour before any listening, the time for the audio stages to reach its ideal working temperature.
- Your device will give you optimal listening quality after this time-lapse.
- Between two uses, it is, therefore, preferable to let the device in the standby position so that it remains at its optimum temperature.
- At night or when you leave your home, it is best to use the main switch to turn off the device.
- To optimize the sound quality of your system, we recommend that you choose good-quality connection cords. Do not hesitate to ask your specialist dealer for advice.

CONNECTINGS



1. Switch and general plug-in (with protection fuse).
2. AES/EBU output.
3. Digital output (optical).
4. Digital output (coaxial).

DETAIL OF FONCTIONS



- 9) Top CD loader: never forget to put the clasper on the CD before closing.
- 10) Previous track.
- 11) Next track.
- 12) ON/OFF.
- 13) Display.
- 14) Pause: on stand-by mode, allows to go on converter/DAC input.
- 15) Stop: stop reading and/or cancels any Program, Shuffle or A-B repeat.
- 16) Play.

REMOTE CONTROL


Keys 10 to 16 have the same functions as on the front panel.

17) Select CD or converter DAC functions.

In the DAC function, the digital inputs (Coaxial, Optical, or USB-B) are selected using the left and right keys. The DAC function can be accessed directly in standby mode.

18) TIME: time mode selector. Displays by successive keying:

- 1) Time of each track (mention TIME appears).
- 2) Total passed time of the disc (mentions TOTAL & TIME appears on the display).

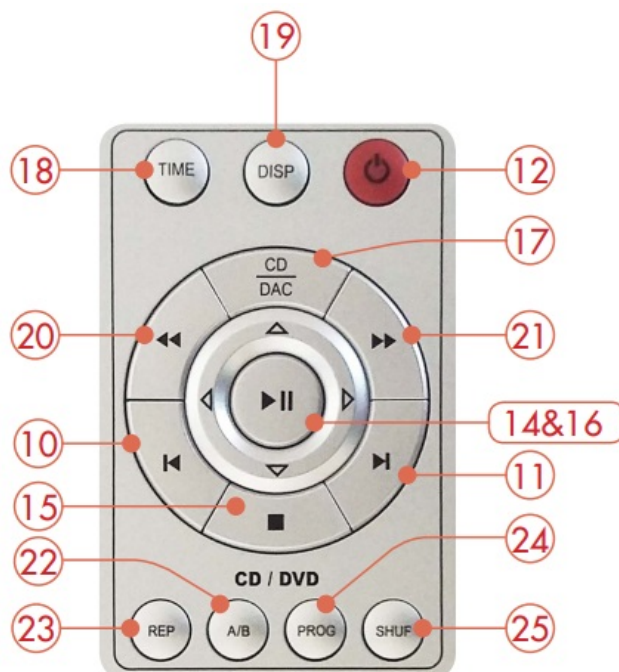

19) DISP: This allows you to decrease the light intensity of the display or turn it off.

20) Search fast backward.

21) Search fast forwards.

22) A-B repeat key: when the disc is playing, one keying specified the beginning (A) and another keying specified the end (B). The selected A-B zone will be repeated till another keying.

23) Disc repeat: allows you to repeat the disc by successive keying (Repeats the CD -R is displayed) or the track being played (Repeat One Track – R1 is displayed), and Not Repeat.

24) Allows programming of sequences: press PROG. Select the 1st track then on PROG: each time you add tracks, the total time of the sequence is displayed on the right and the number of selected tracks on the left. Press a track then PROG for each track to add. Press PLAY to play the program. Press STOP twice to erase the program.

25) SHUF: a random play of the tracks on the disc is possible. SHUFFLE is displayed for 2 seconds. Each track is only played once.

E.C. MARKING

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE and national transpositions.

WARRANTY CONDITIONS

The guarantee is two years long from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliance which have been use correctly.

CLEANING

Before any cleaning, switch off your amplifier. Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing abrasive agent. Never try to clean up inside the appliance.



TECHNICAL DATA

Power supply:	30 VA
Total of capacitors:	16 320 μ F
Output Impedance:	AES : 110 Ω
Dimensions (mm):	430×320×90mm
Weight:	7 Kg



WARRANTY FORM ~ DR400SE

To present to your dealer with the invoice when returning back the appliance:

ATOLL ELECTRONIQUE®
Bd des Merisiers
50370 BRECEY
FRANCE


Date of purchase:

Place of purchase:

Buyer signature:

Dealer Stamp

Documents / Resources

	ATOLL ELECTRONIQUE DR400SE CD Player [pdf] Owner's Manual DR400SE CD Player, CD Player, DR400SE Player, Player, DR400SE
---	--